



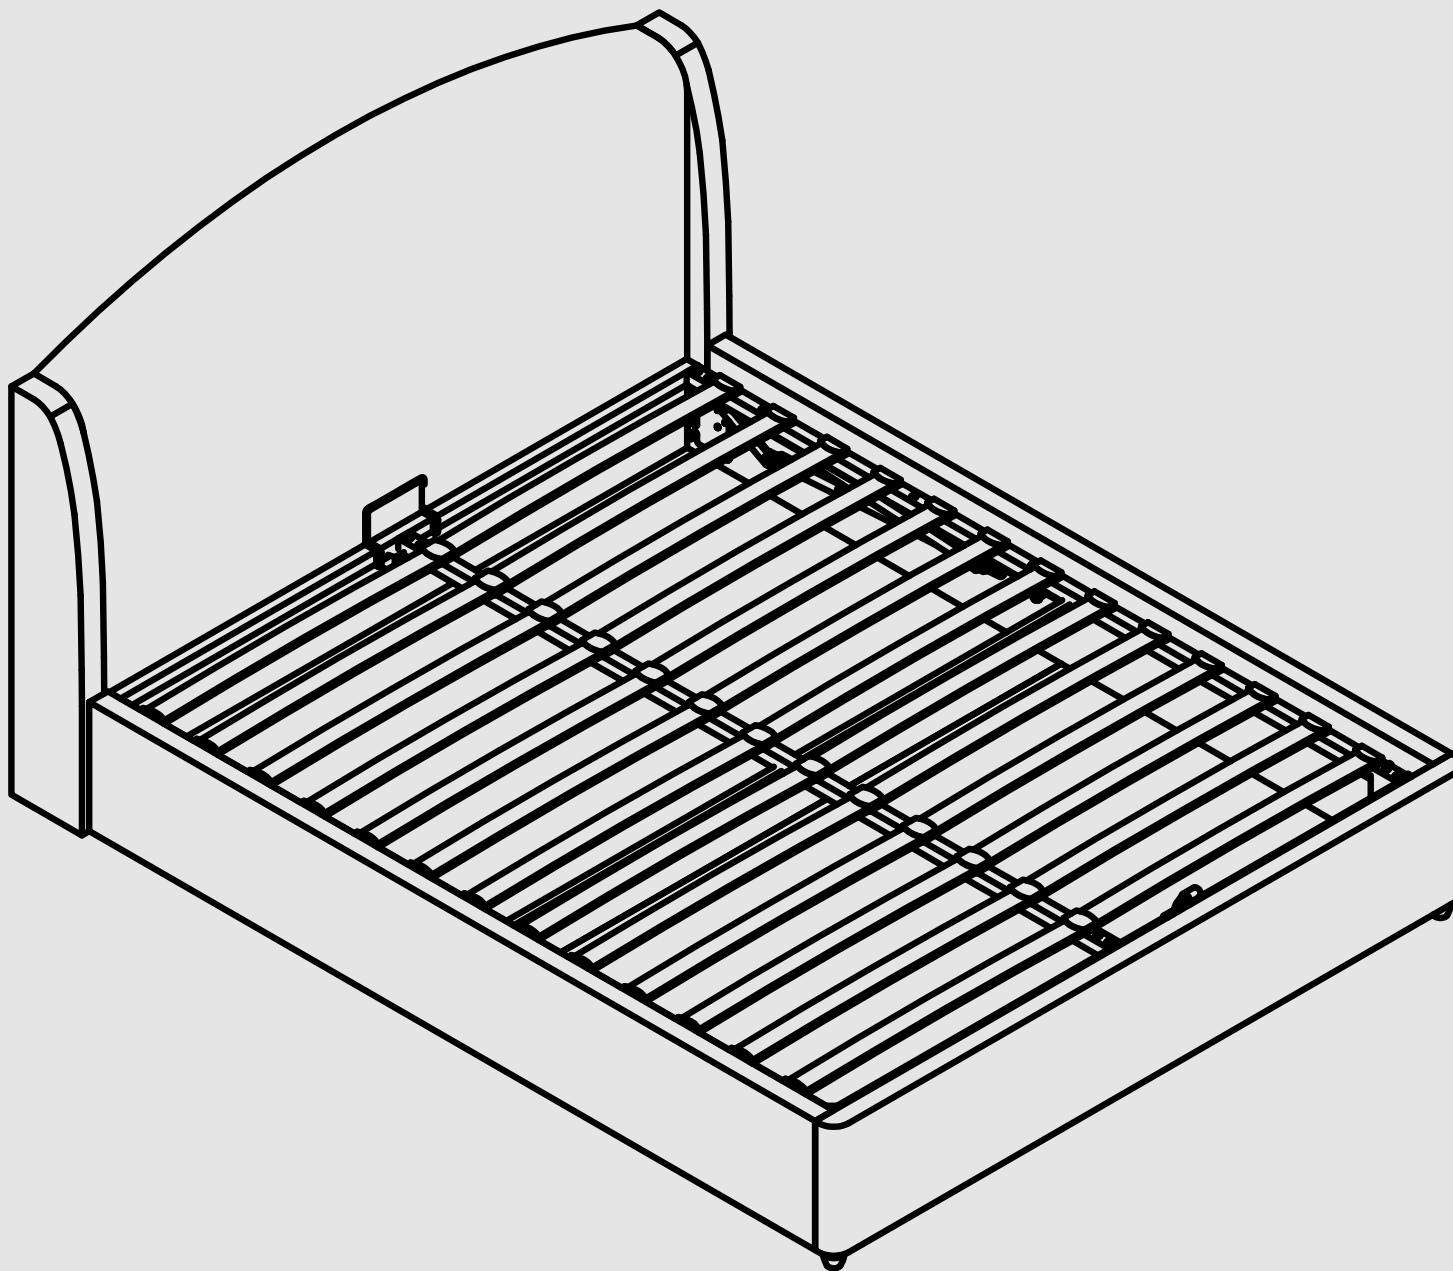

1

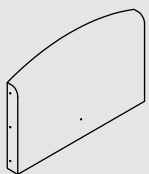


1 pc

7




13 pcs

13



2 pcs

19

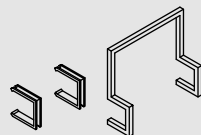

1 pc

A




M8*25 - 48 pcs

G



8*50 mm - 2 pcs

2




1 pc

8




26 pcs

14




2 pcs

20

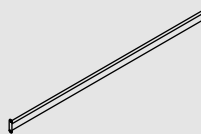

1 pc

B




1 pc

H



8*40 mm - 6 pcs

3




1 pc

9



4 pcs

15

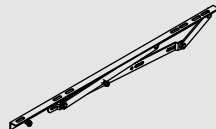

1 pc

21



2 pcs

C




M8 - 12 pcs

I



6*20 mm - 4 pcs

4

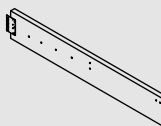

1 pc

10



2 pcs

16



1 pc

22




2 pcs

D




12 pcs

J




5 pcs

5

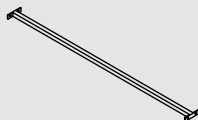


1 pc

11




2 pcs

17

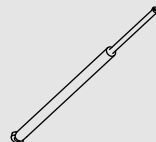

2 pcs

23



1 pc

E




66 pcs

K




8*60 mm - 6 pcs

6

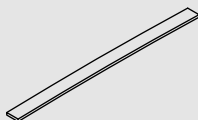

26 pcs

12

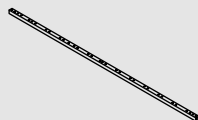

1 pc

18




1 pc

24



1 pc

F




1 pc

L




4*40 mm - 4 pcs


STEP 1

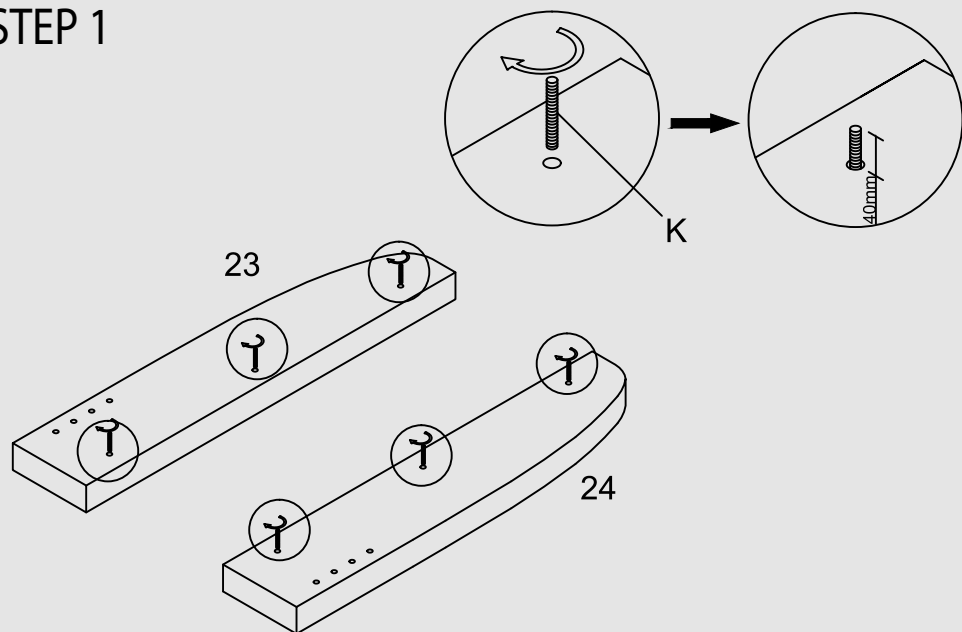


STEP 2

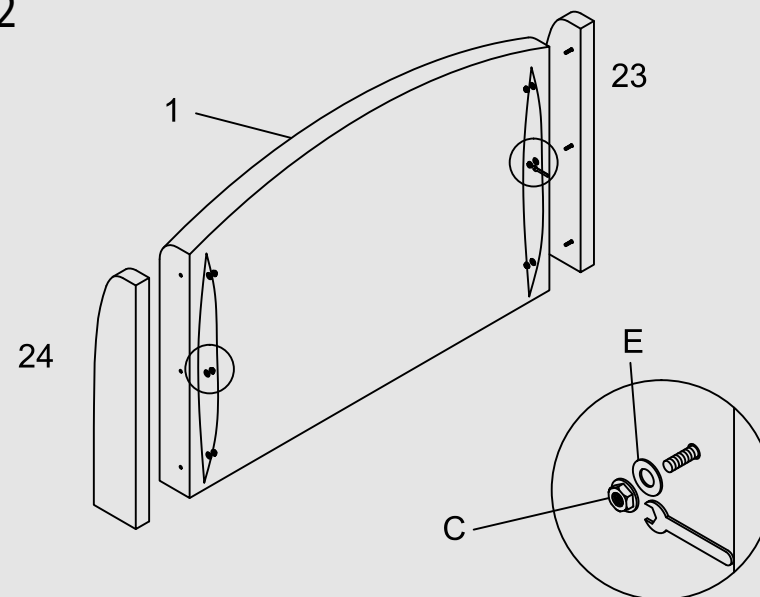


STEP 3

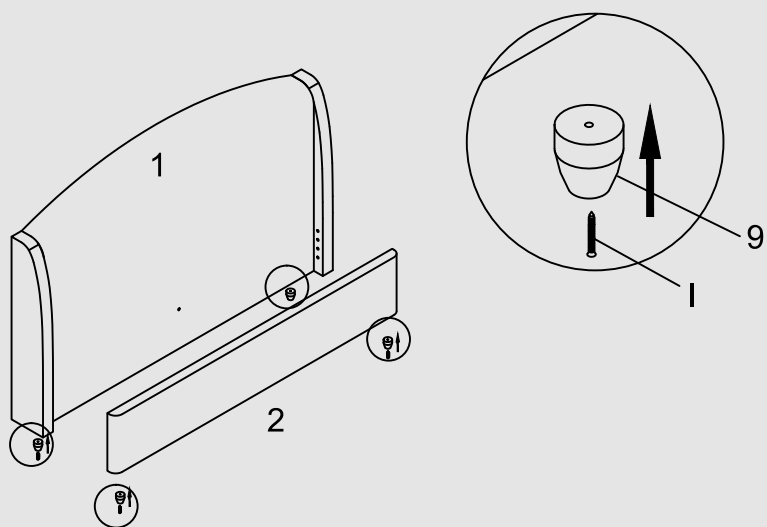


STEP 4

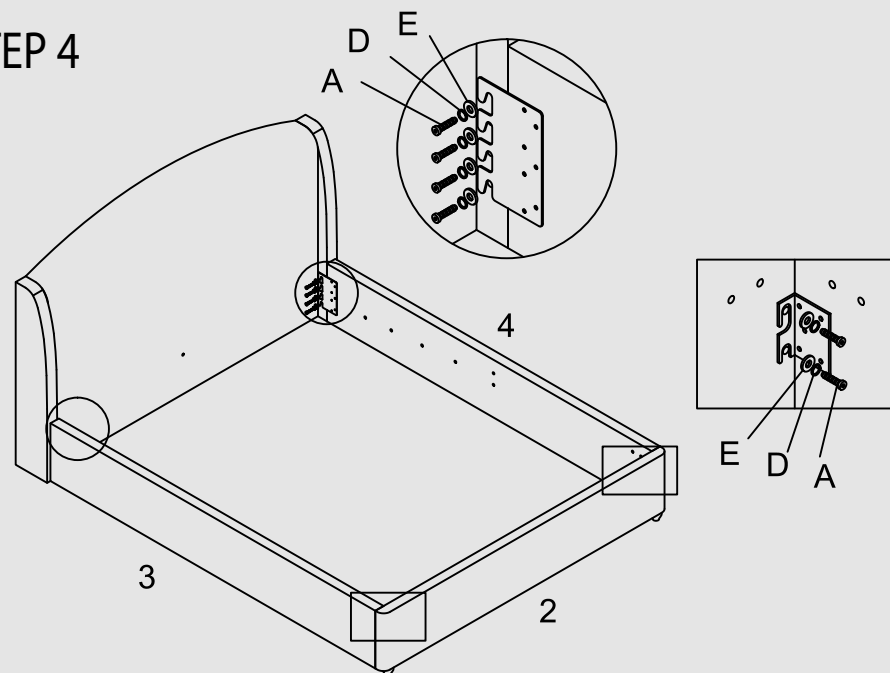


STEP 5

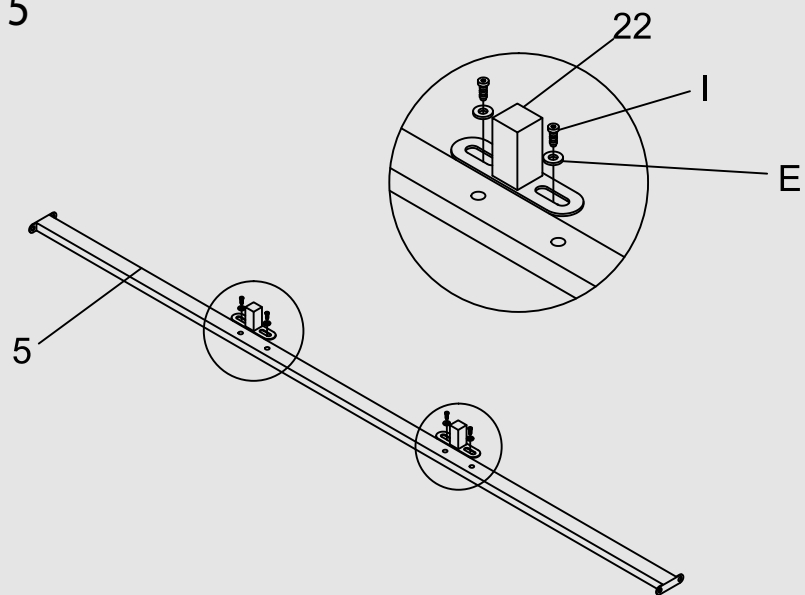


STEP 6

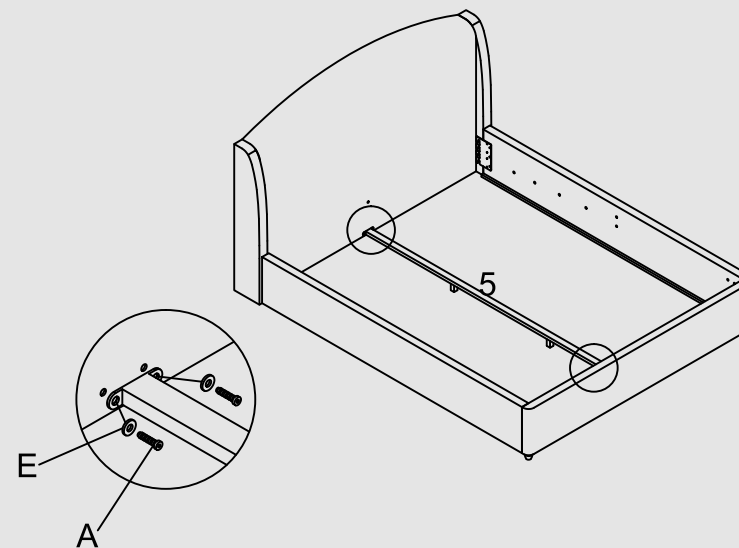


STEP 7

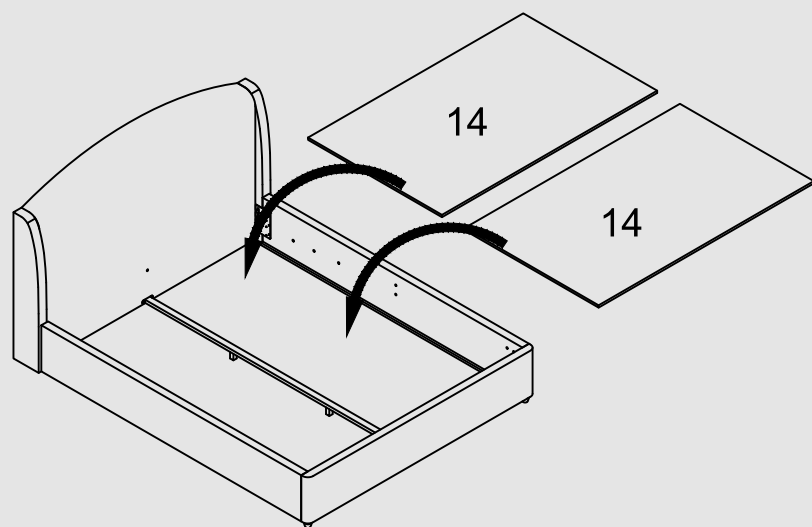


STEP 8

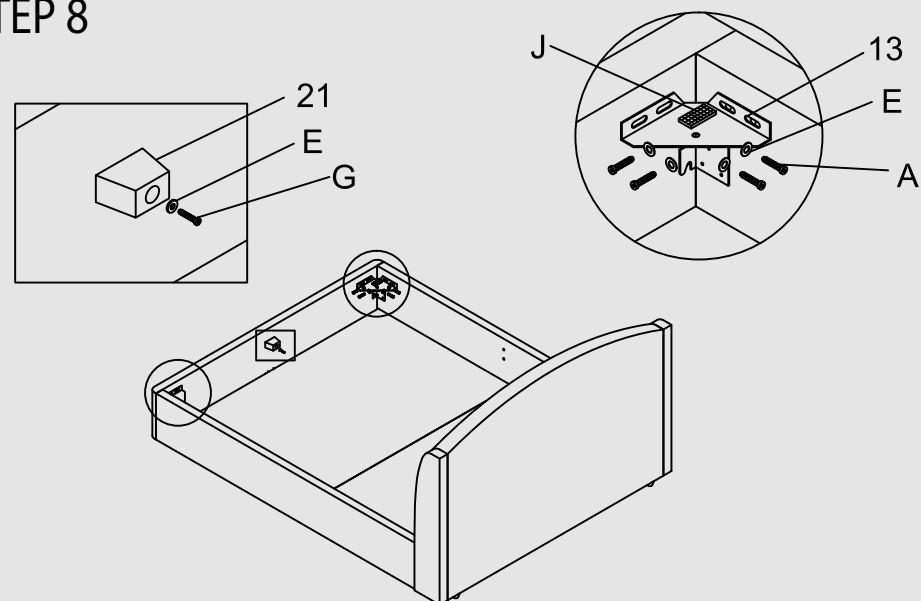


STEP 9

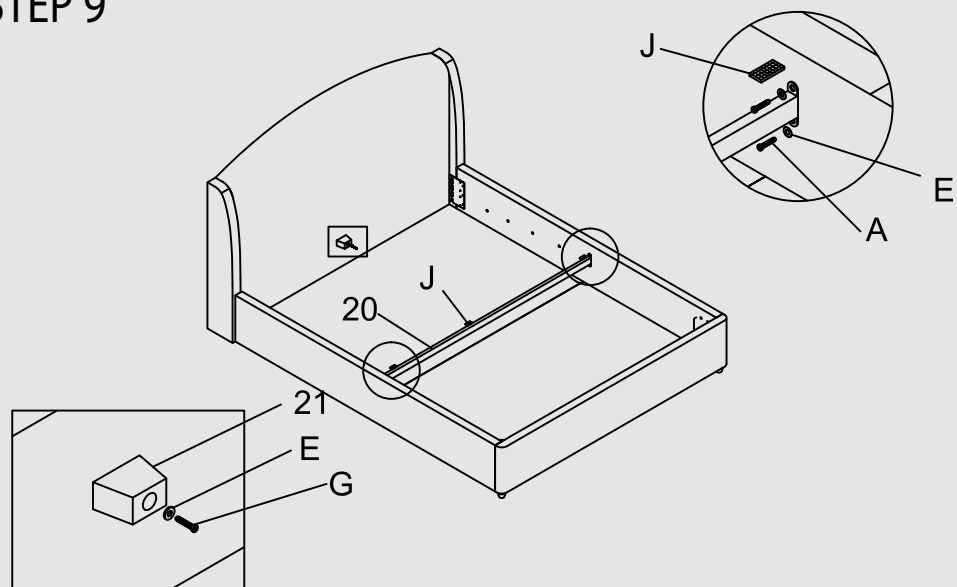

STEP 10

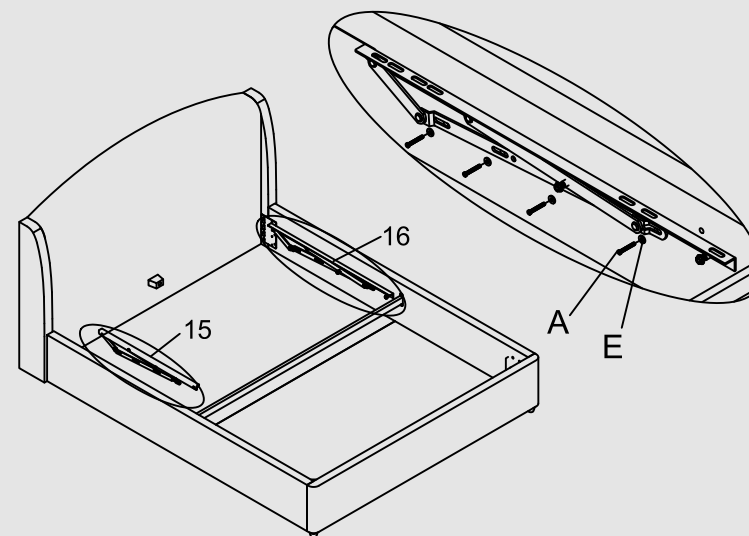

STEP 11

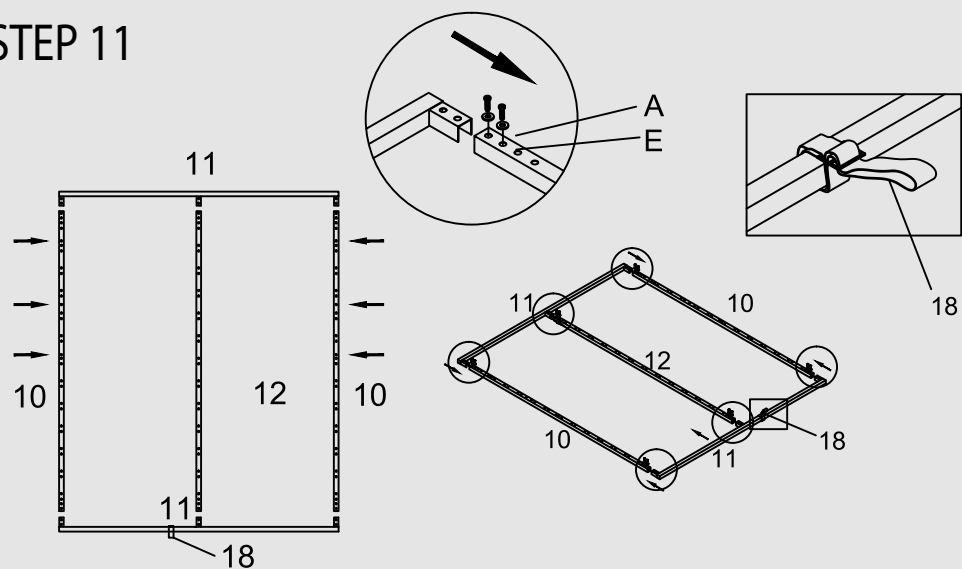

Pay attention to keep the order of parts 10 consistent, and keep the three holes in the same horizontal line

STEP 12

