


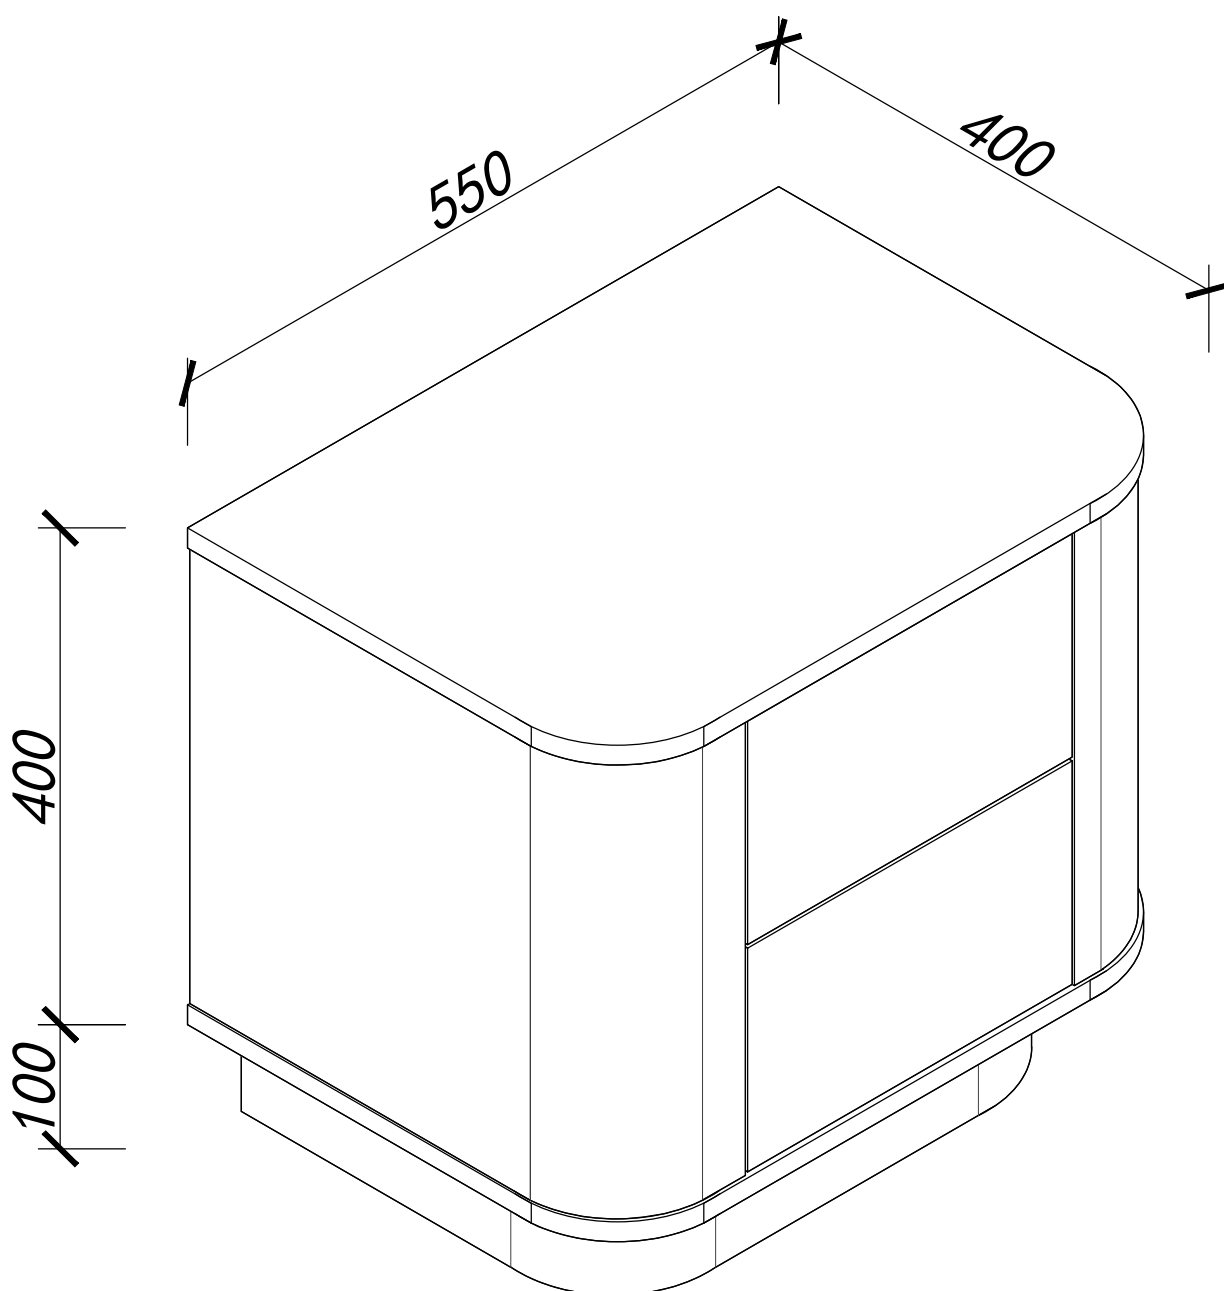


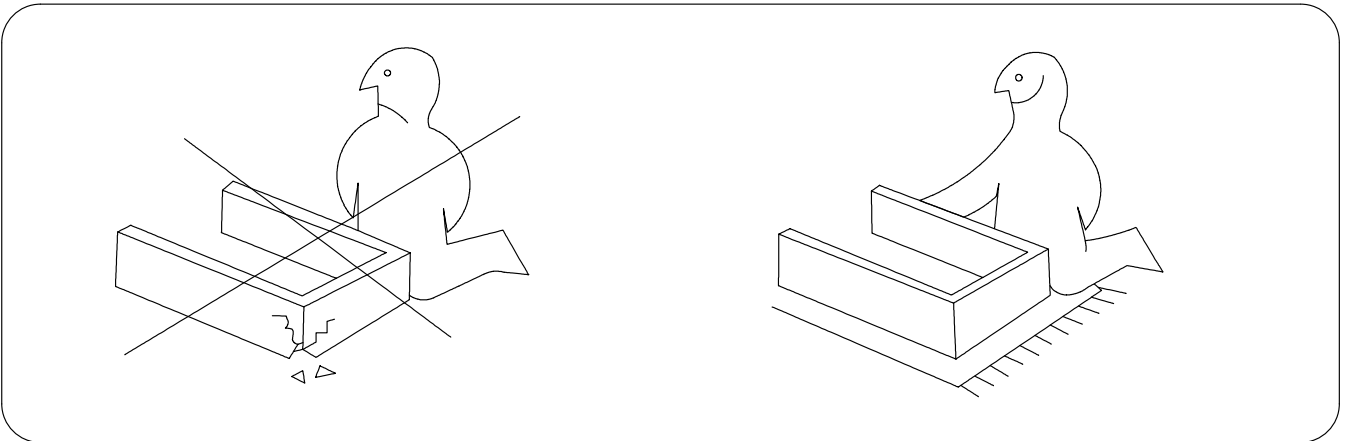


Assembly Instruction

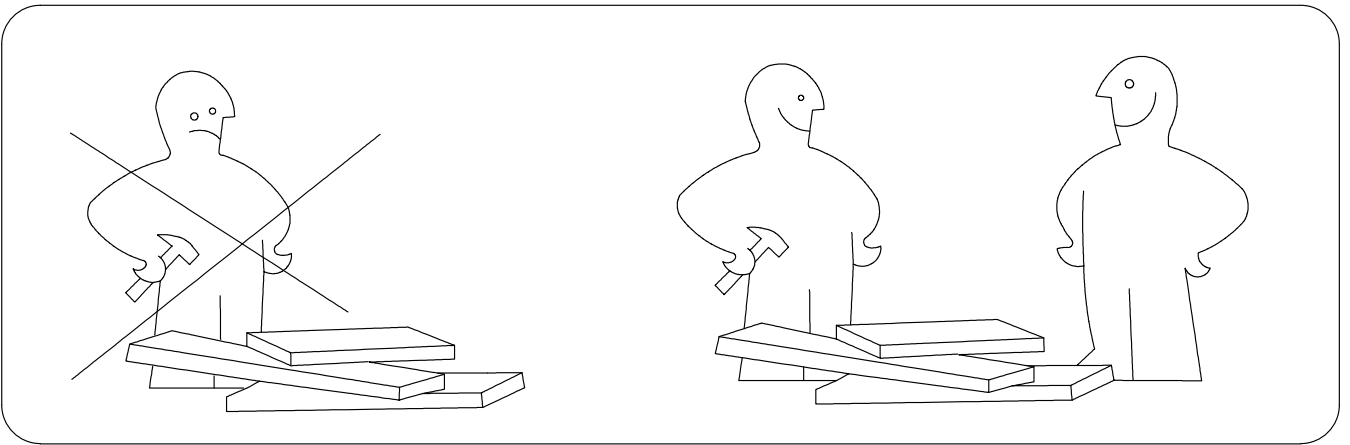

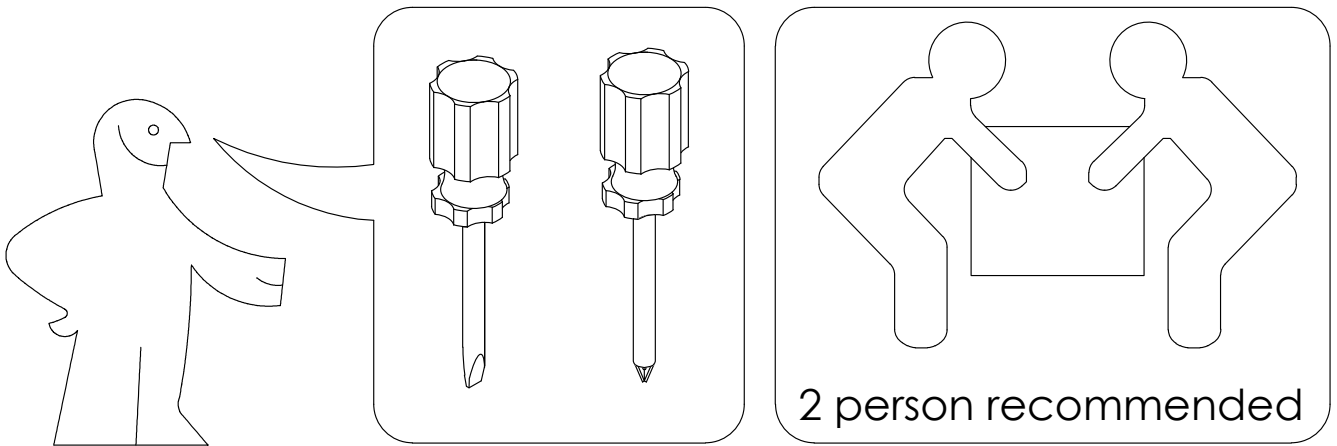


Panel No	Panel Sizes	Quantity
1	550*400*16	1
2	550*400*111	1
3	396*120*368	1
4	396*120*368	1
5	309*80*16	1
6	378*319*5	1

Panel No	Panel Sizes	Quantity
7	303*180*16	2
8	265*120*12	2
9	350*120*12	2
10	350*120*12	2
11	275*348*5	2

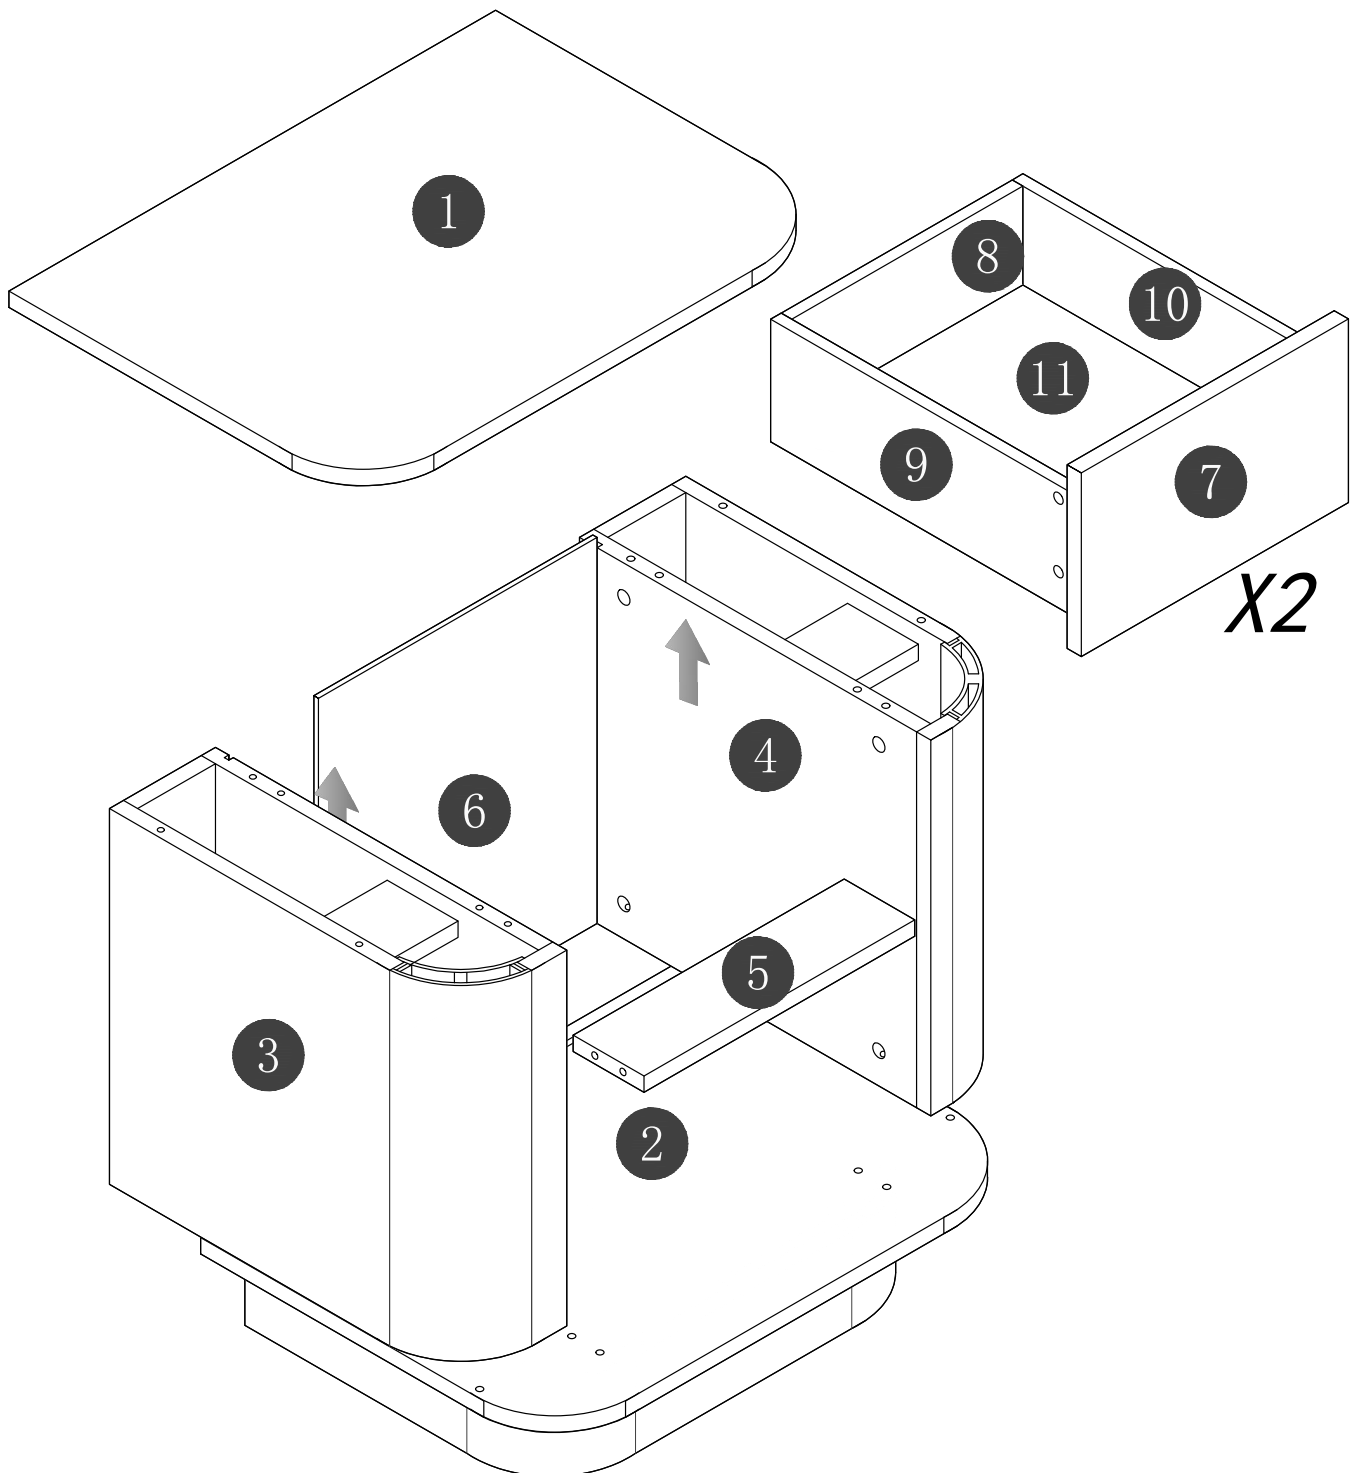


Fittings




M6*40

A=10



$\Phi 8*30$

B=18

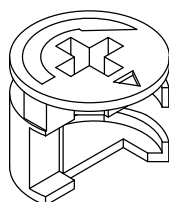


$\Phi 15*12$

C=10




$\Phi 21$


D=26

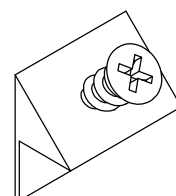


E=4

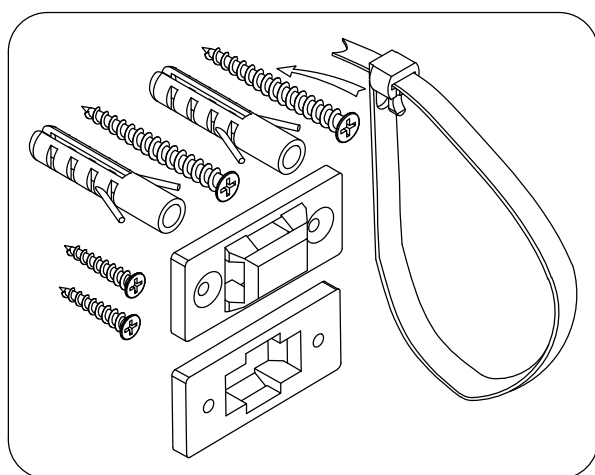

F=1

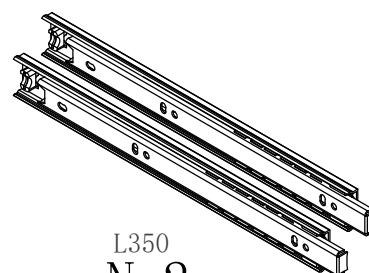

L350
N=2

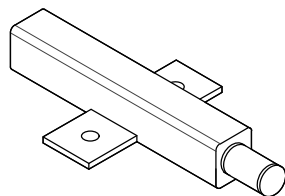

K=2



M6*34

O=16



$\Phi 12*10.5$


P=16




M3.5*12


V1=20

STEP 1

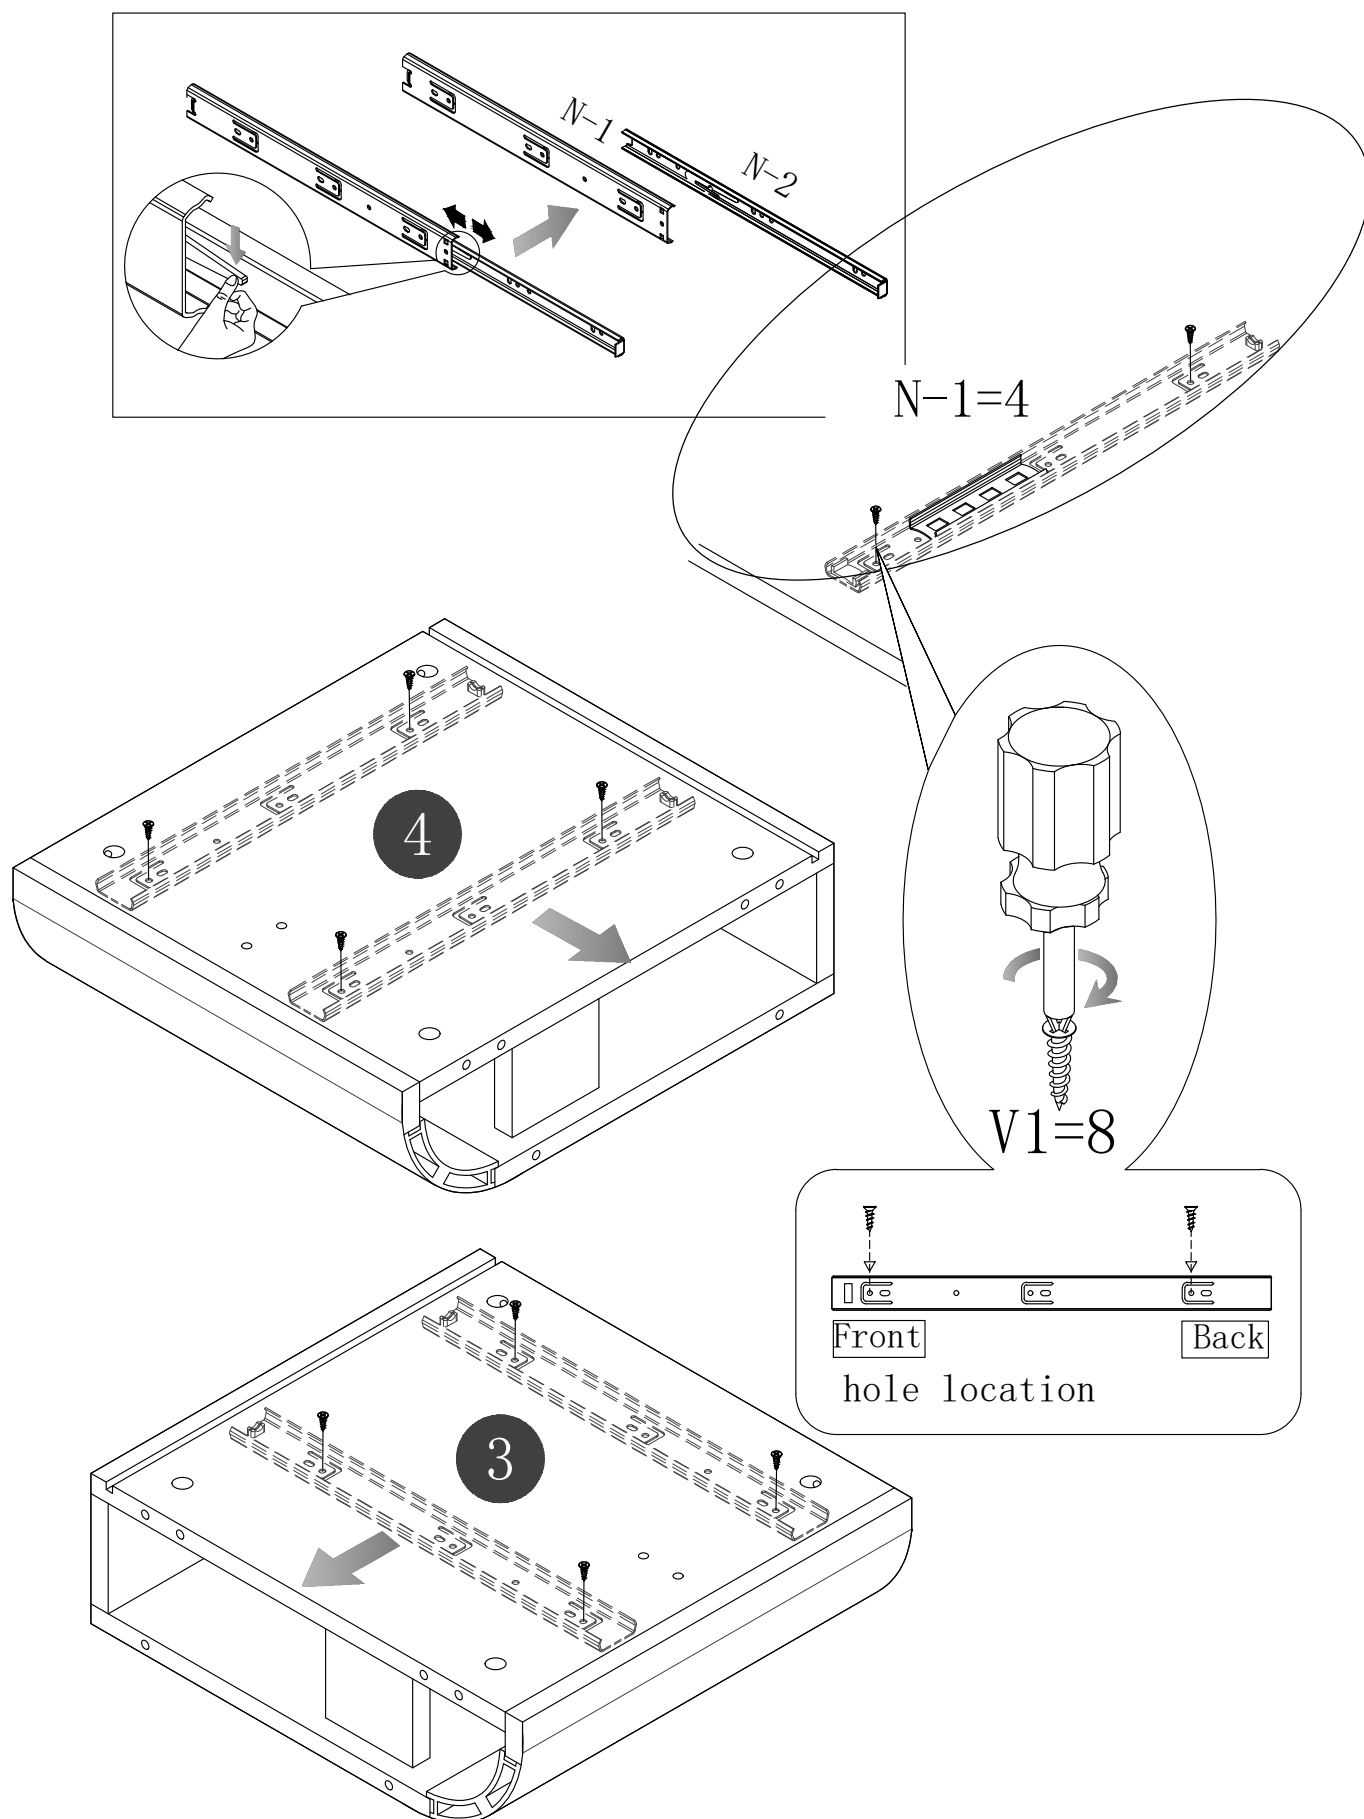


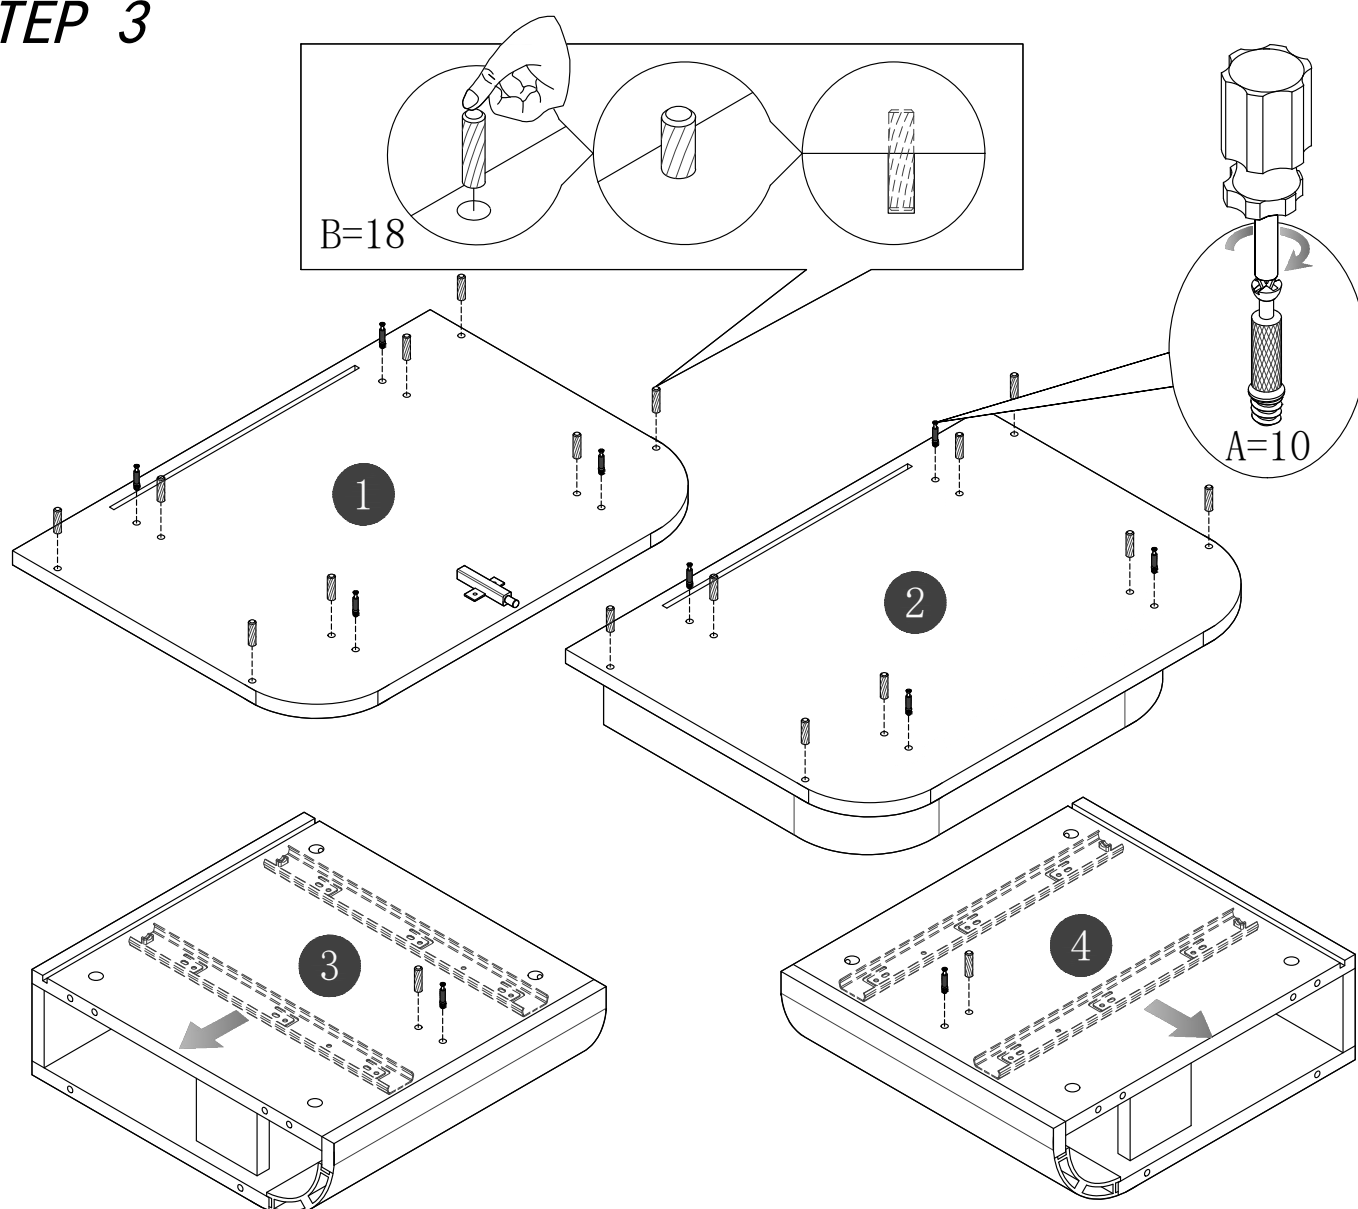


STEP 4

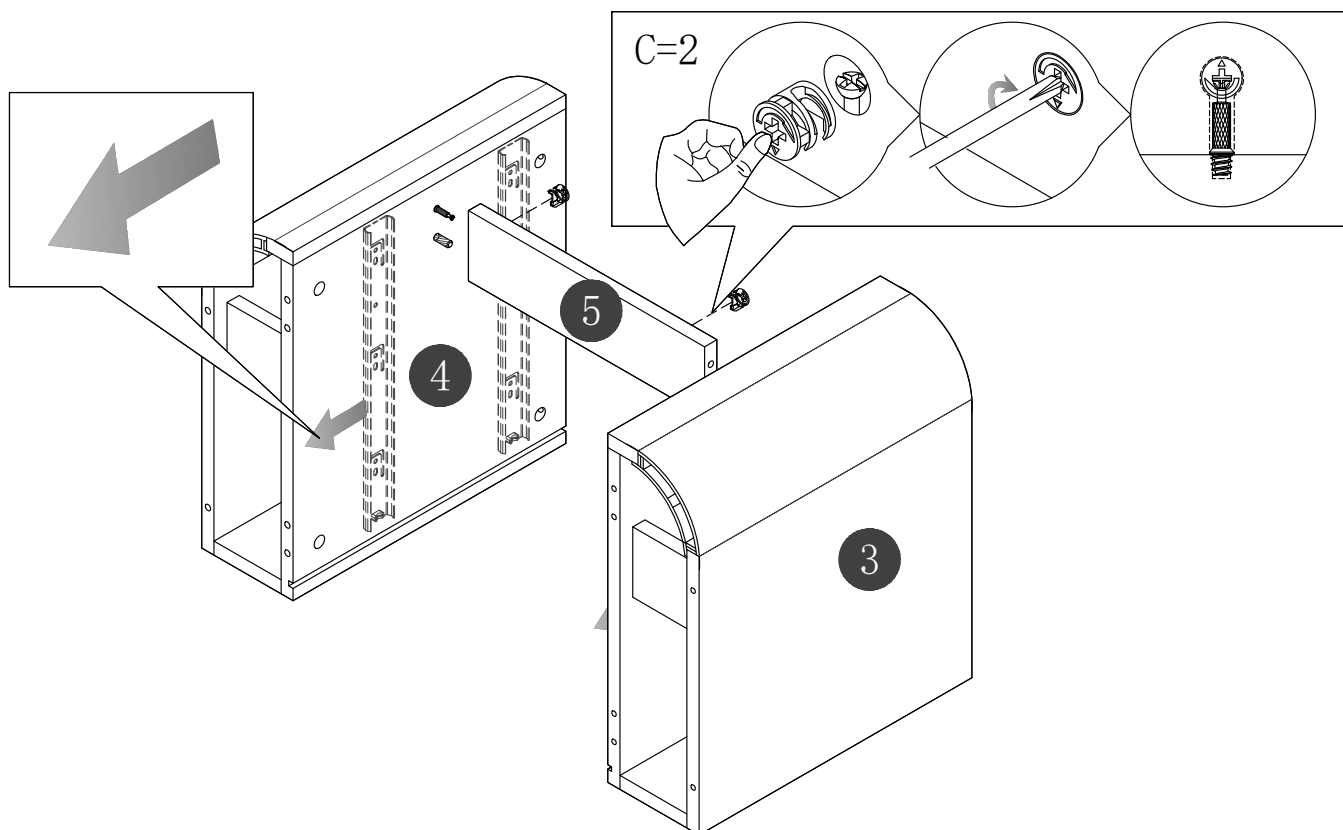


STEP 5

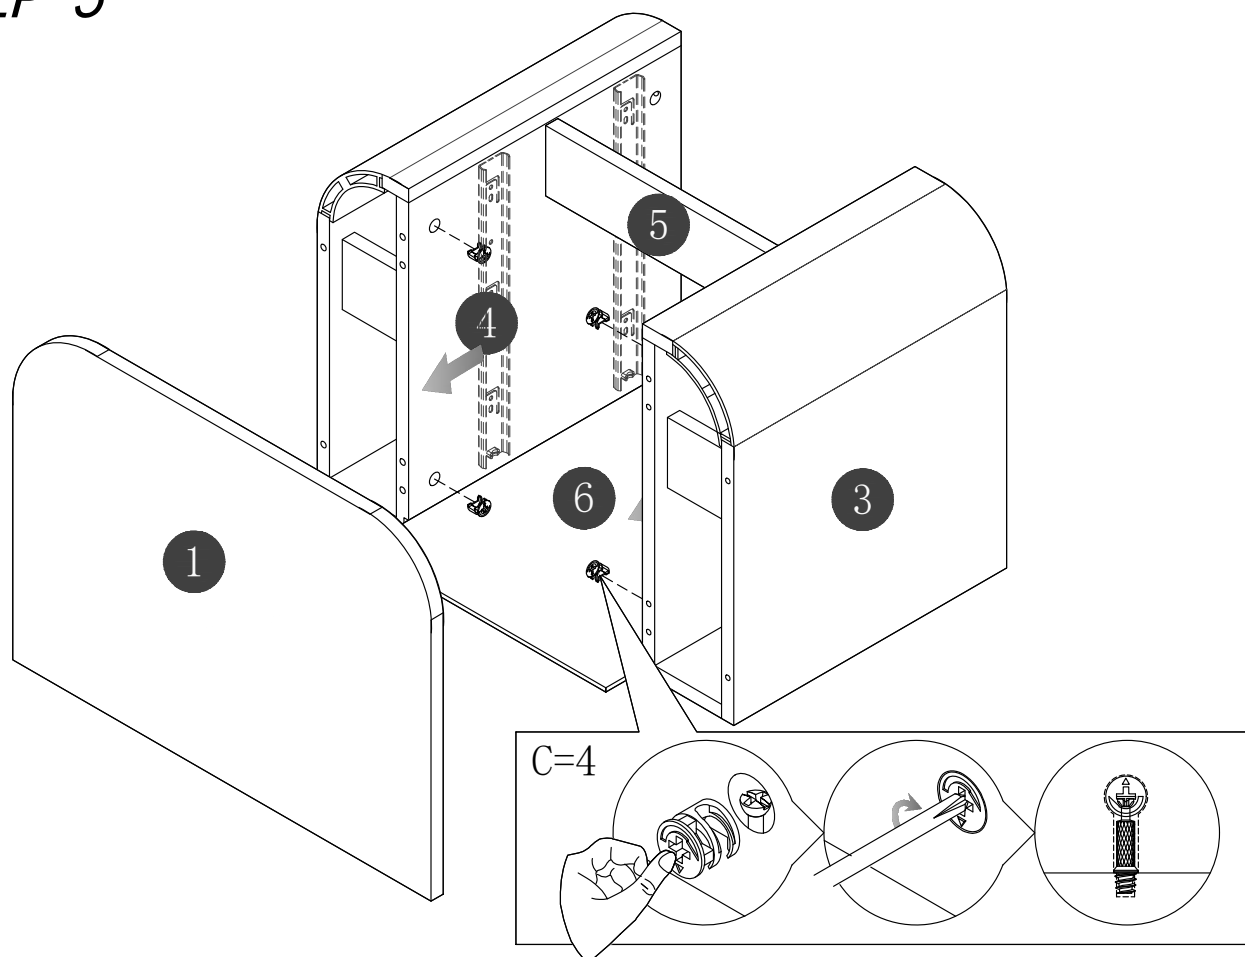

STEP 6

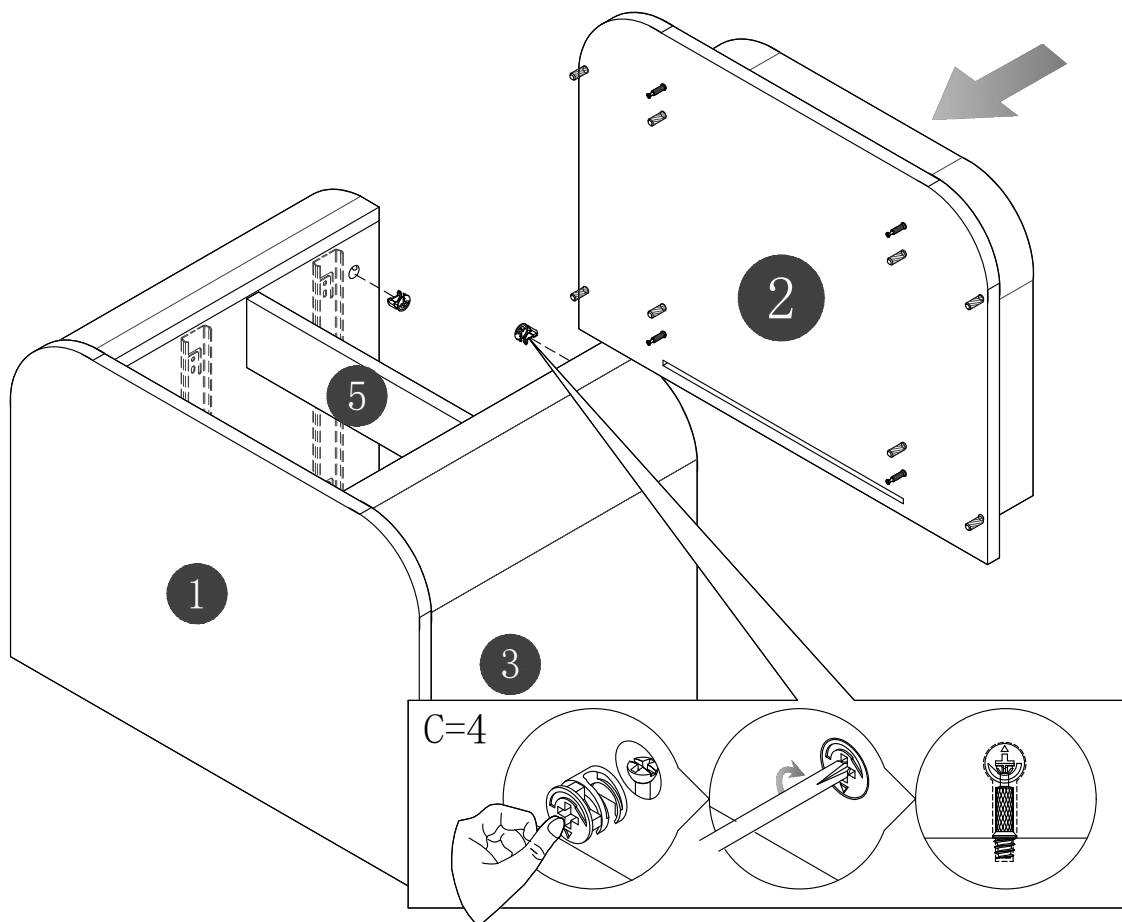


STEP 7

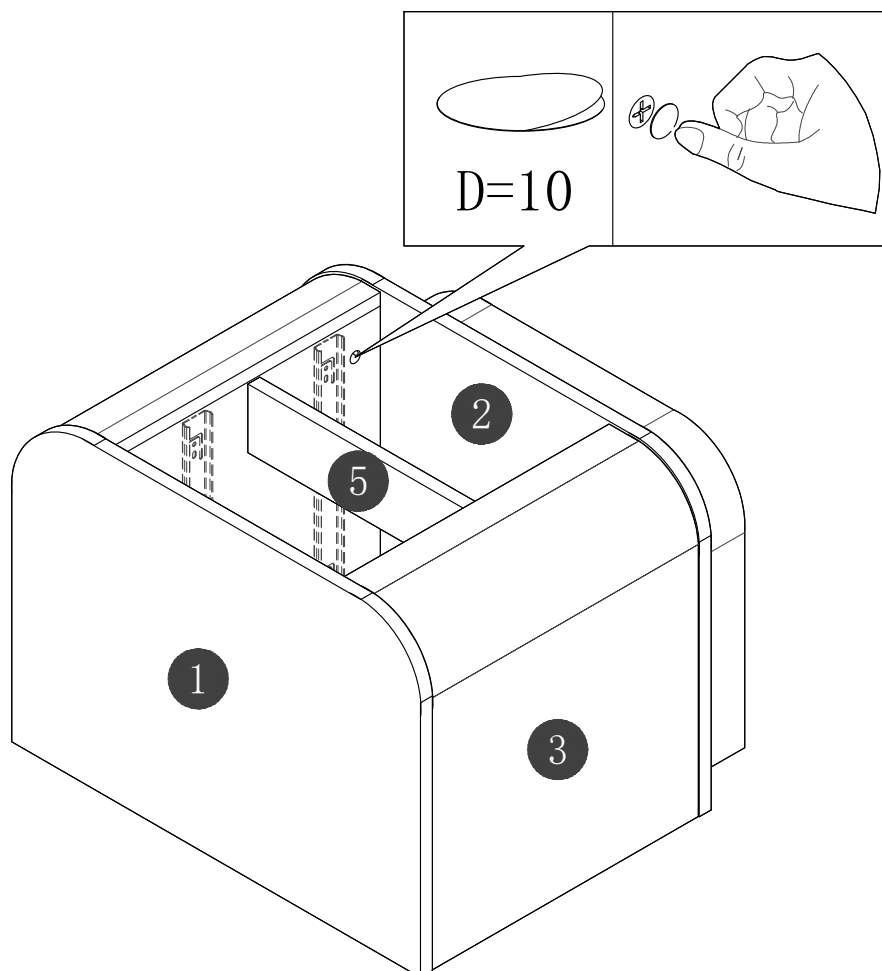


STEP 8


8-1

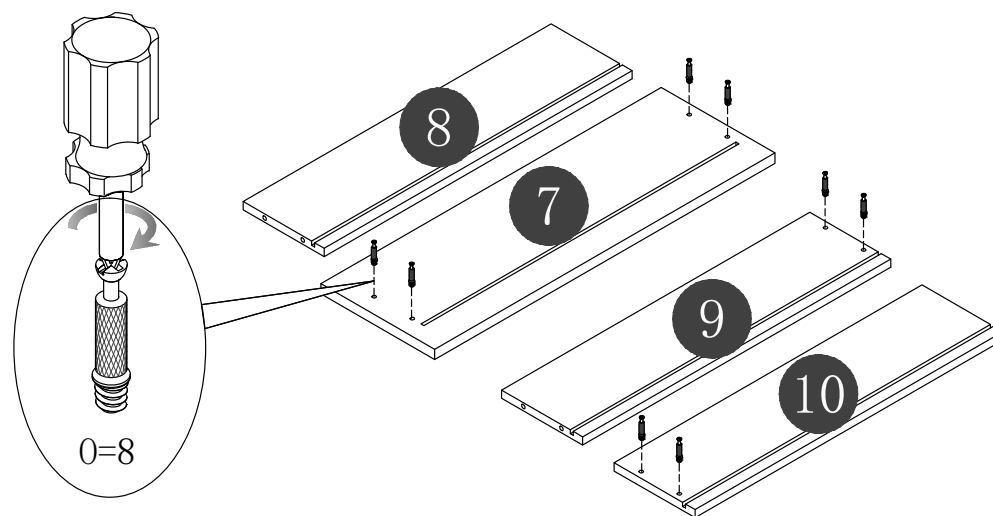

8-2

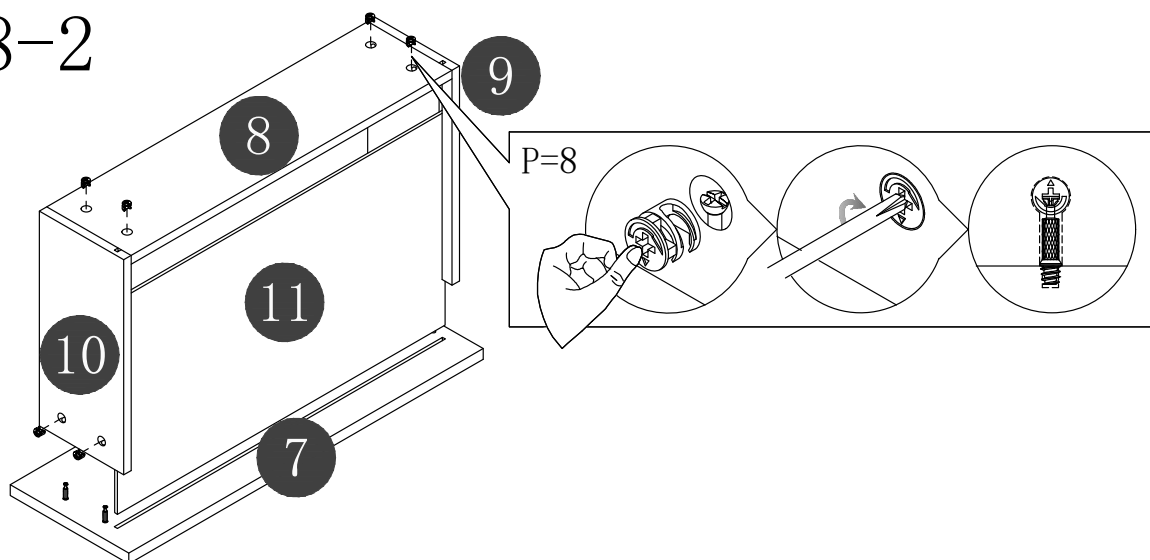


8-3

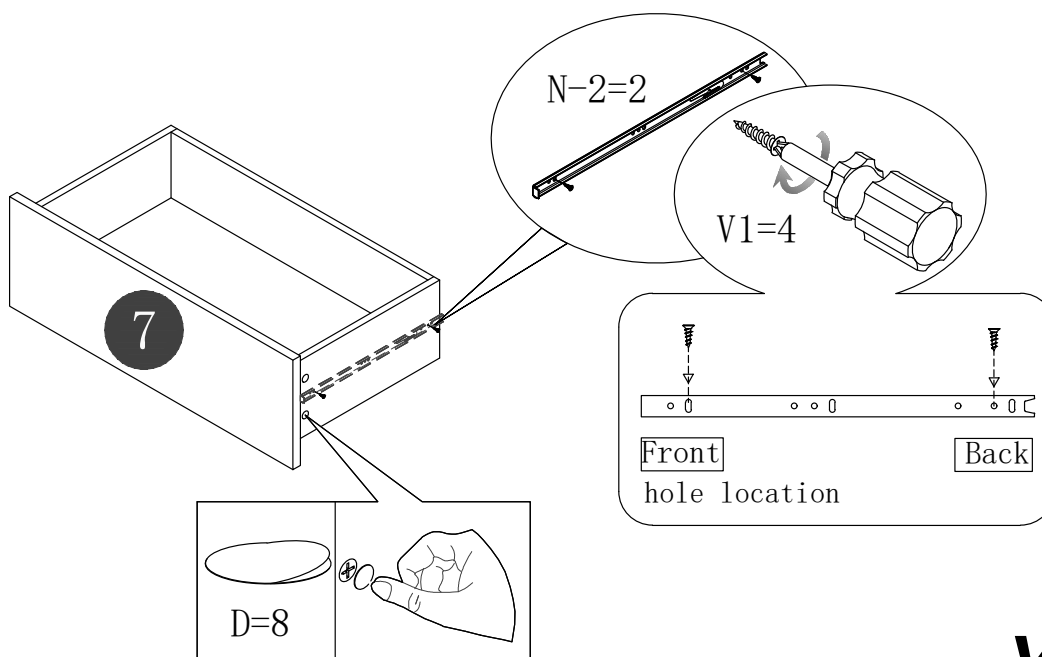


X2


STEP 9

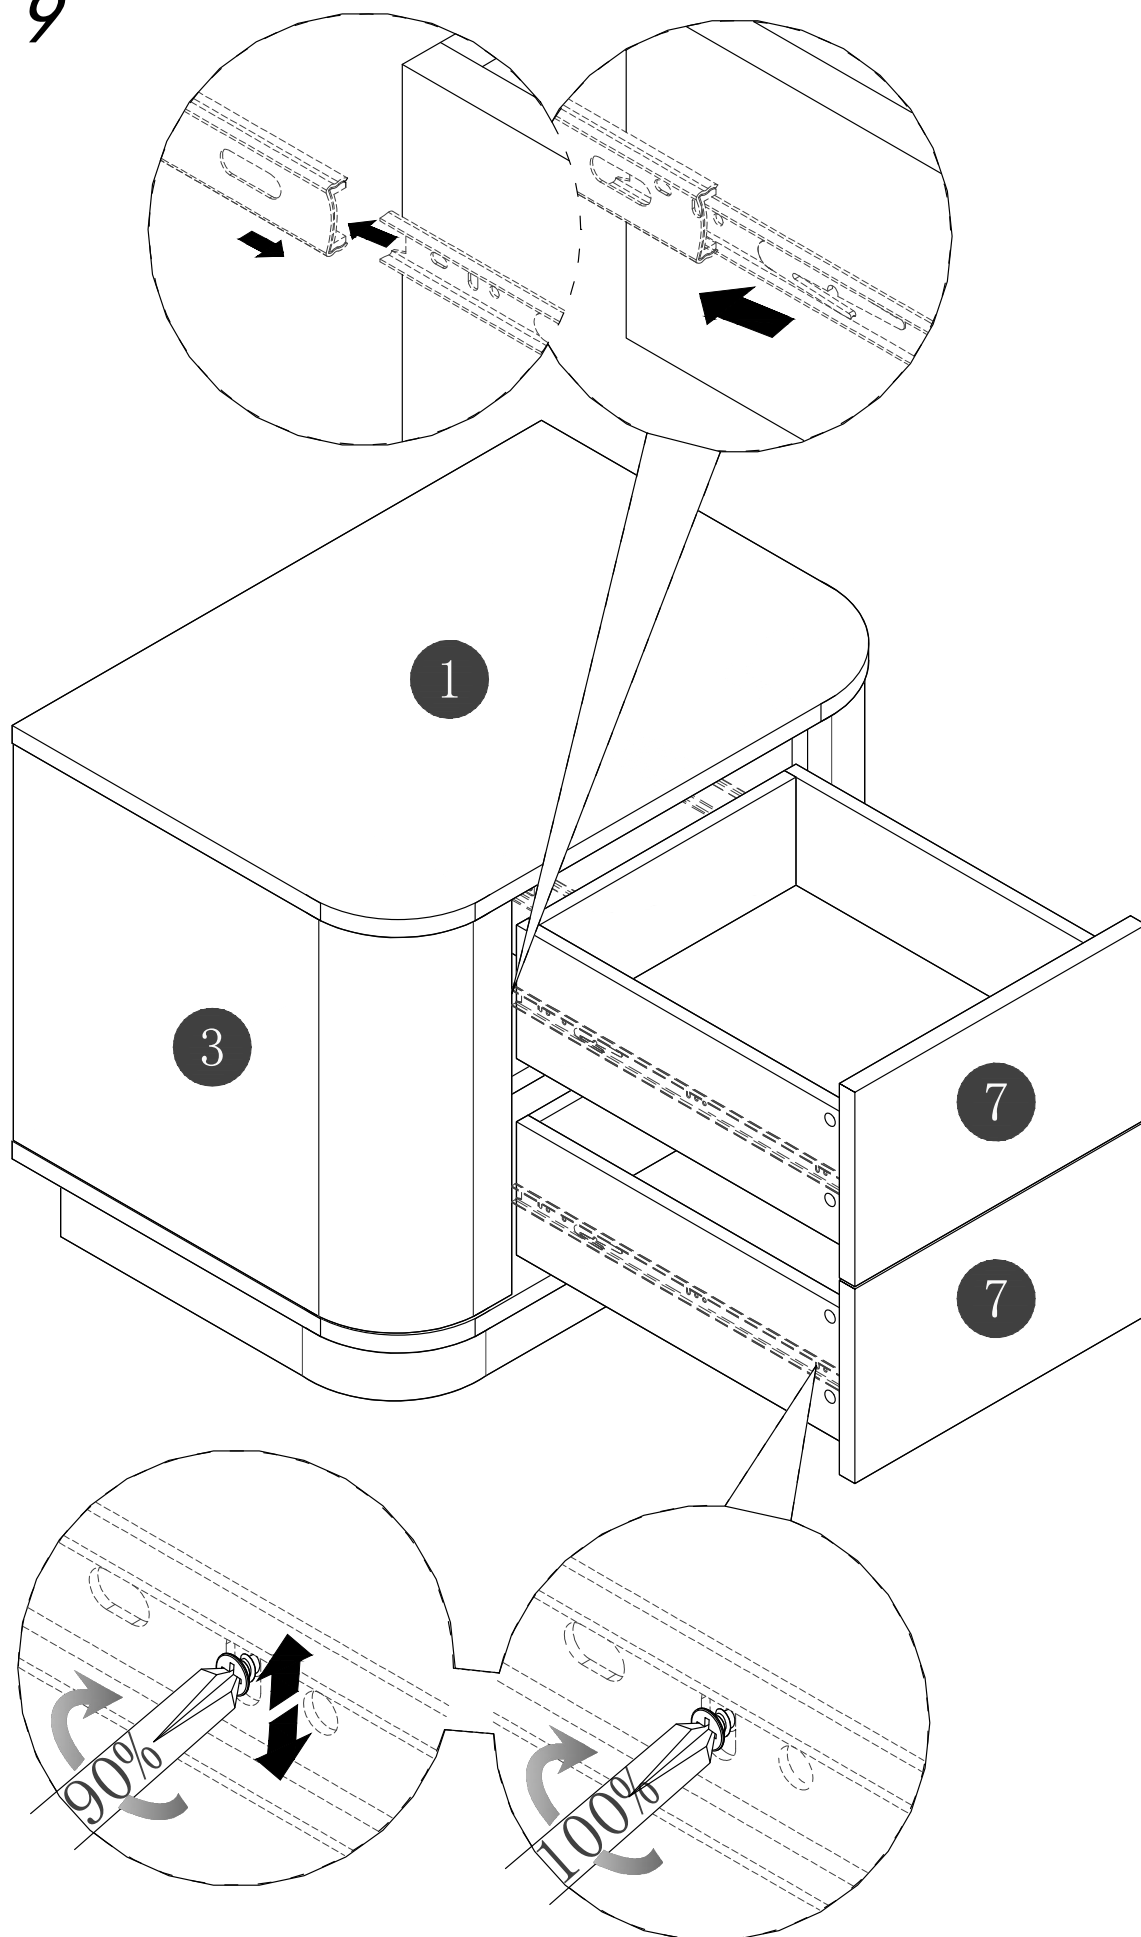


STEP 10

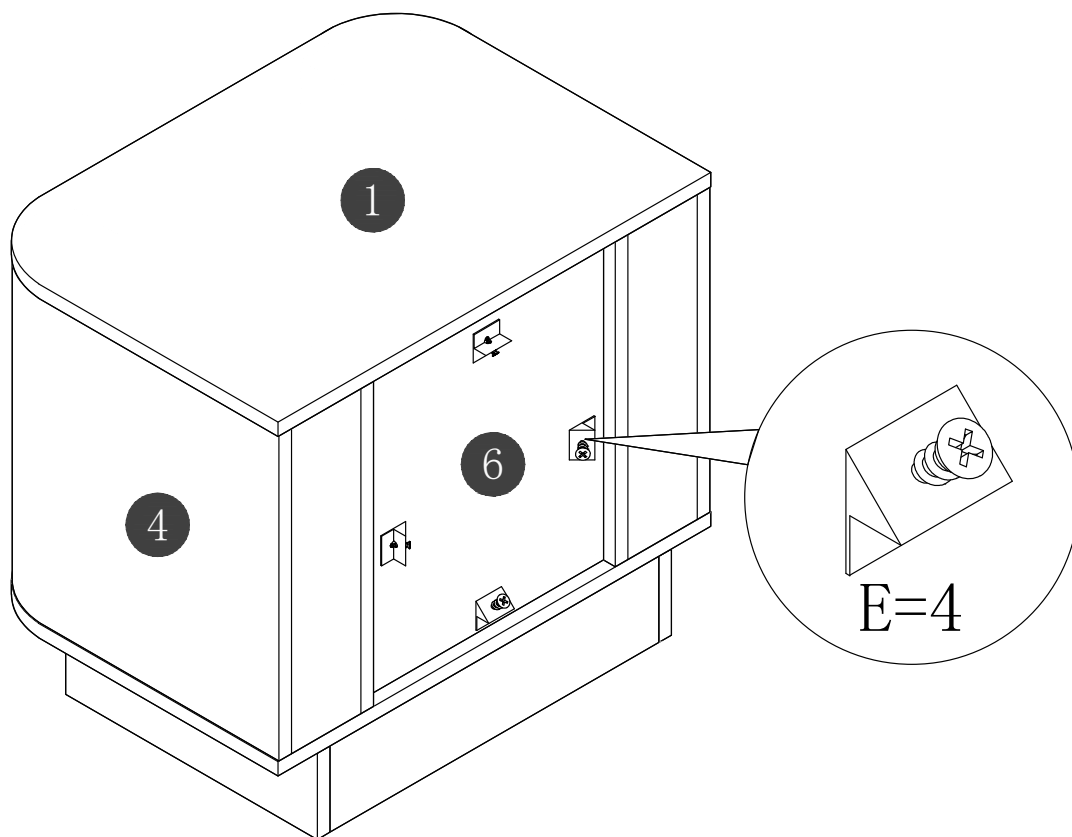

STEP 11

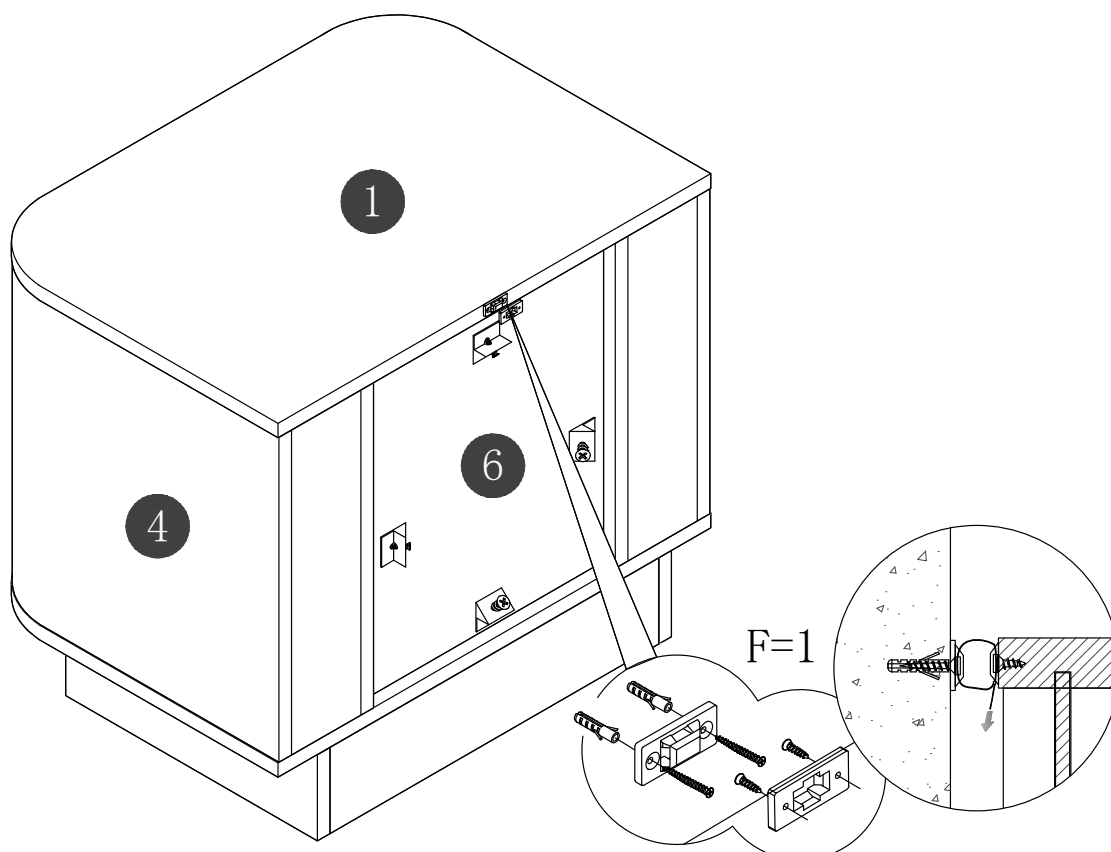

STEP 12

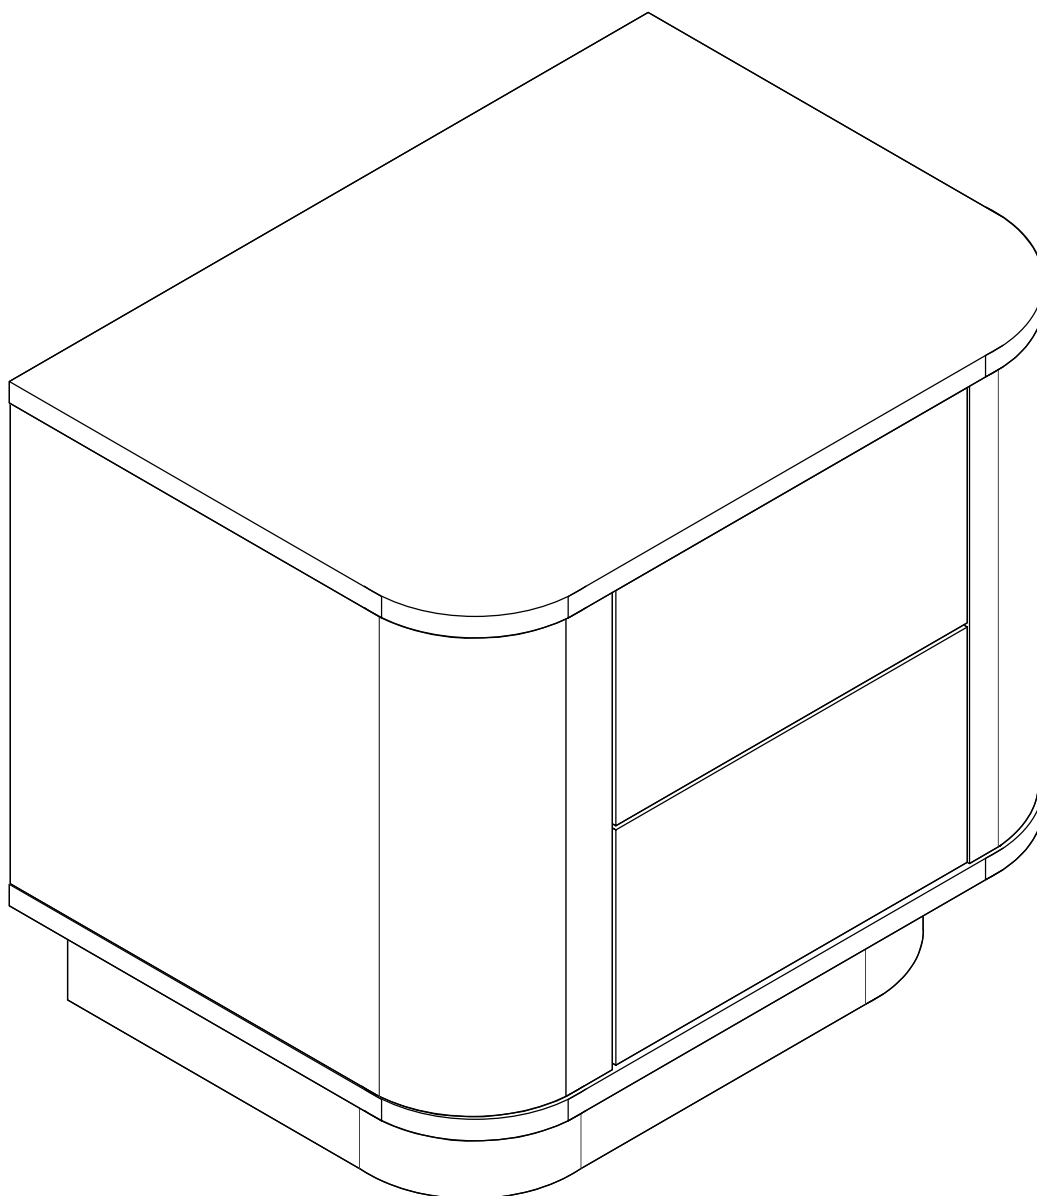

Finish