


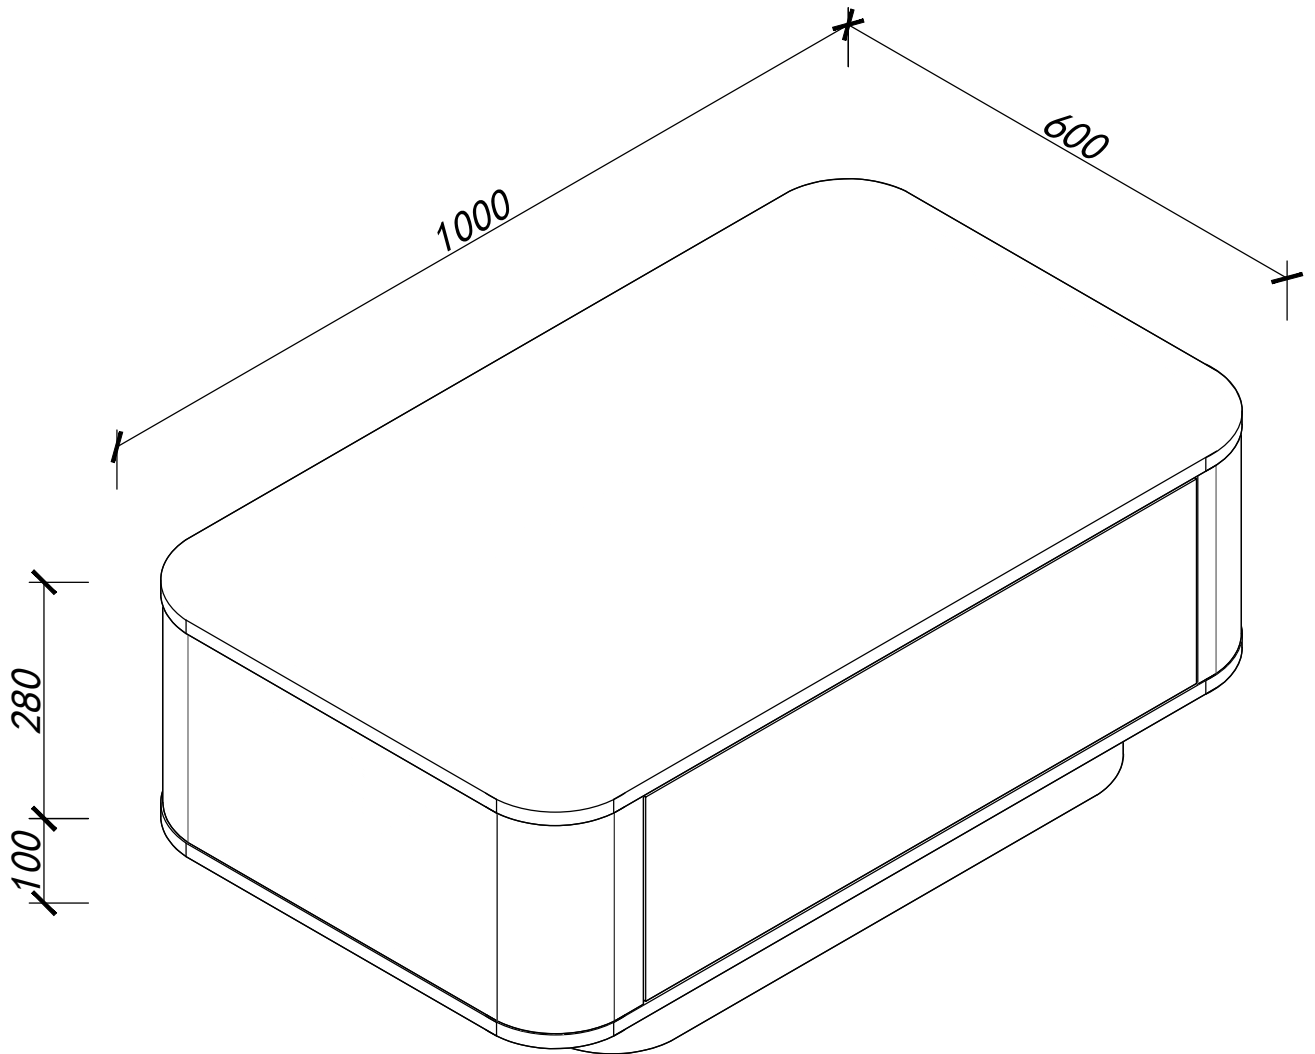


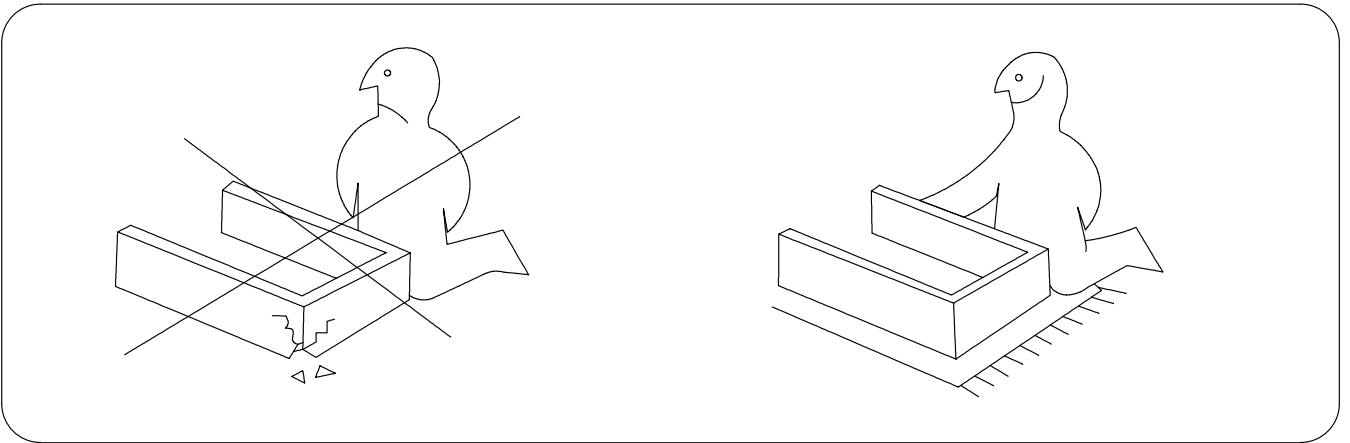

AVIDA
DESIGN


Assembly Instruction

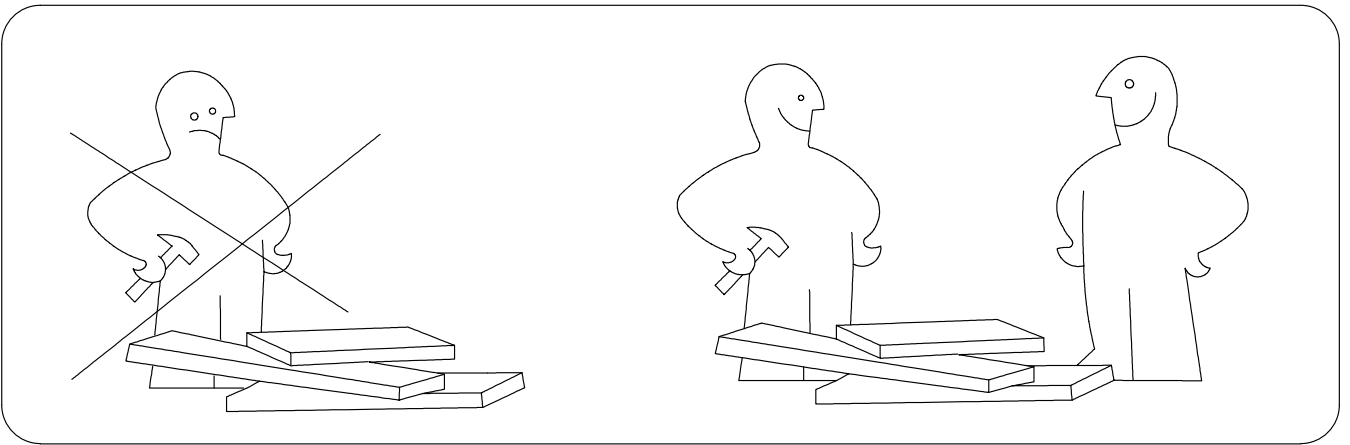

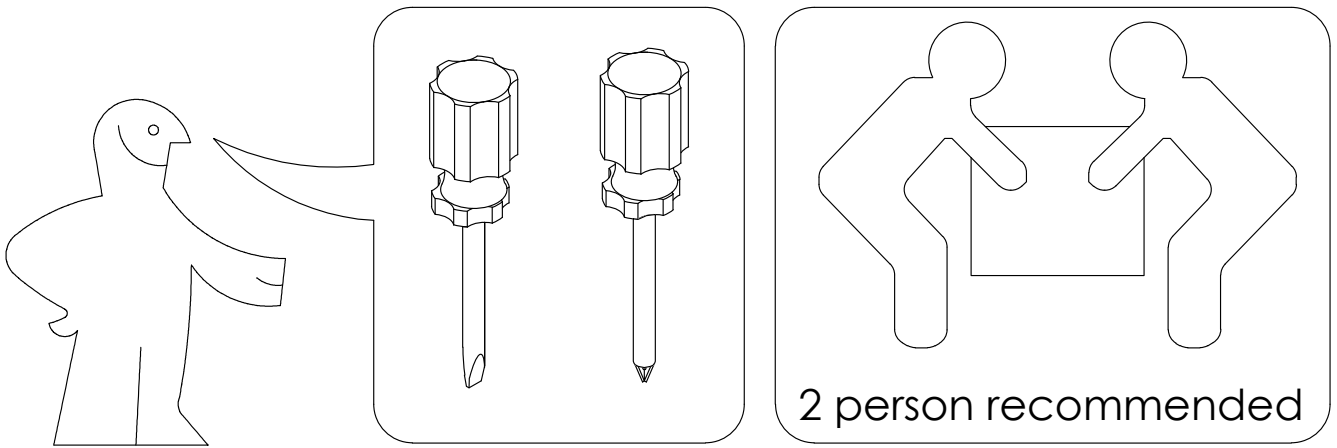


Panel No	Panel Sizes	Quantity
1	1000*600*16	1
2	1000*600*111	1
3	248*596*120	1
4	248*596*120	1
5	758*248*16	1
6	753*242*16	1

Panel No	Panel Sizes	Quantity
7	715*150*12	1
8	350*150*12	1
9	350*150*12	1
10	337*100*12	1
11	725*348*5	1

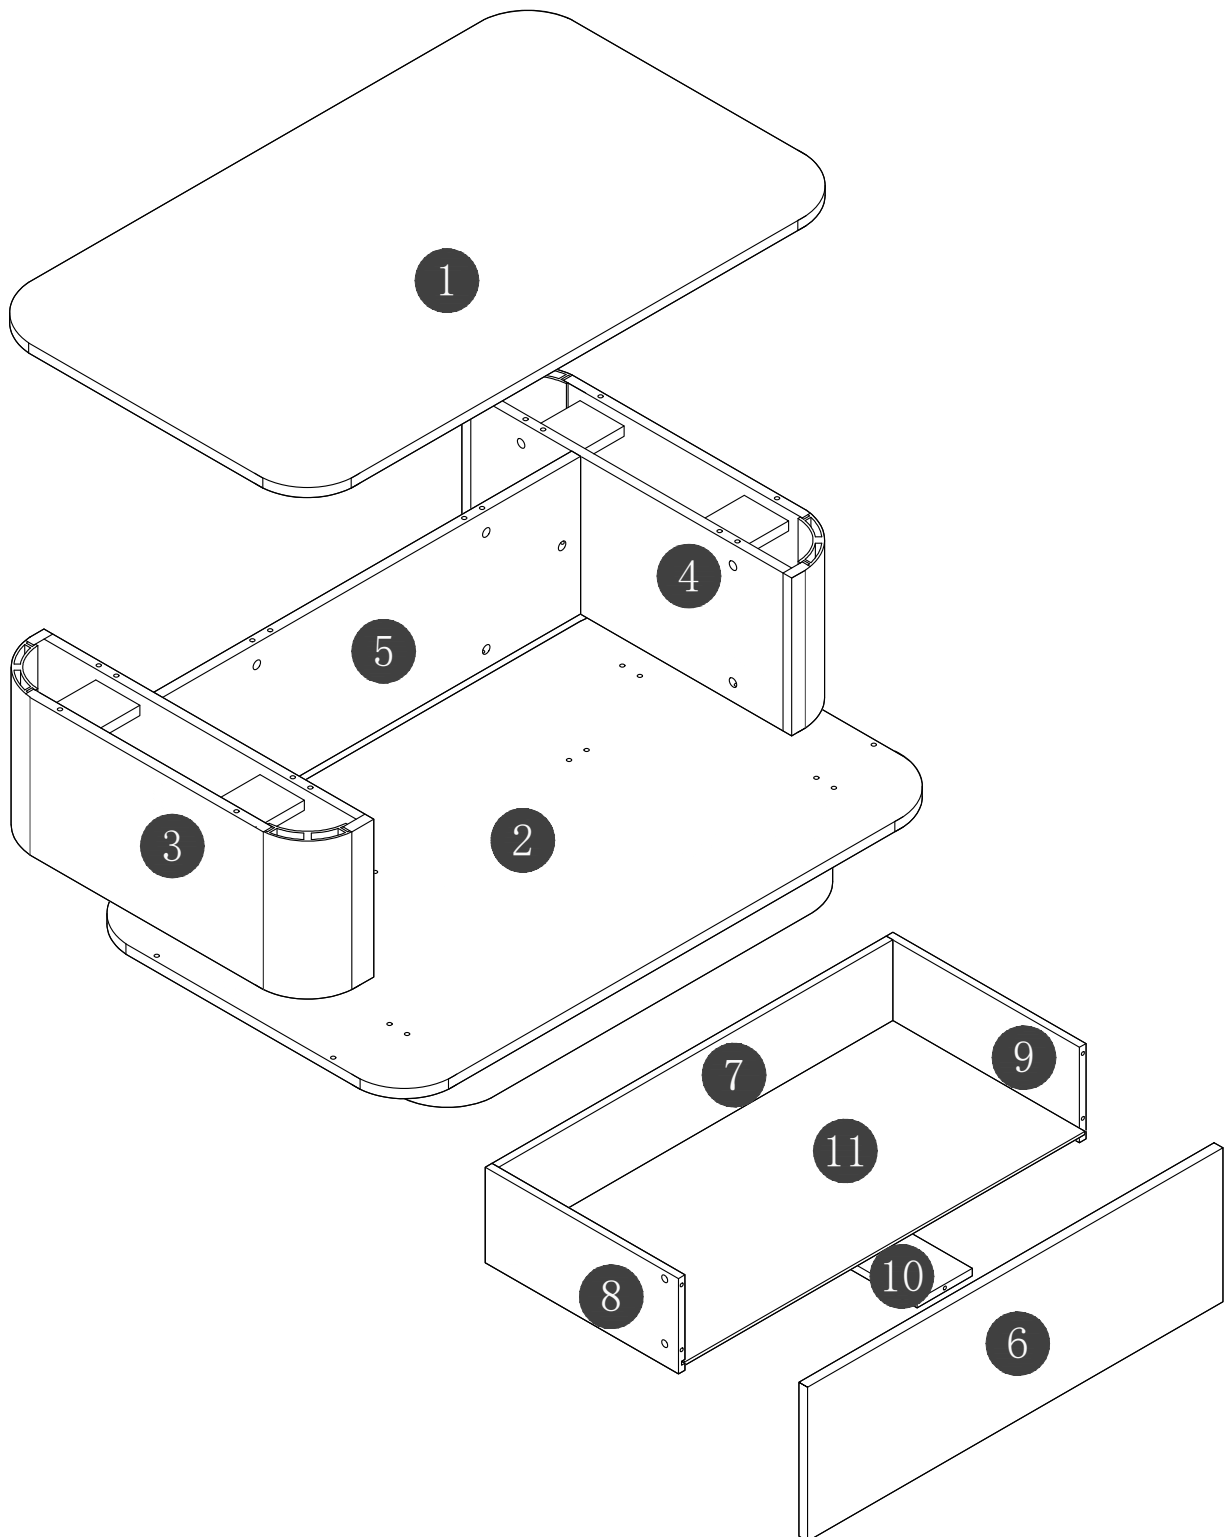


Fittings




M6*40

A=14



Φ 8*30

B=20

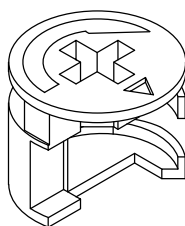


Φ 15*12

C=14




Φ 21

D=24

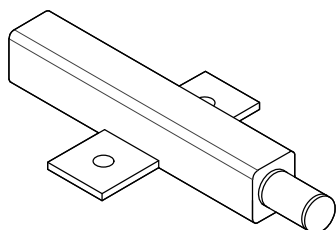

K=1

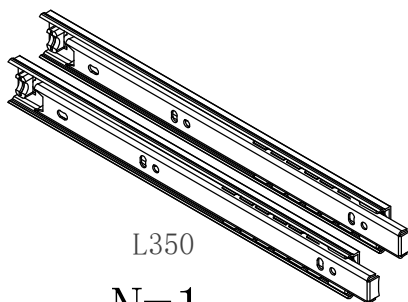

L350

N=1



M6*34

O=10



Φ 12*10.5







P=10




M3.5*12

V1=10


STEP 1

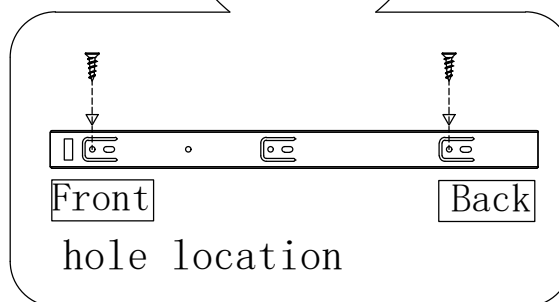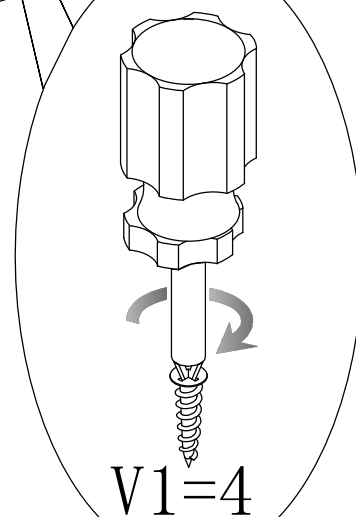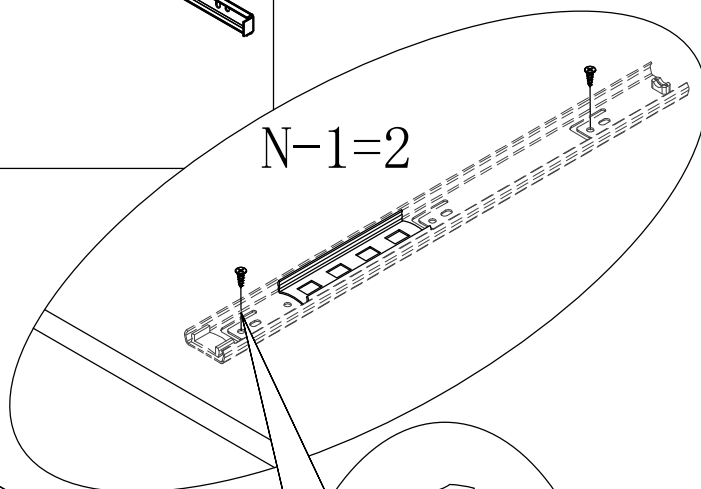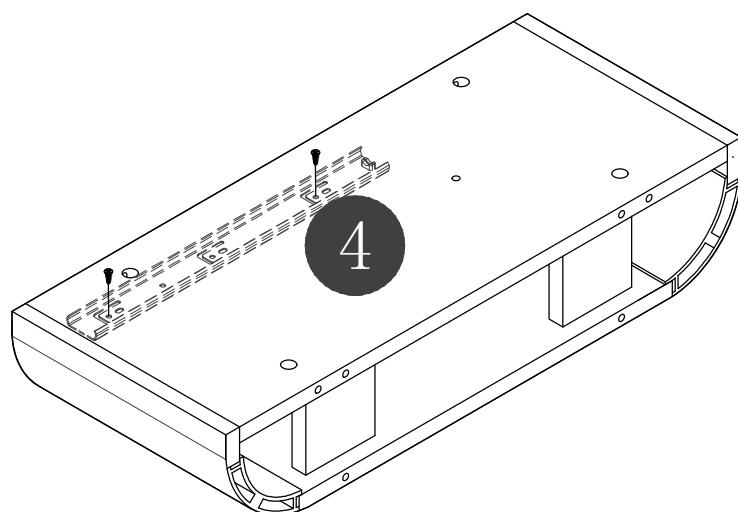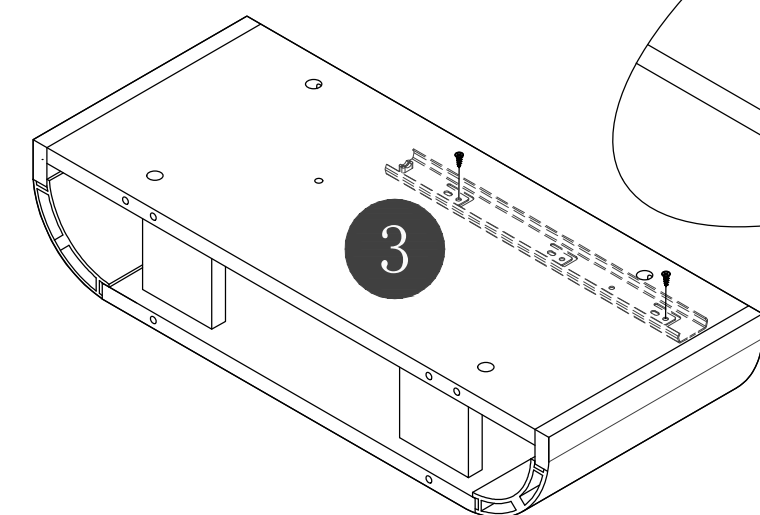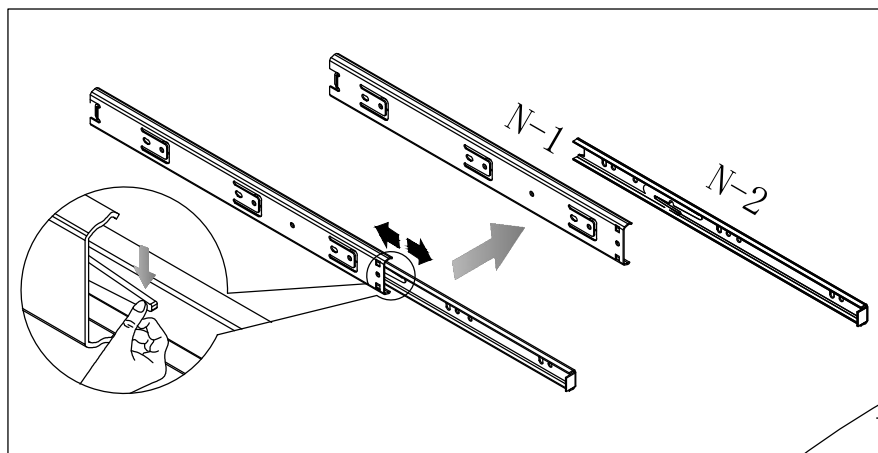


STEP 2

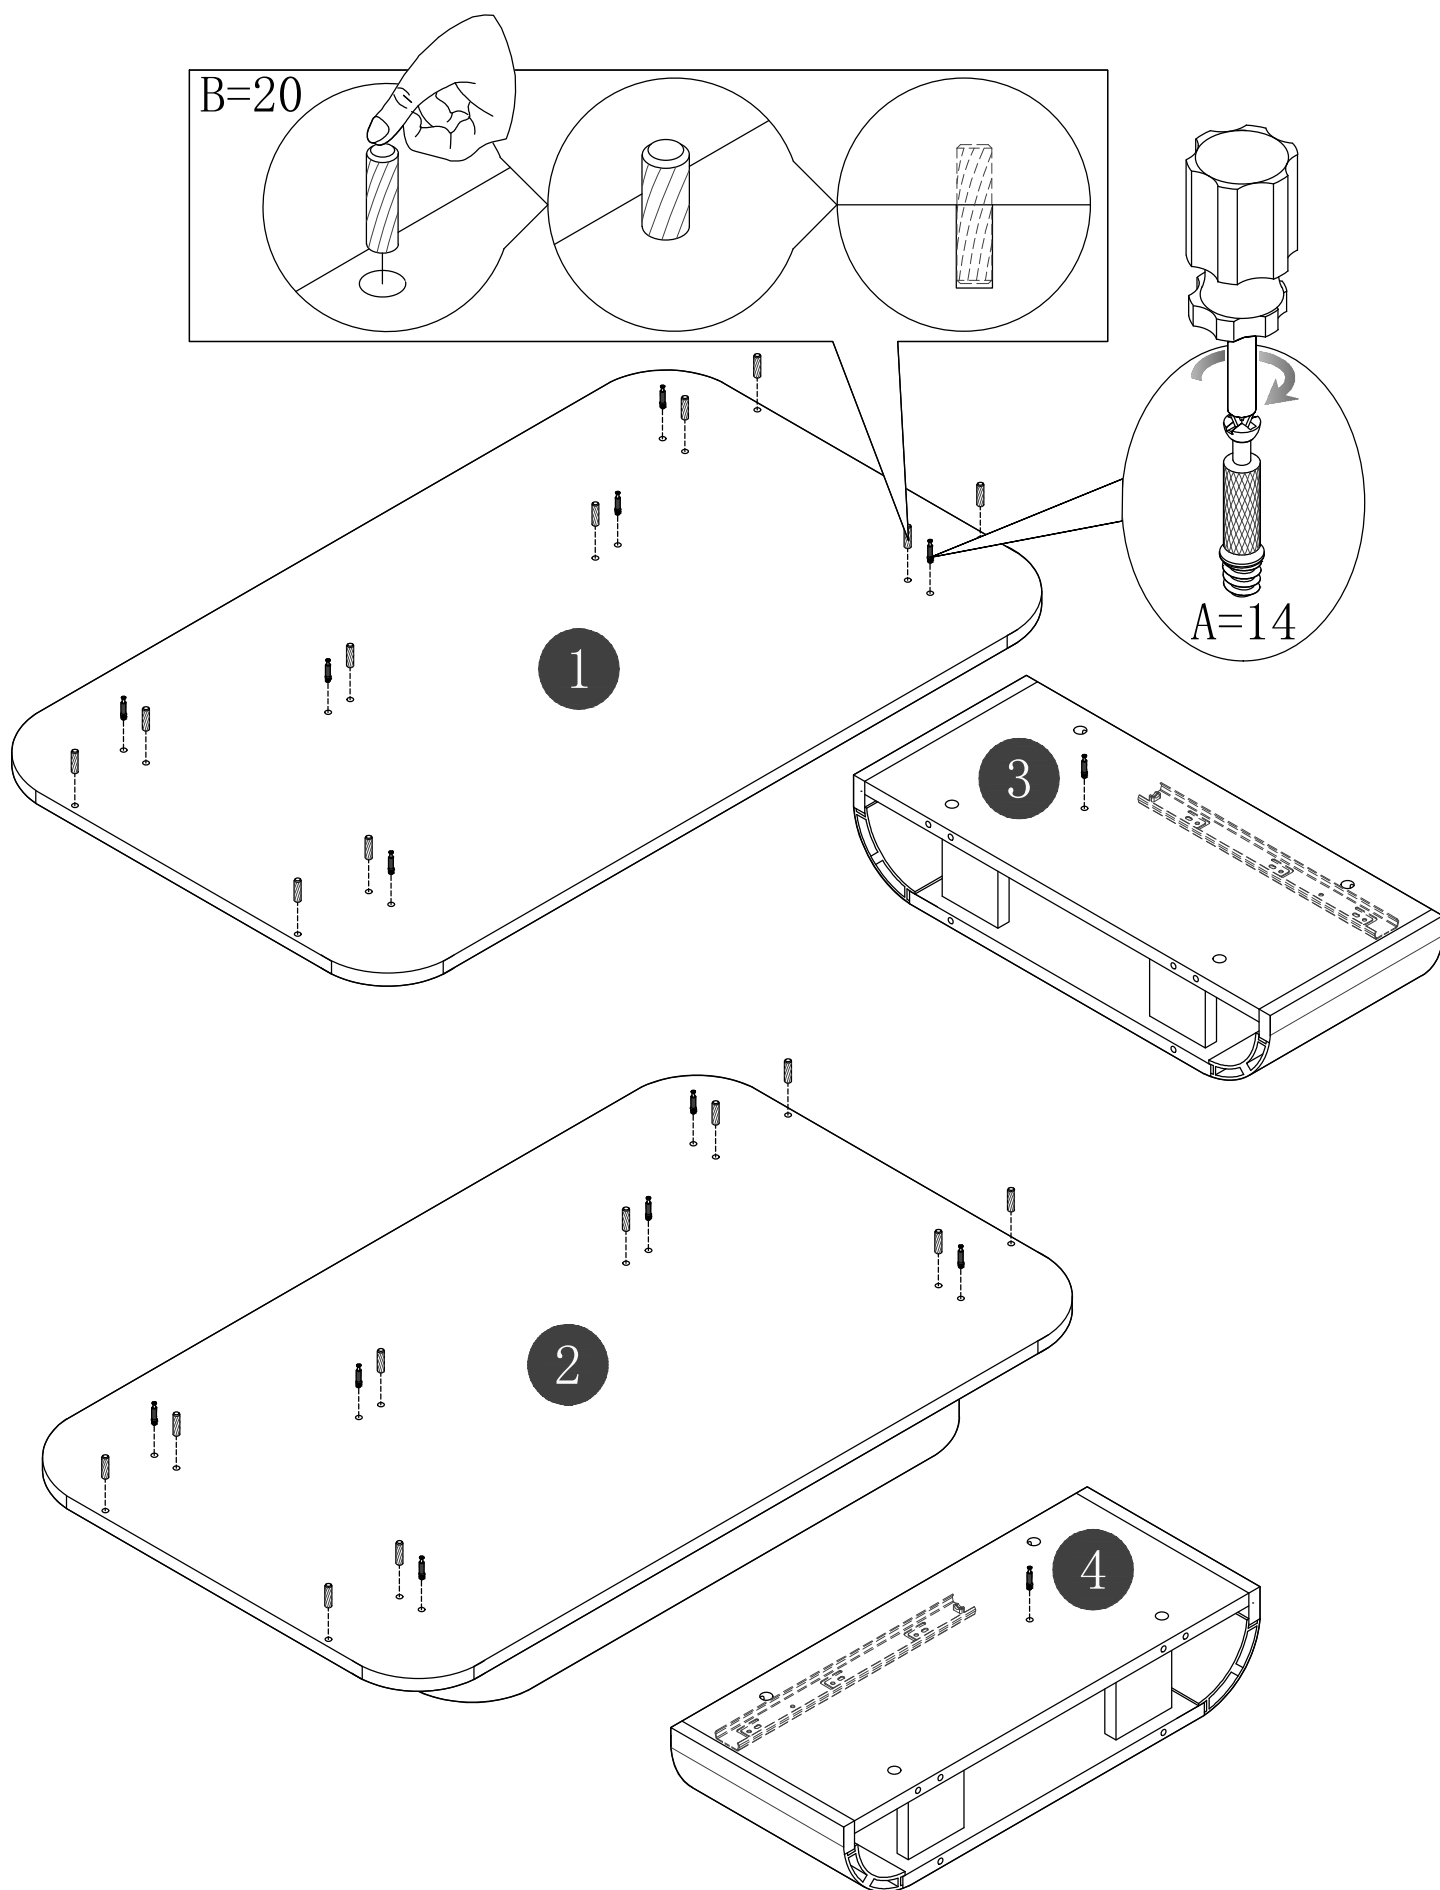



STEP 3

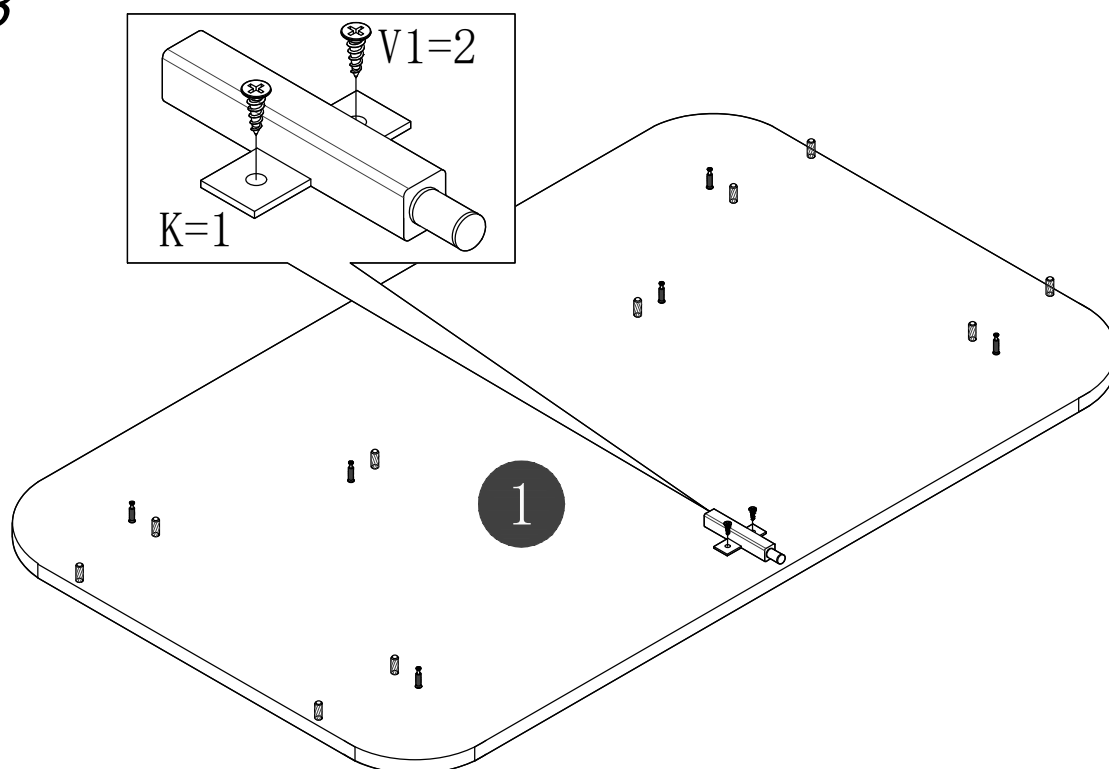


STEP 4

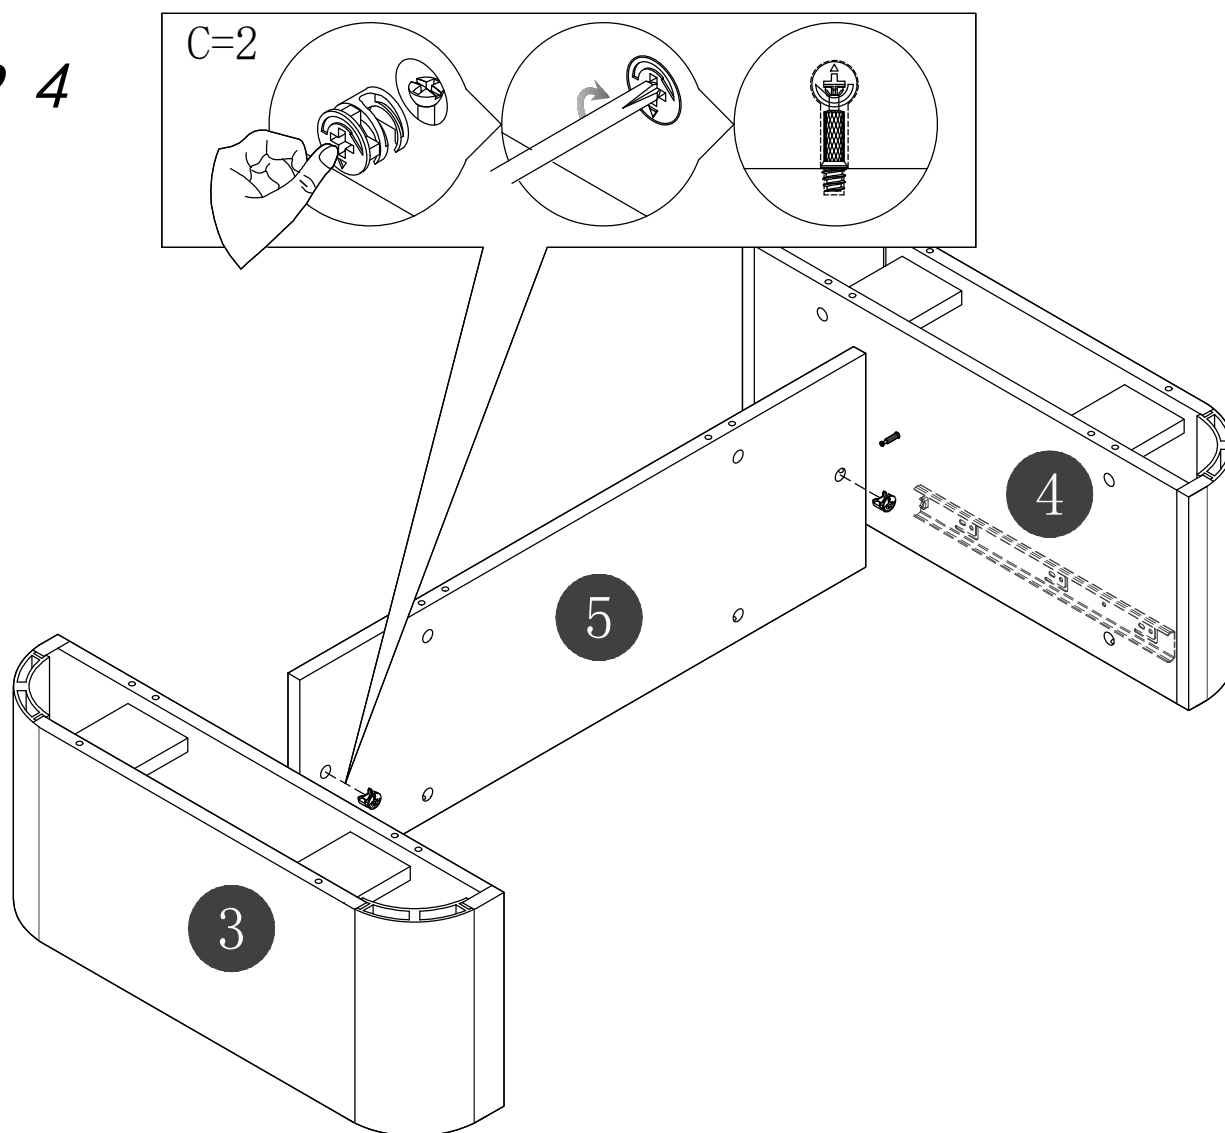

STEP 5

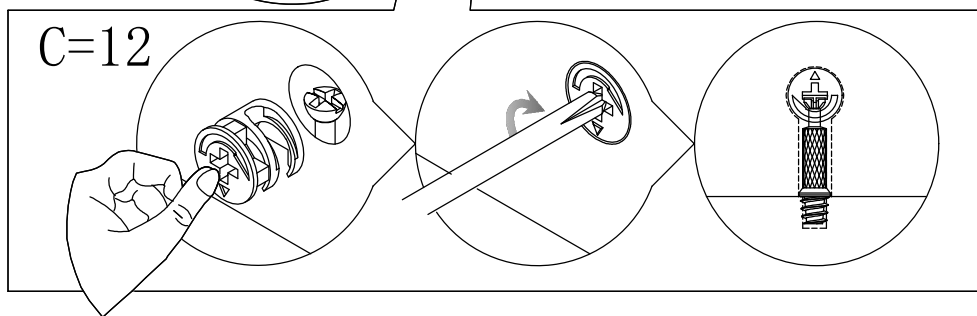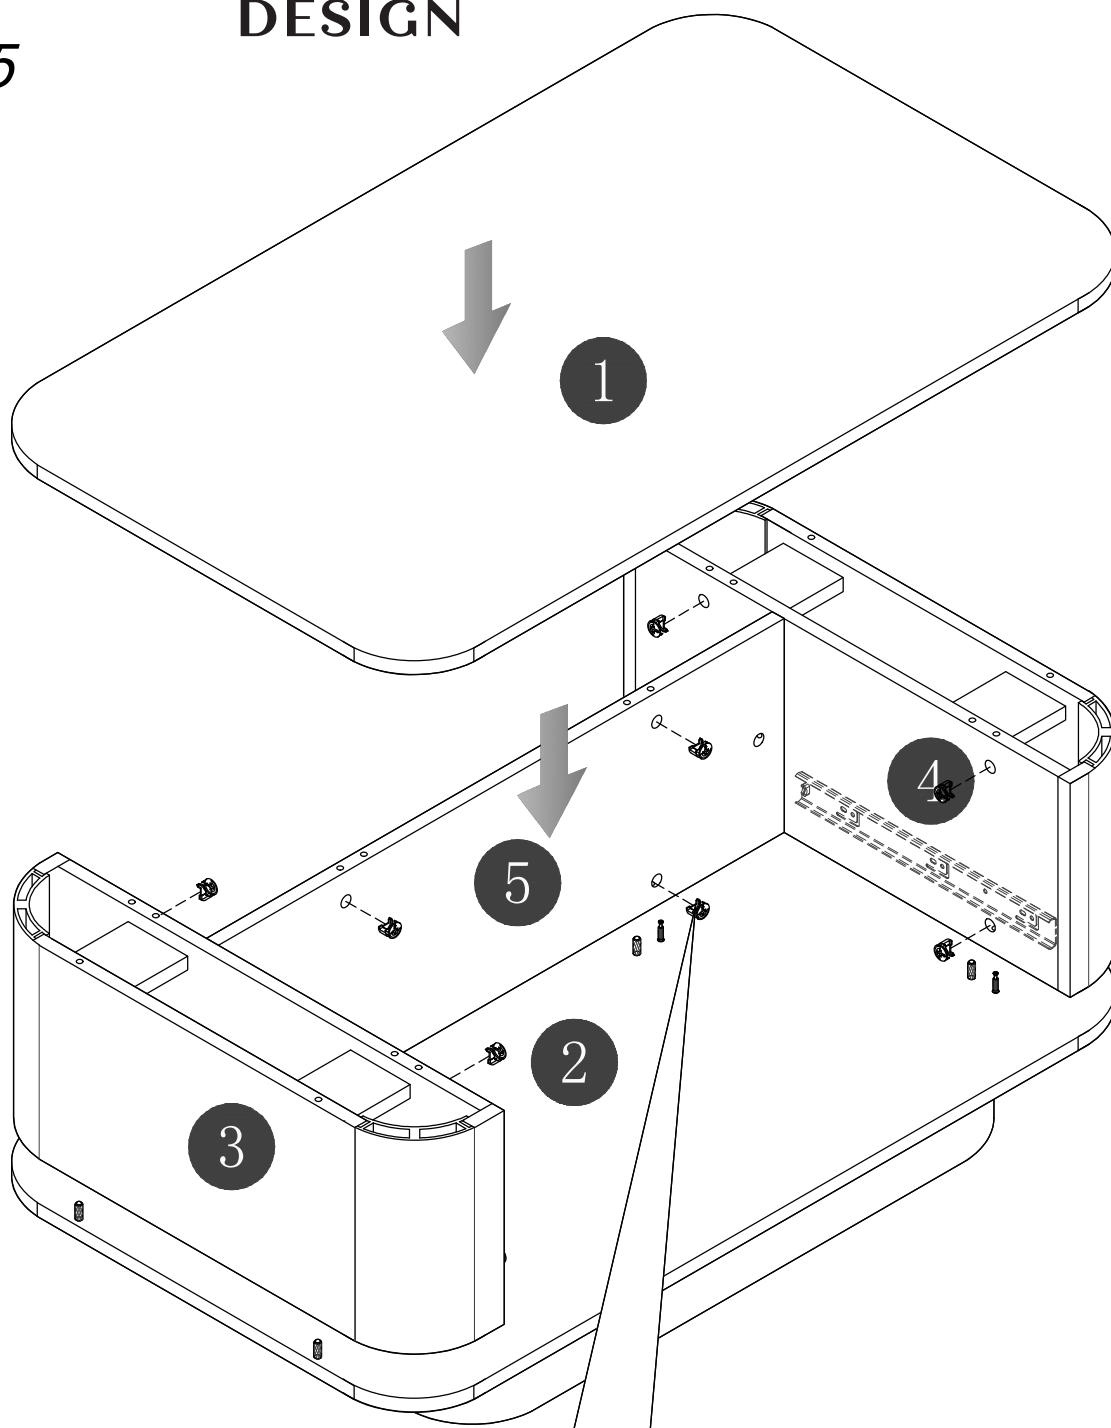


STEP 6

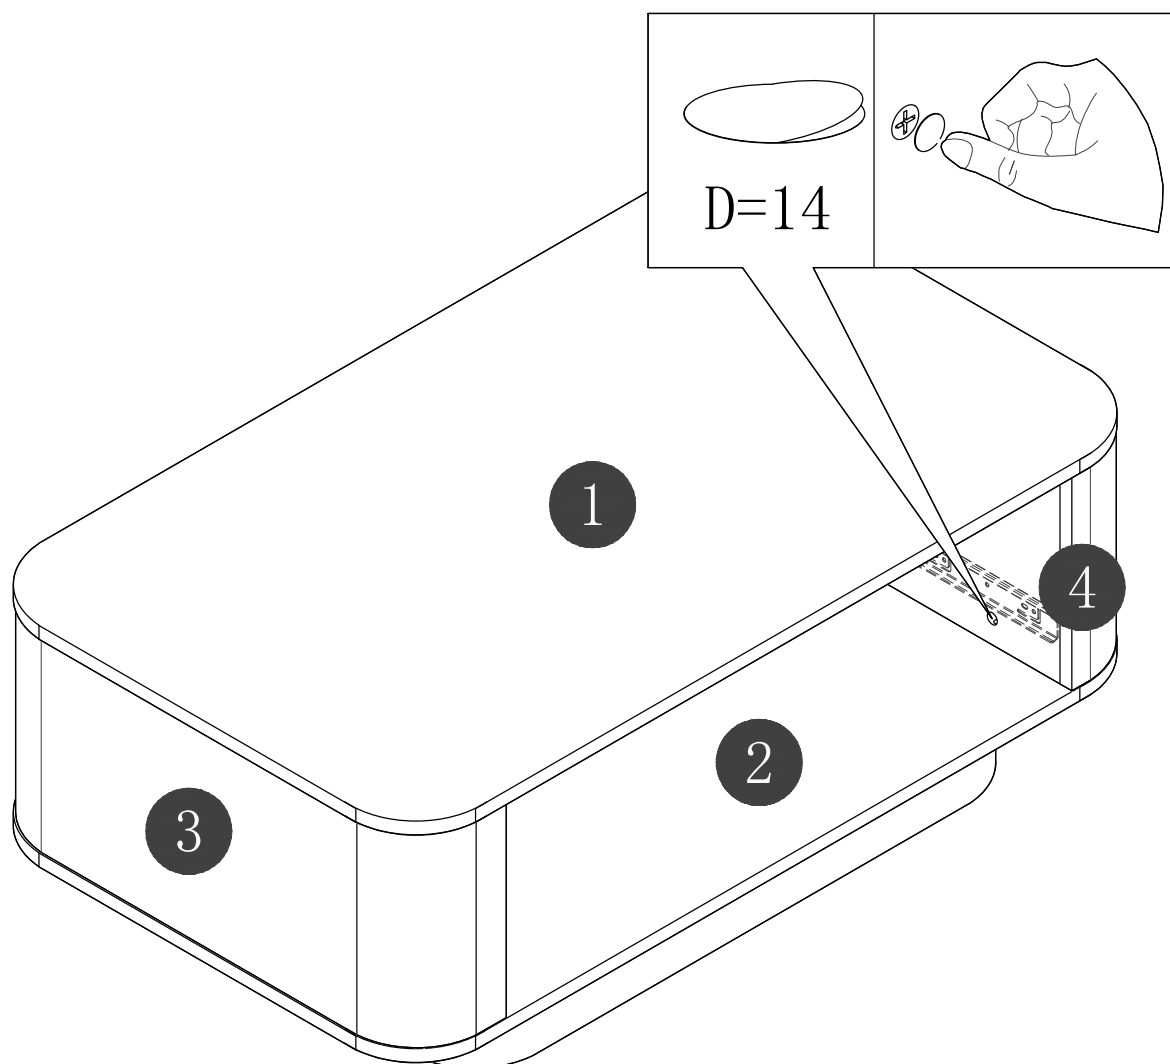


STEP 7


7-1

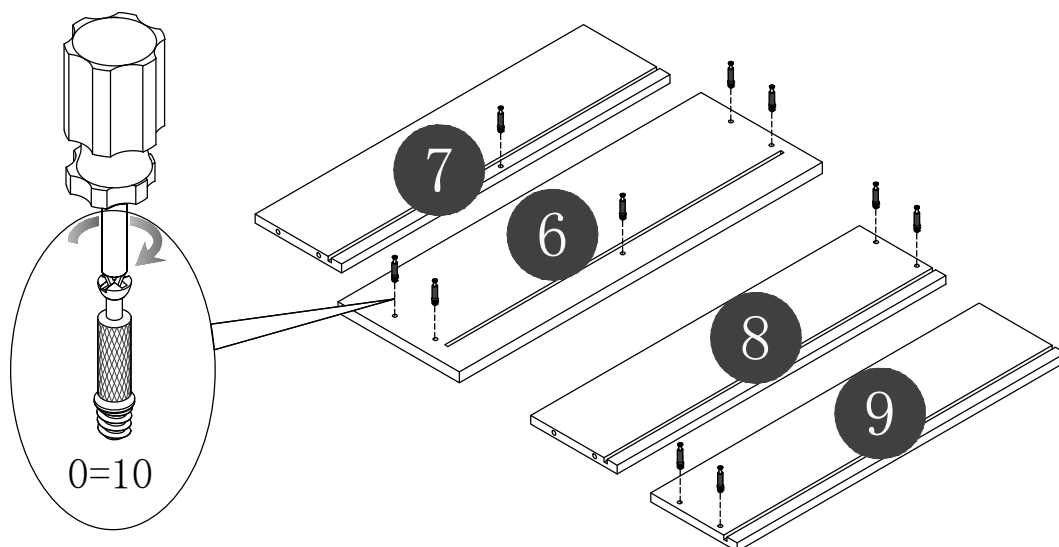


7-2

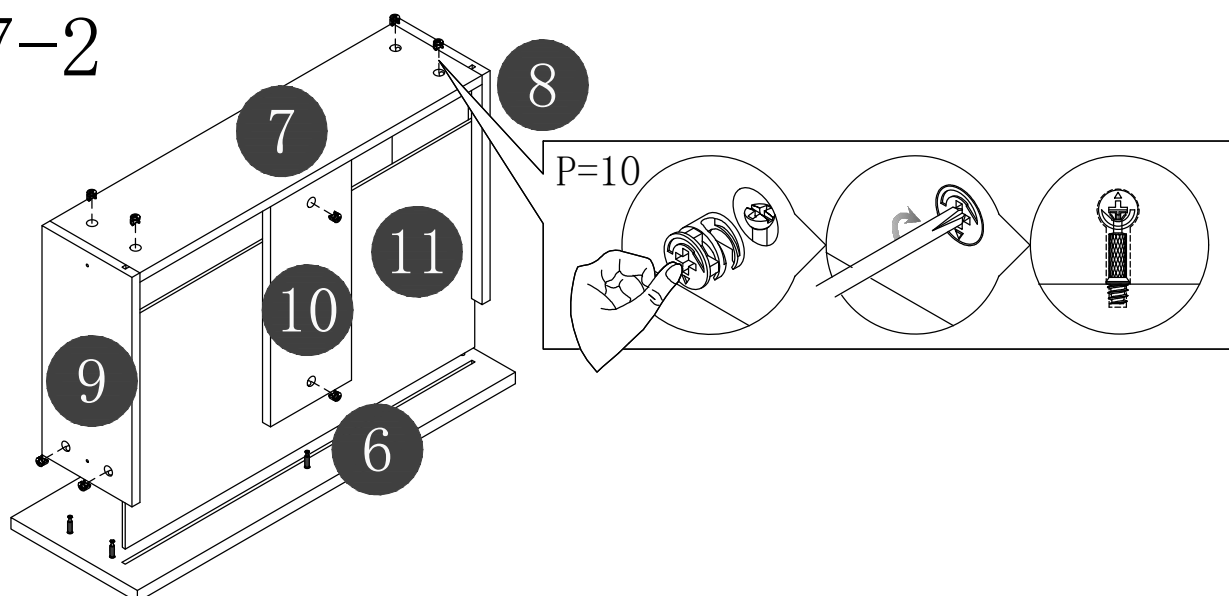


7-3

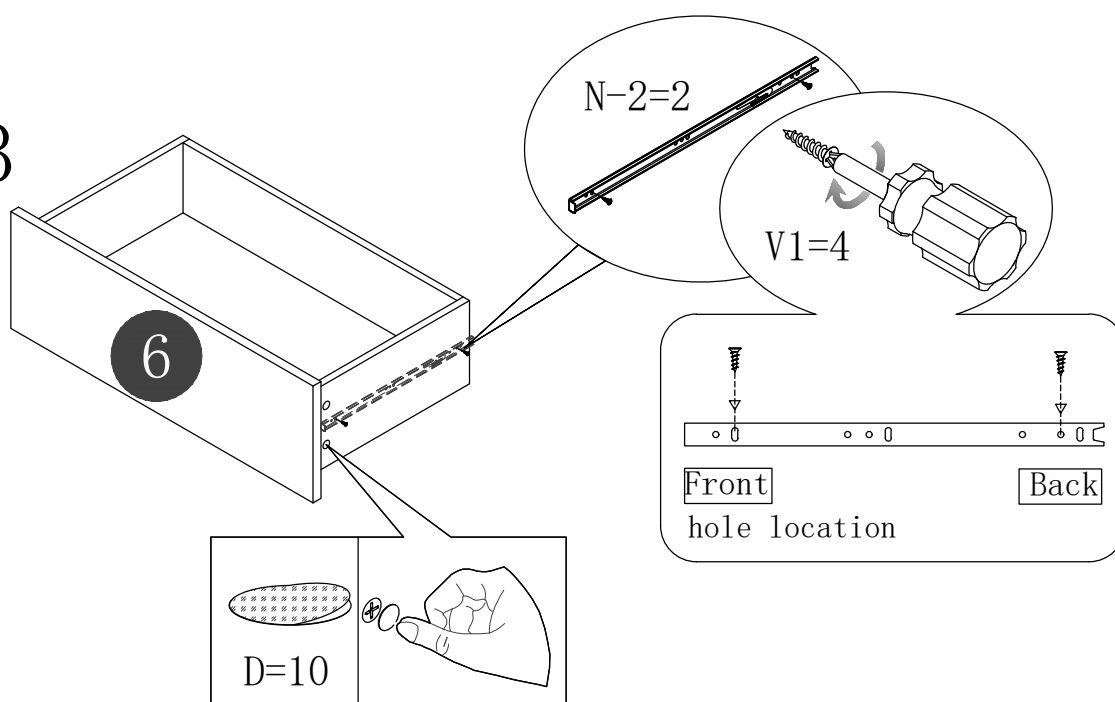

STEP 8

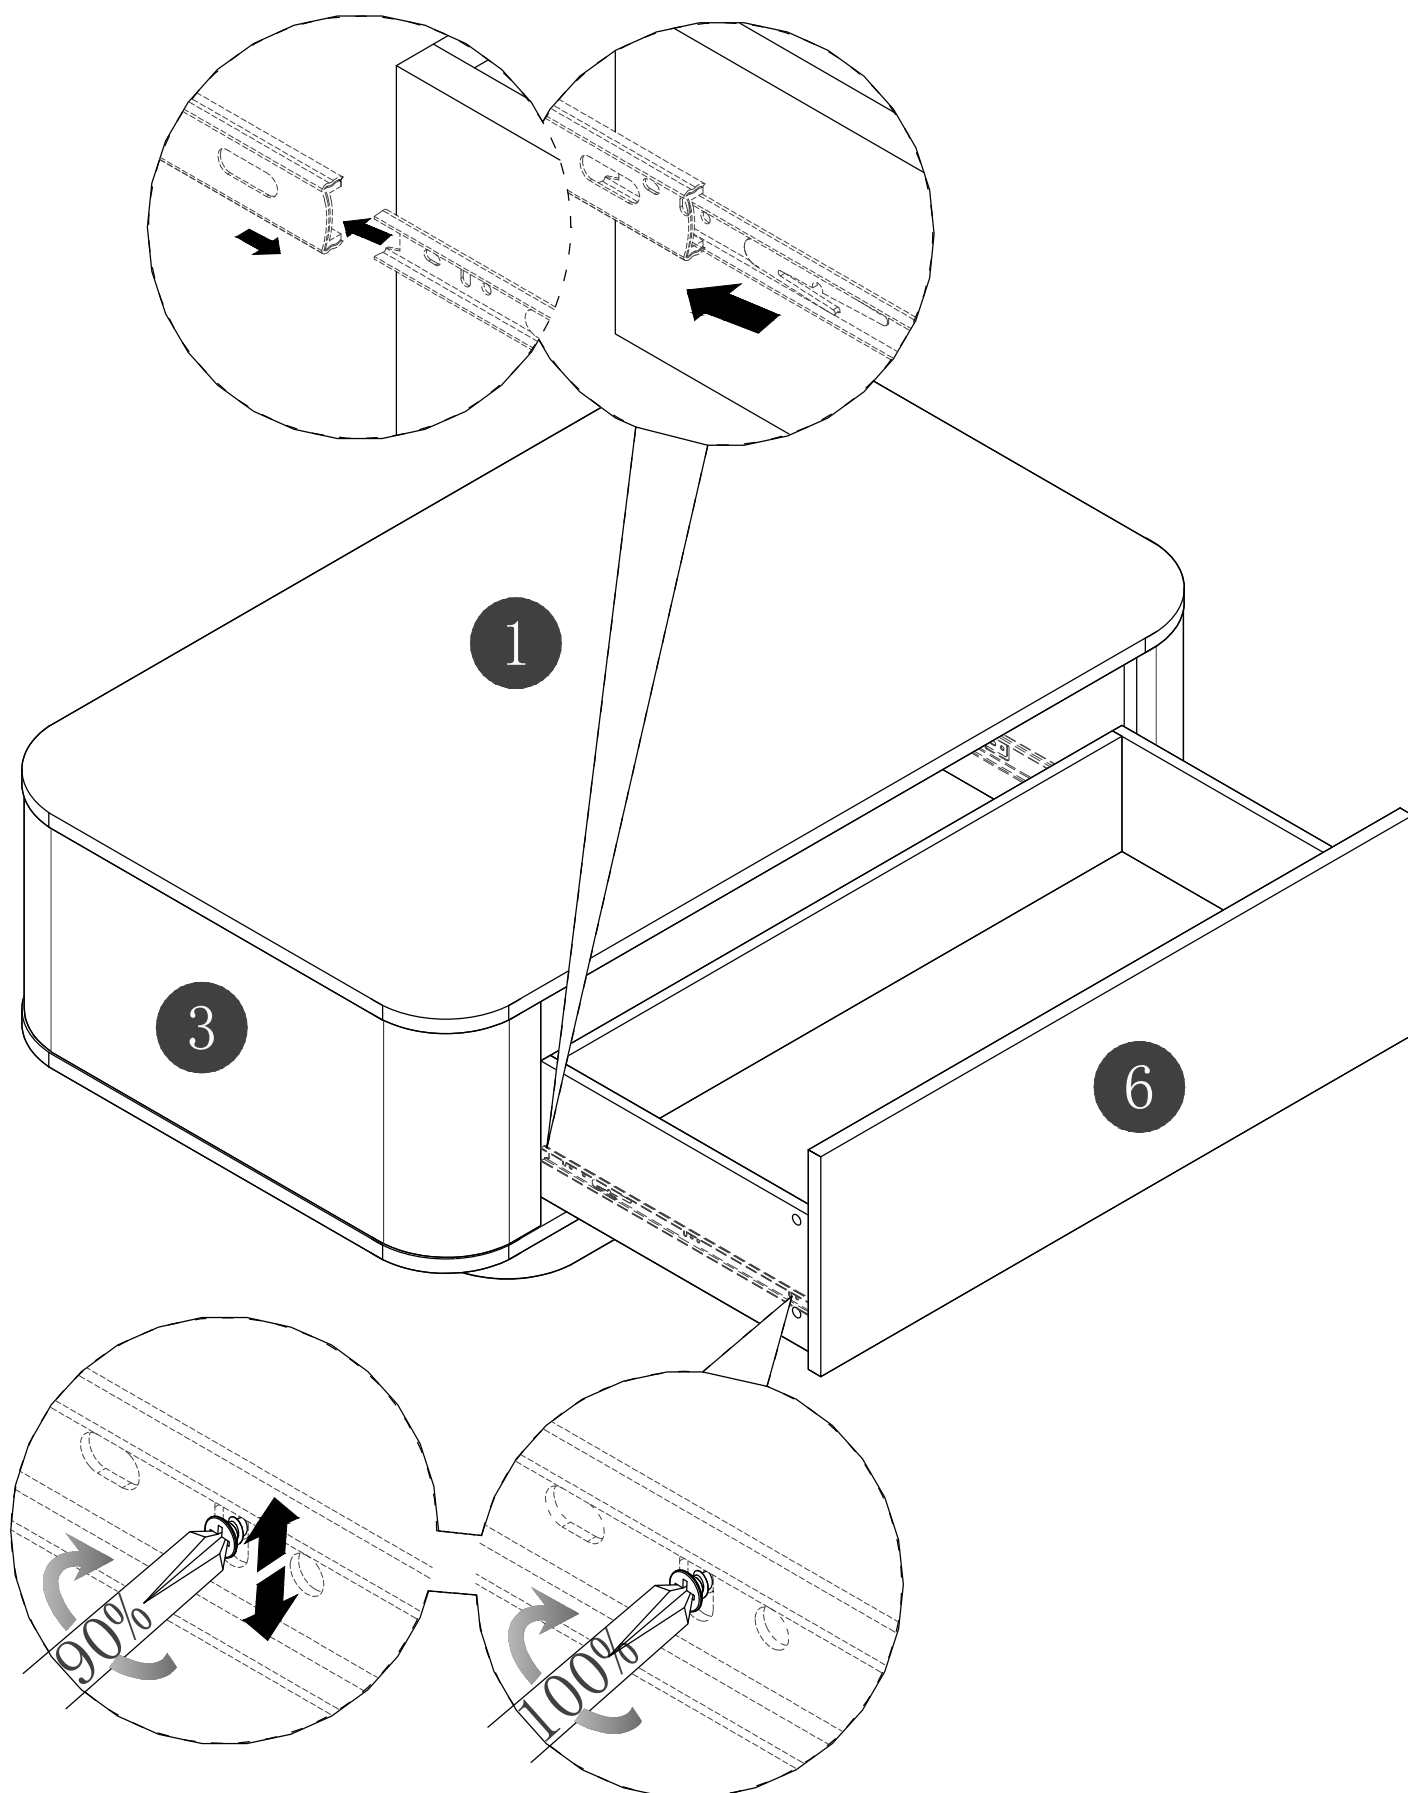

STEP 9

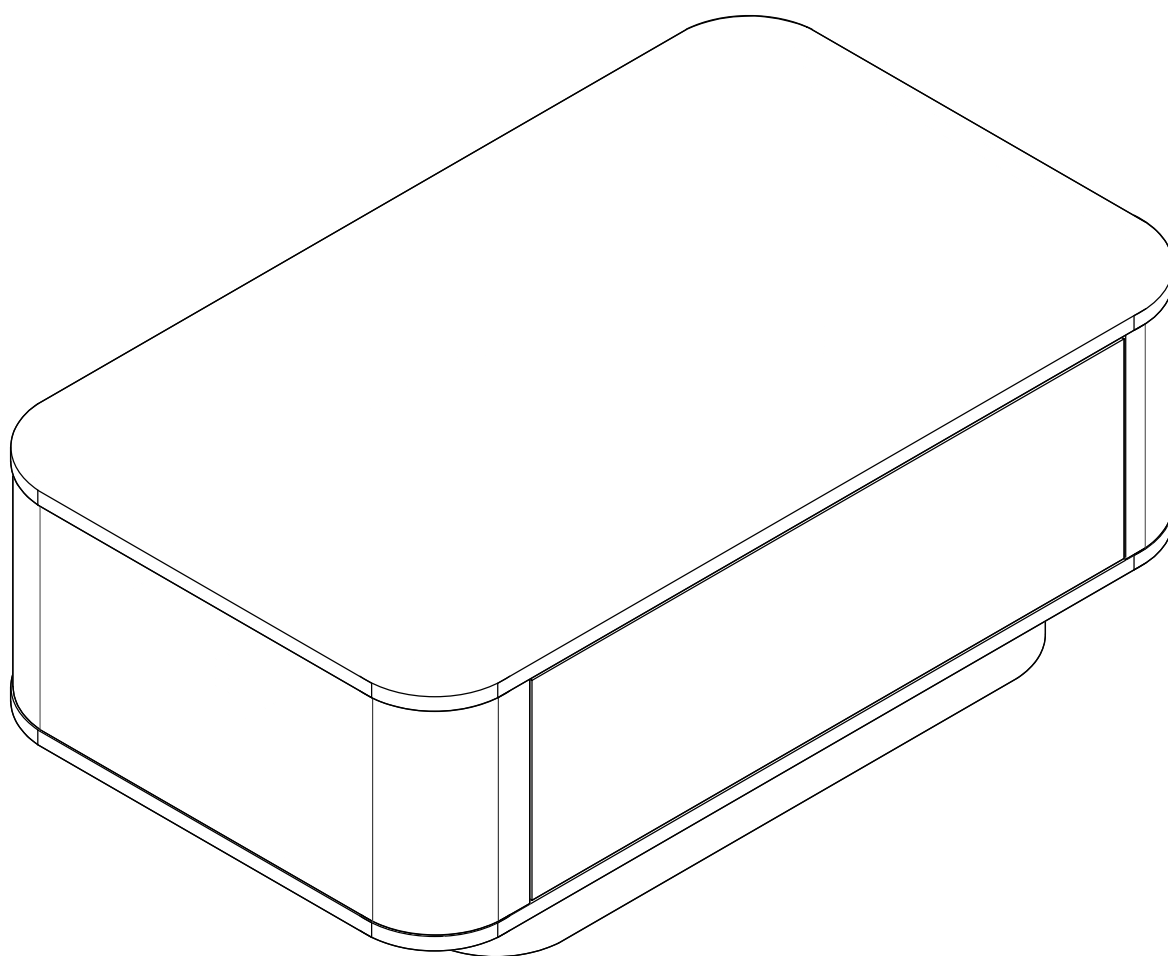

Finish