



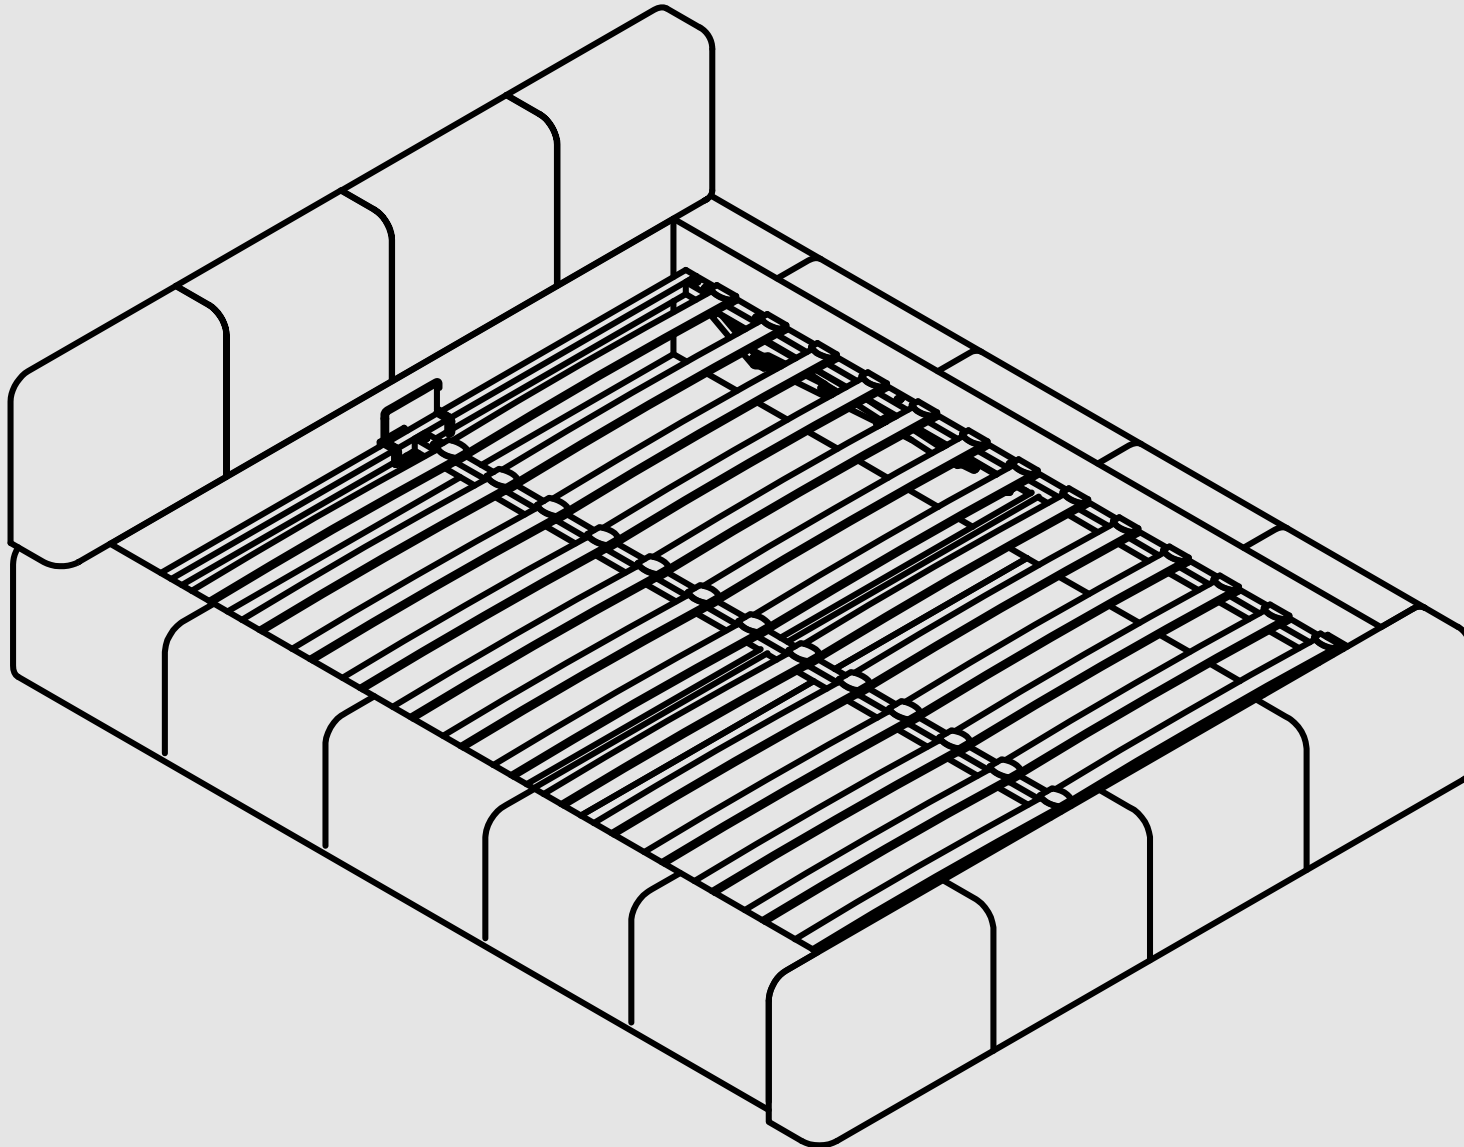

1

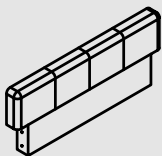


1 pc

7




13 pcs

13



2 pcs

19

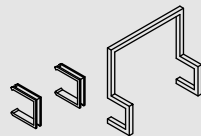

1 pc

A




M8*25 - 36 pcs

G



8*50 mm - 2 pcs

2

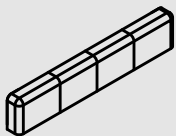


1 pc

8




26 pcs

14



2 pcs

B




1 pc

H



8*40 mm - 6 pcs

3

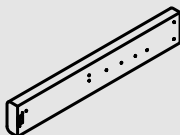

1 pc

9



1 pc

15




1 pc

C




M8 - 6 pcs

I



5 pcs

4

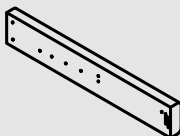

1 pc

10



2 pcs

16



1 pc

D




8 pcs

5




2 pcs

11



2 pcs

17

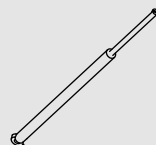


2 pcs

E




48 pcs

6

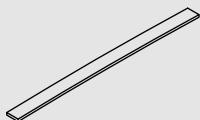

26 pcs

12

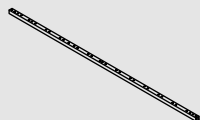


1 pc

18




1 pc

F




1 pc


STEP 1

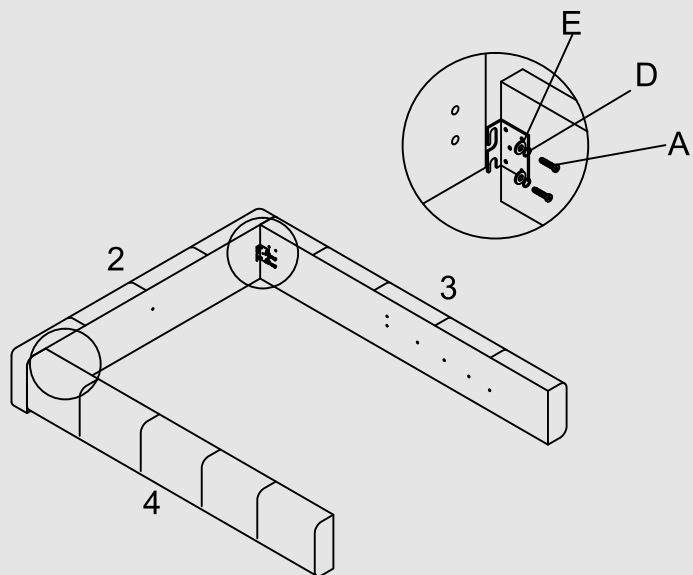


STEP 2

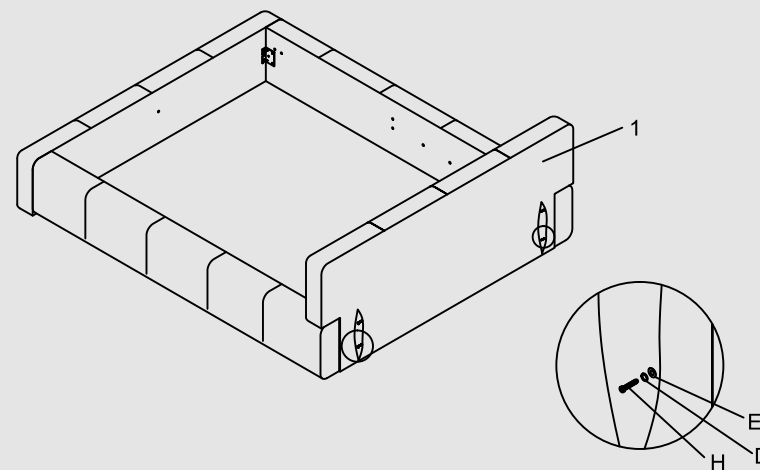


STEP 3

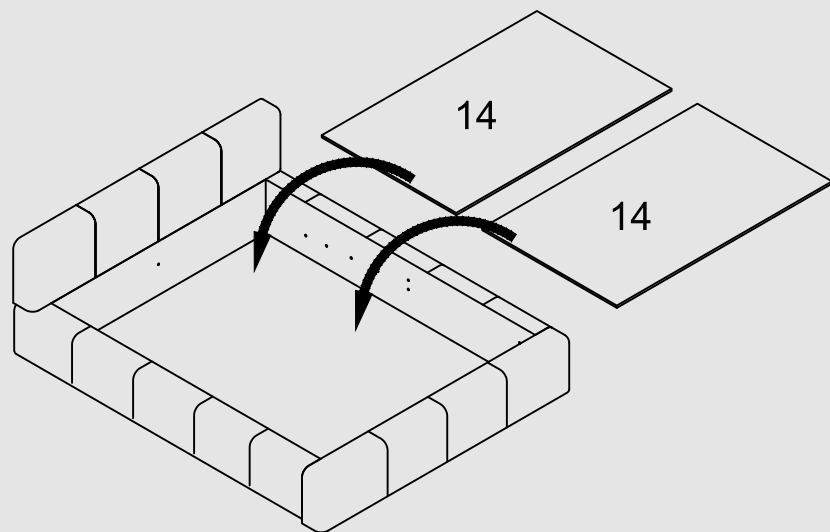


STEP 4

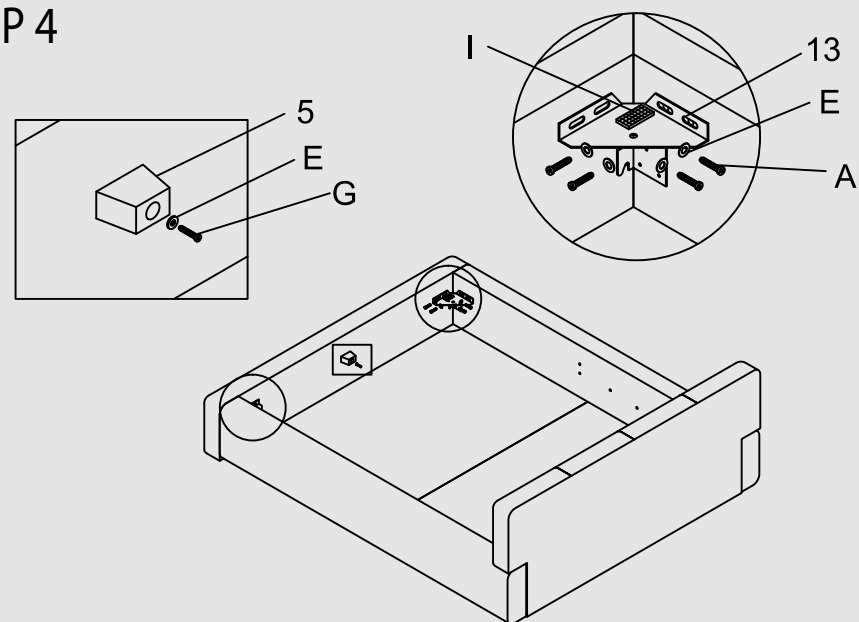


STEP 5

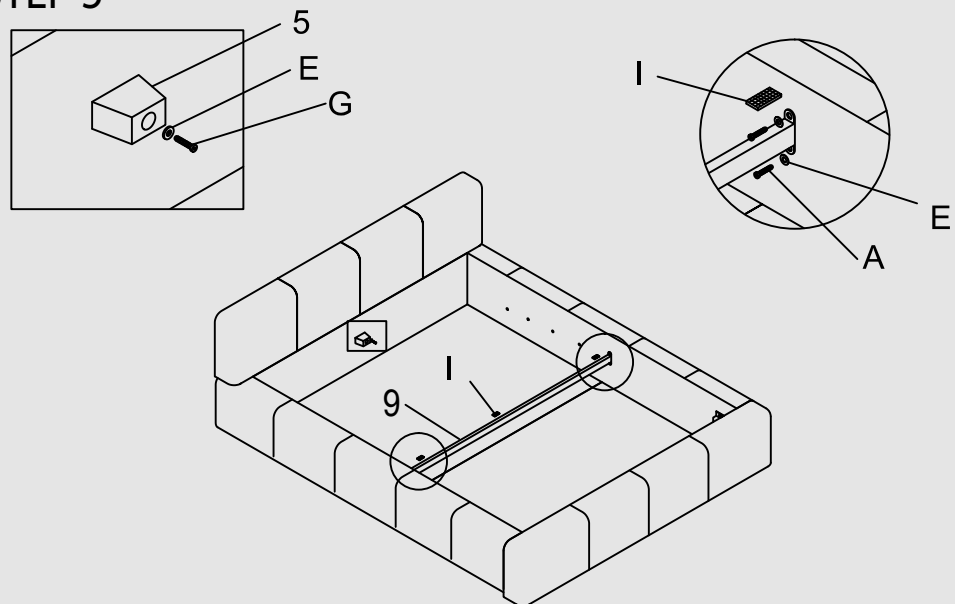

STEP 6

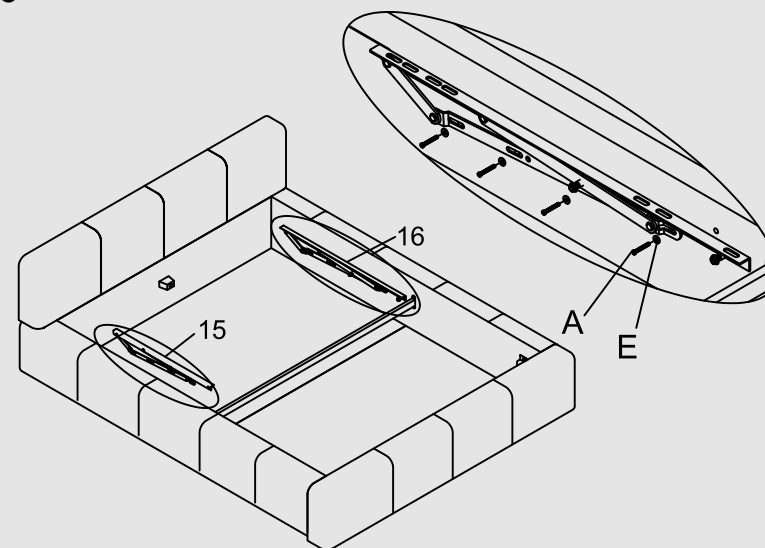


STEP 7

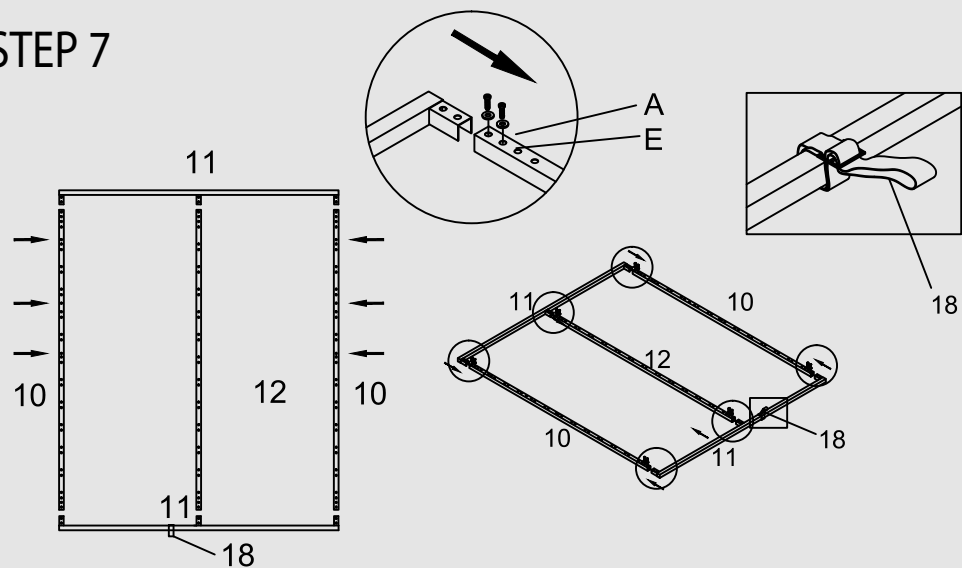


Pay attention to keep the order of parts 10 consistent, and keep the three holes in the same horizontal line

STEP 8

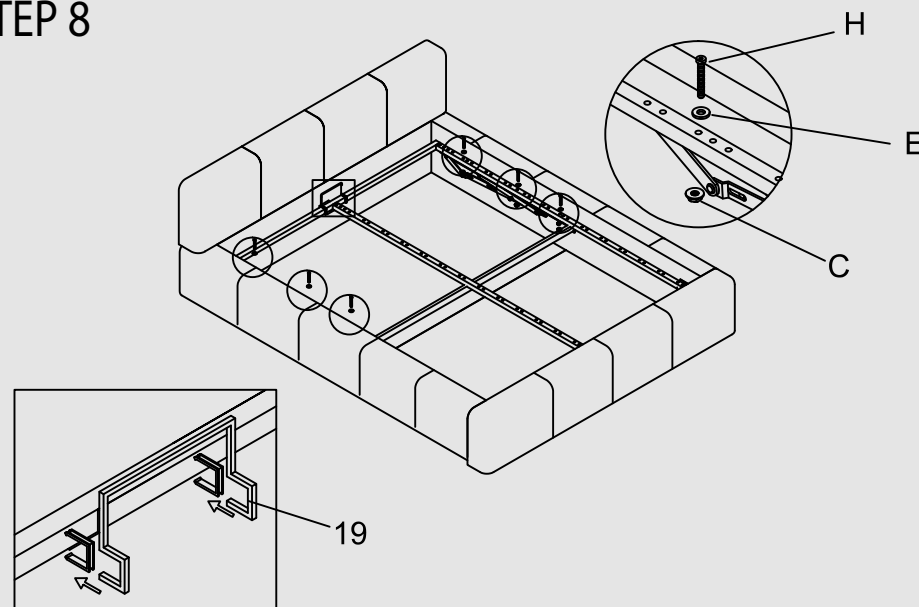

STEP 9

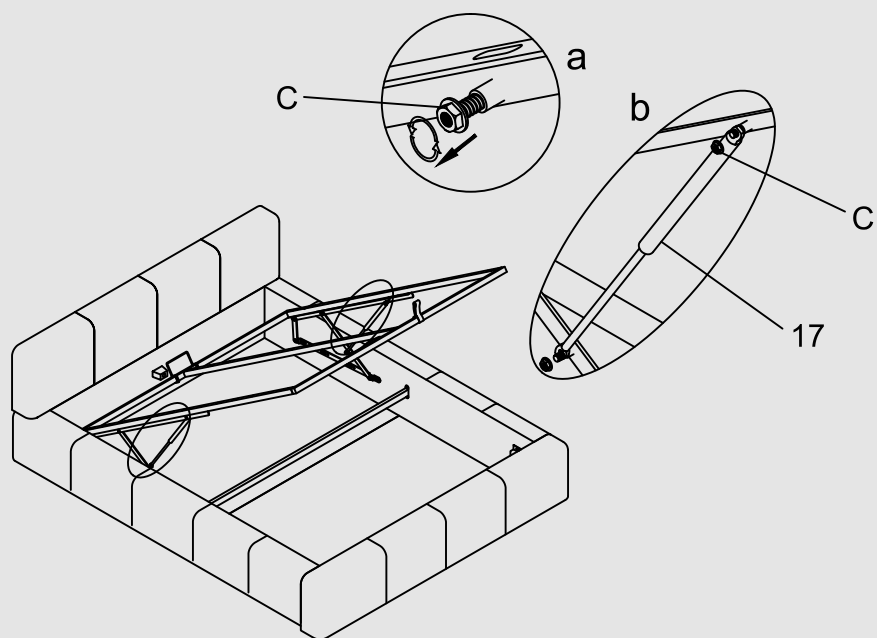

STEP 10

