



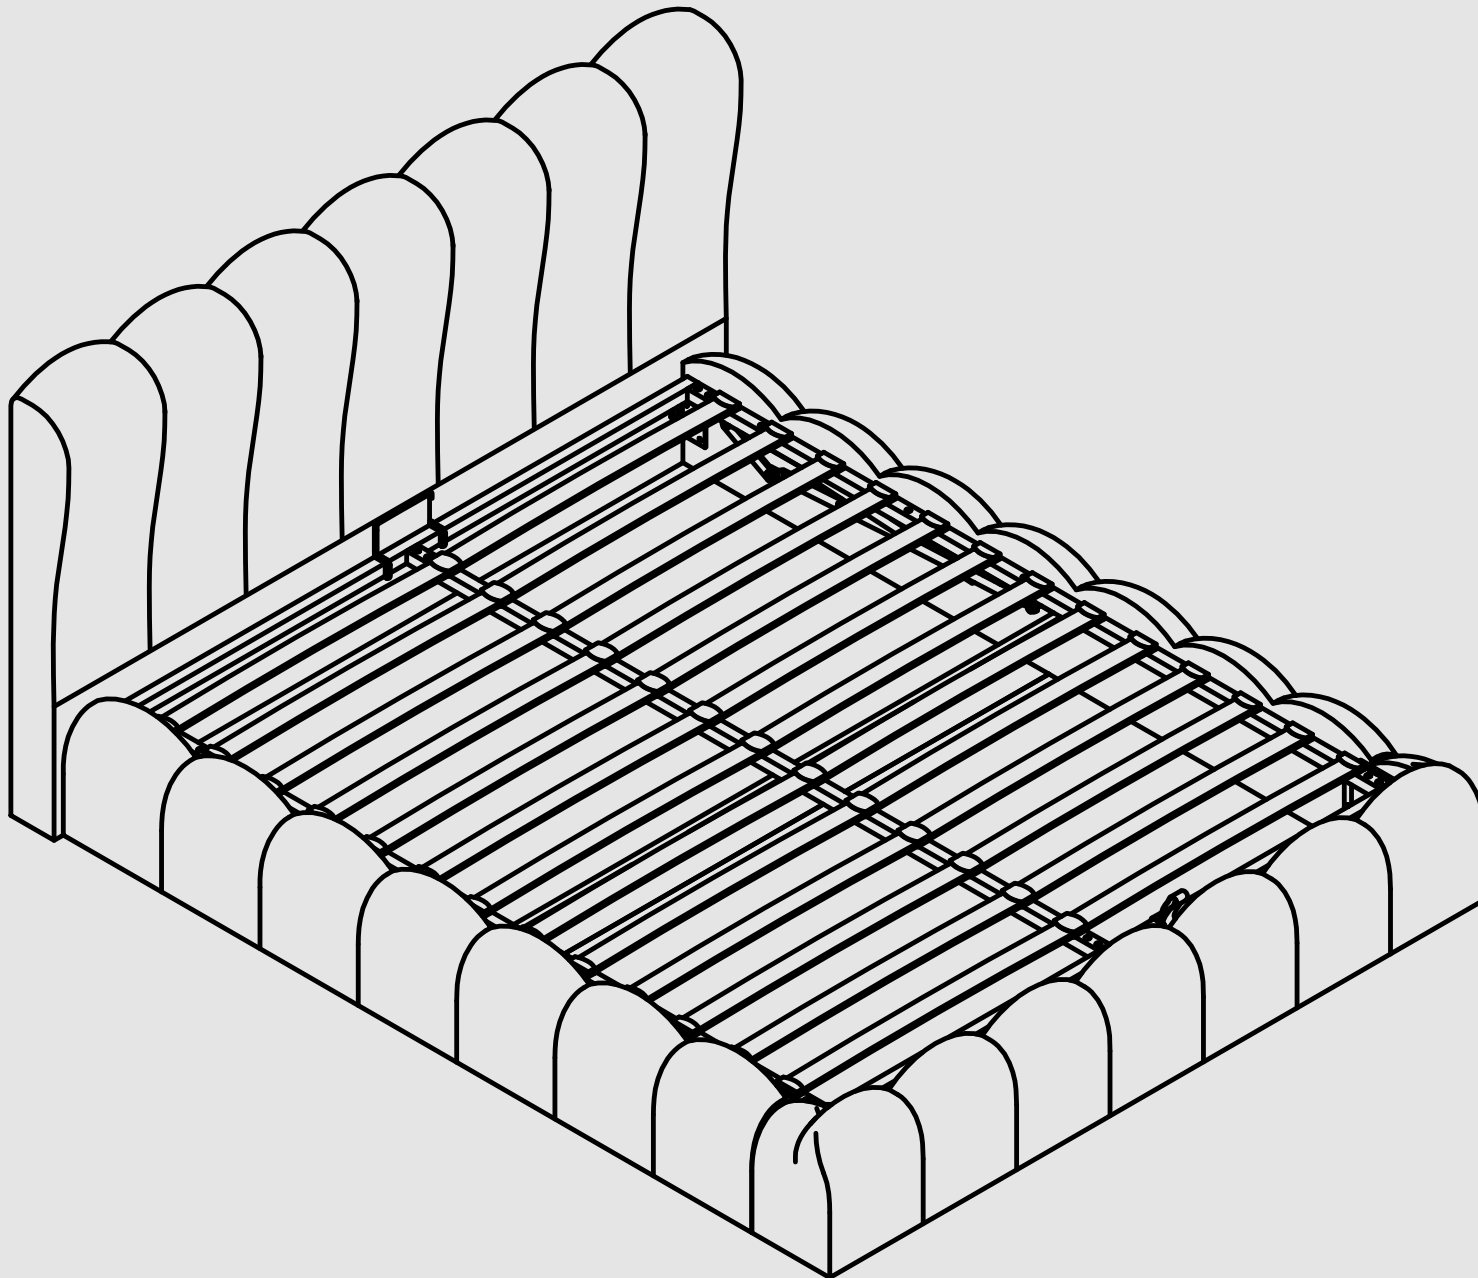

1

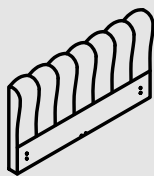


1 pc

7




13 pcs

13



2 pcs

19

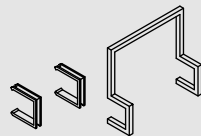

1 pc

A




M8*25 - 48 pcs

G



8*50 mm - 6 pcs

2

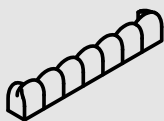


1 pc

8



26 pcs

14




2 pcs

20



1 pc

B




1 pc

H



8*40 mm - 6 pcs

3



1 pc

9



6 pcs

15



1 pc

21



2 pcs

C




M8 - 6 pcs

I




6*20 mm - 4 pcs

4

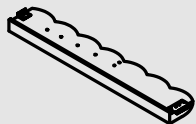

1 pc

10



2 pcs

16




1 pc

D



8 pcs

J




5 pcs

5




1 pc

11



2 pcs

17

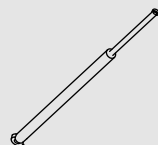


2 pcs

E




64 pcs

6

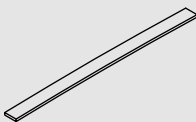

26 pcs

12

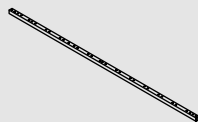


1 pc

18




1 pc

F




1 pc


STEP 1

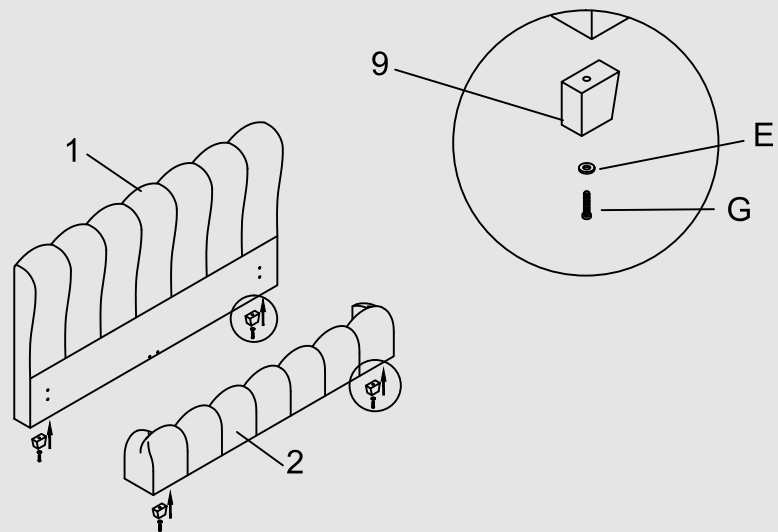


STEP 2

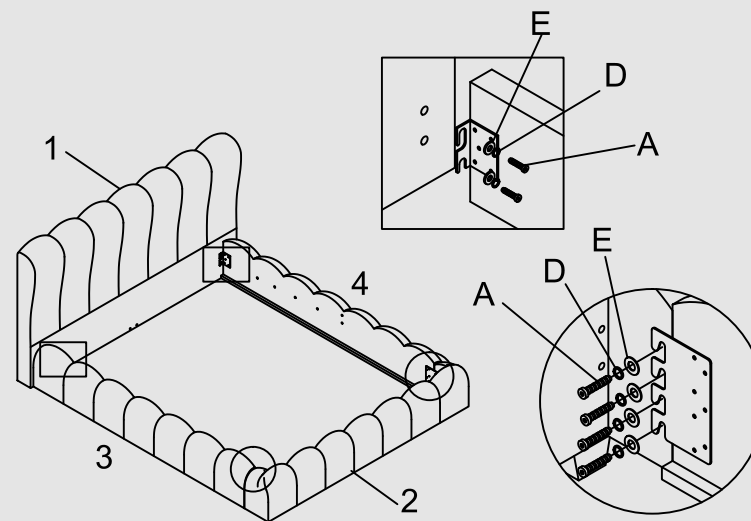


STEP 3

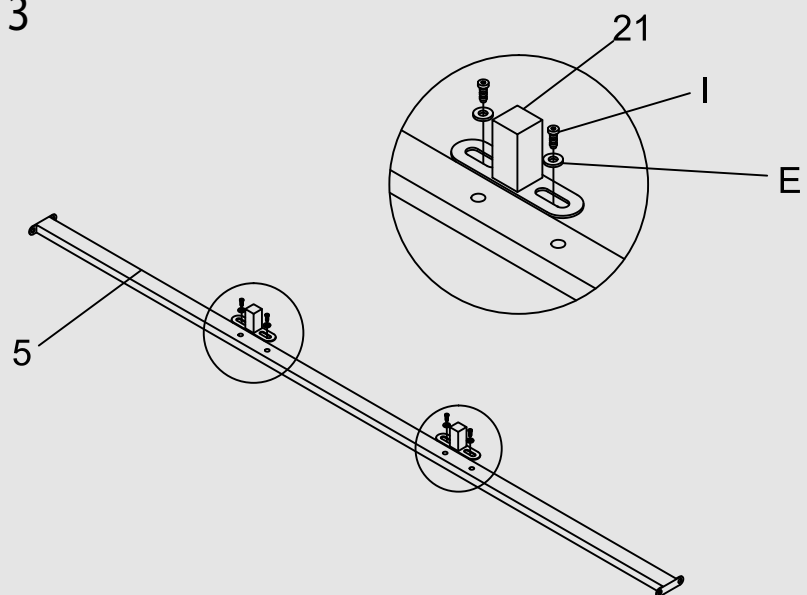


STEP 4

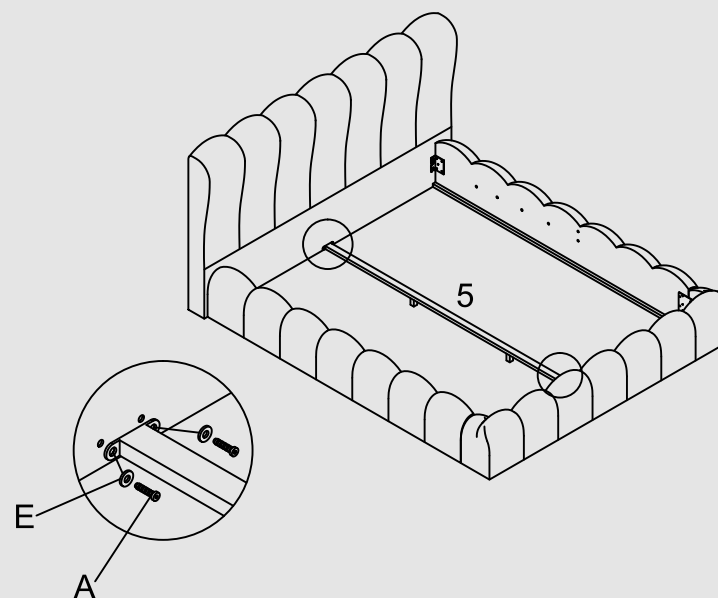


STEP 5

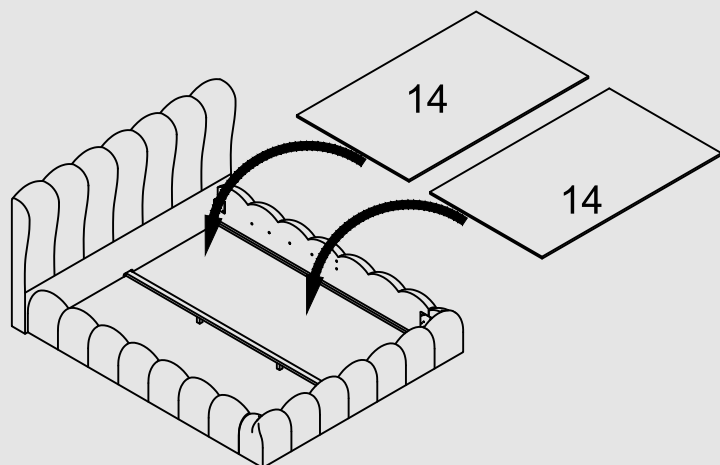


STEP 6

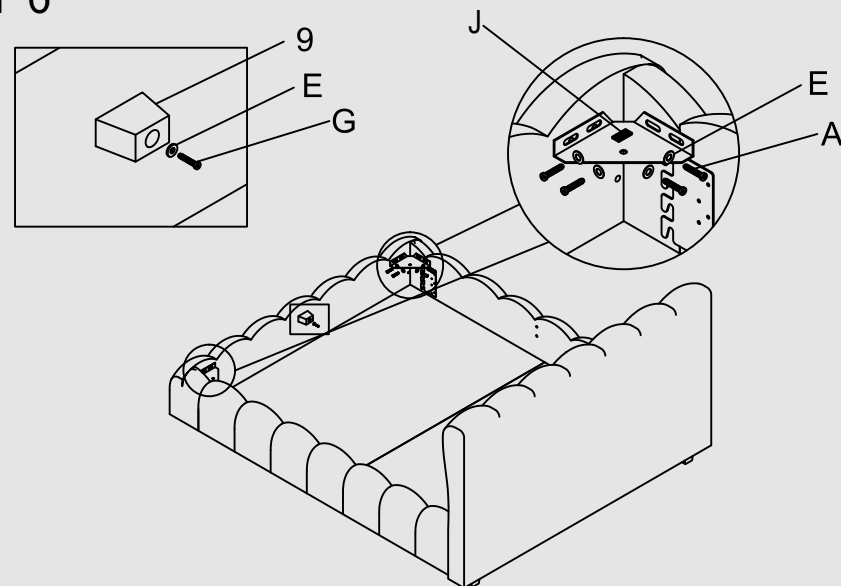


STEP 7

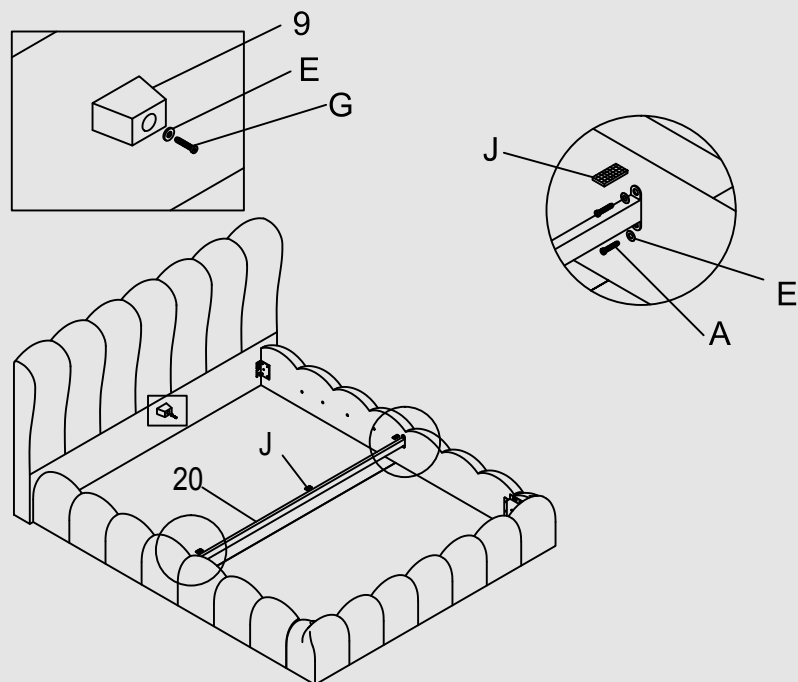

STEP 8

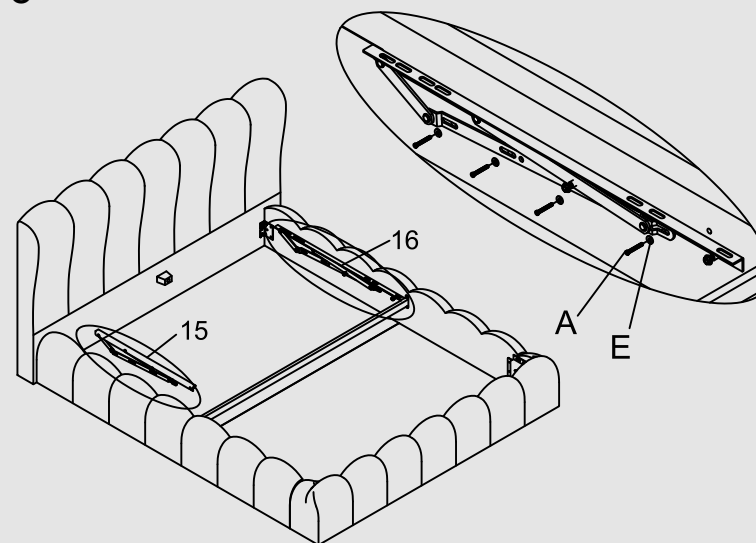


STEP 9

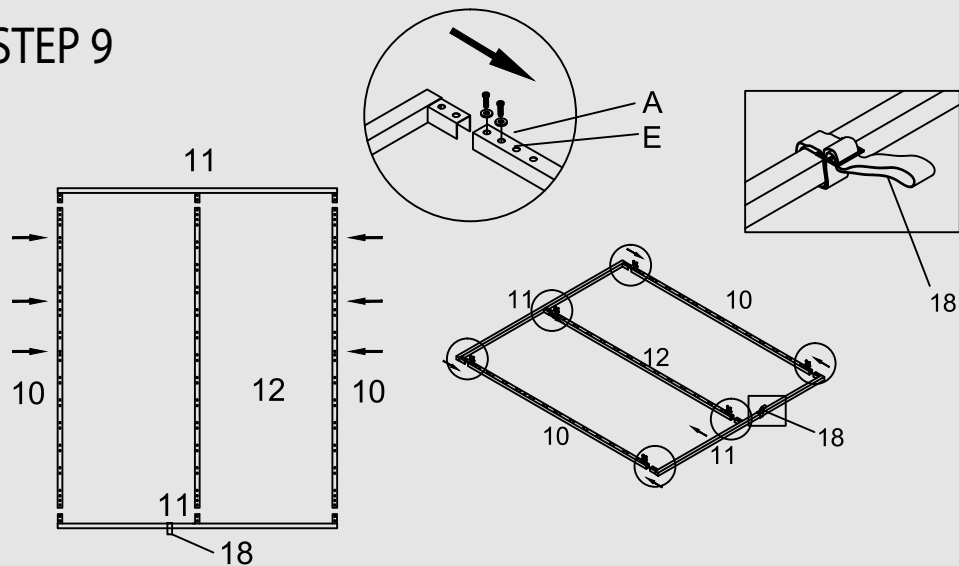


Pay attention to keep the order of parts 10 consistent, and keep the three holes in the same horizontal line

STEP 10

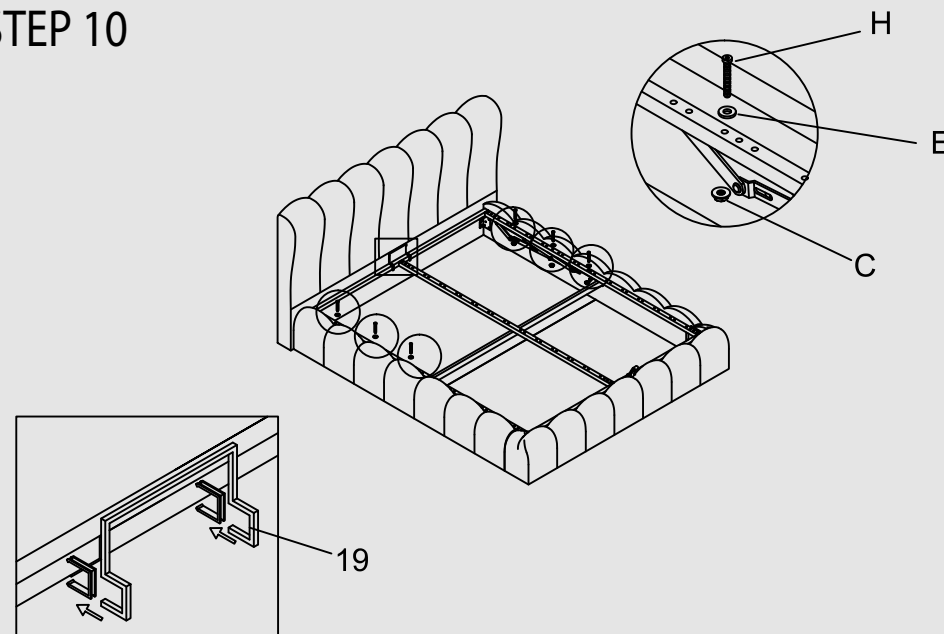

STEP 11

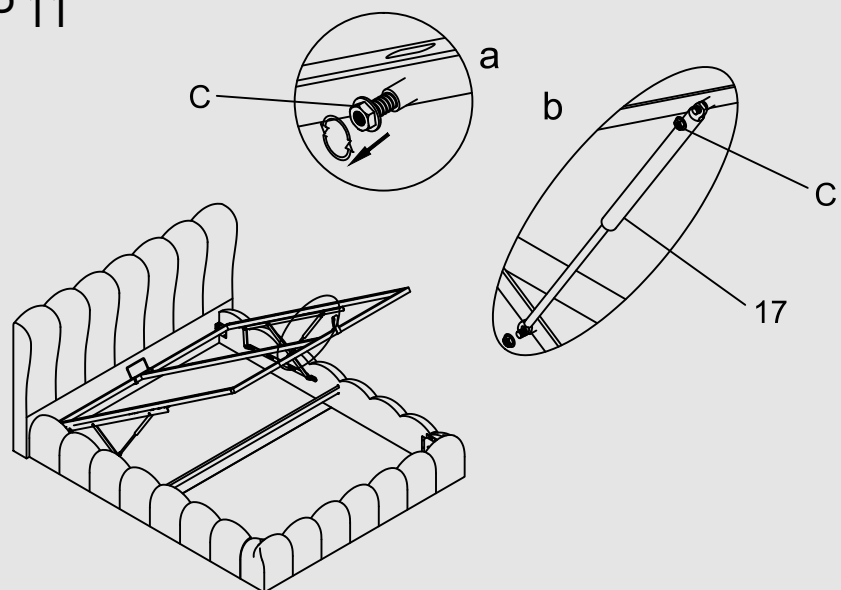

STEP 12

