


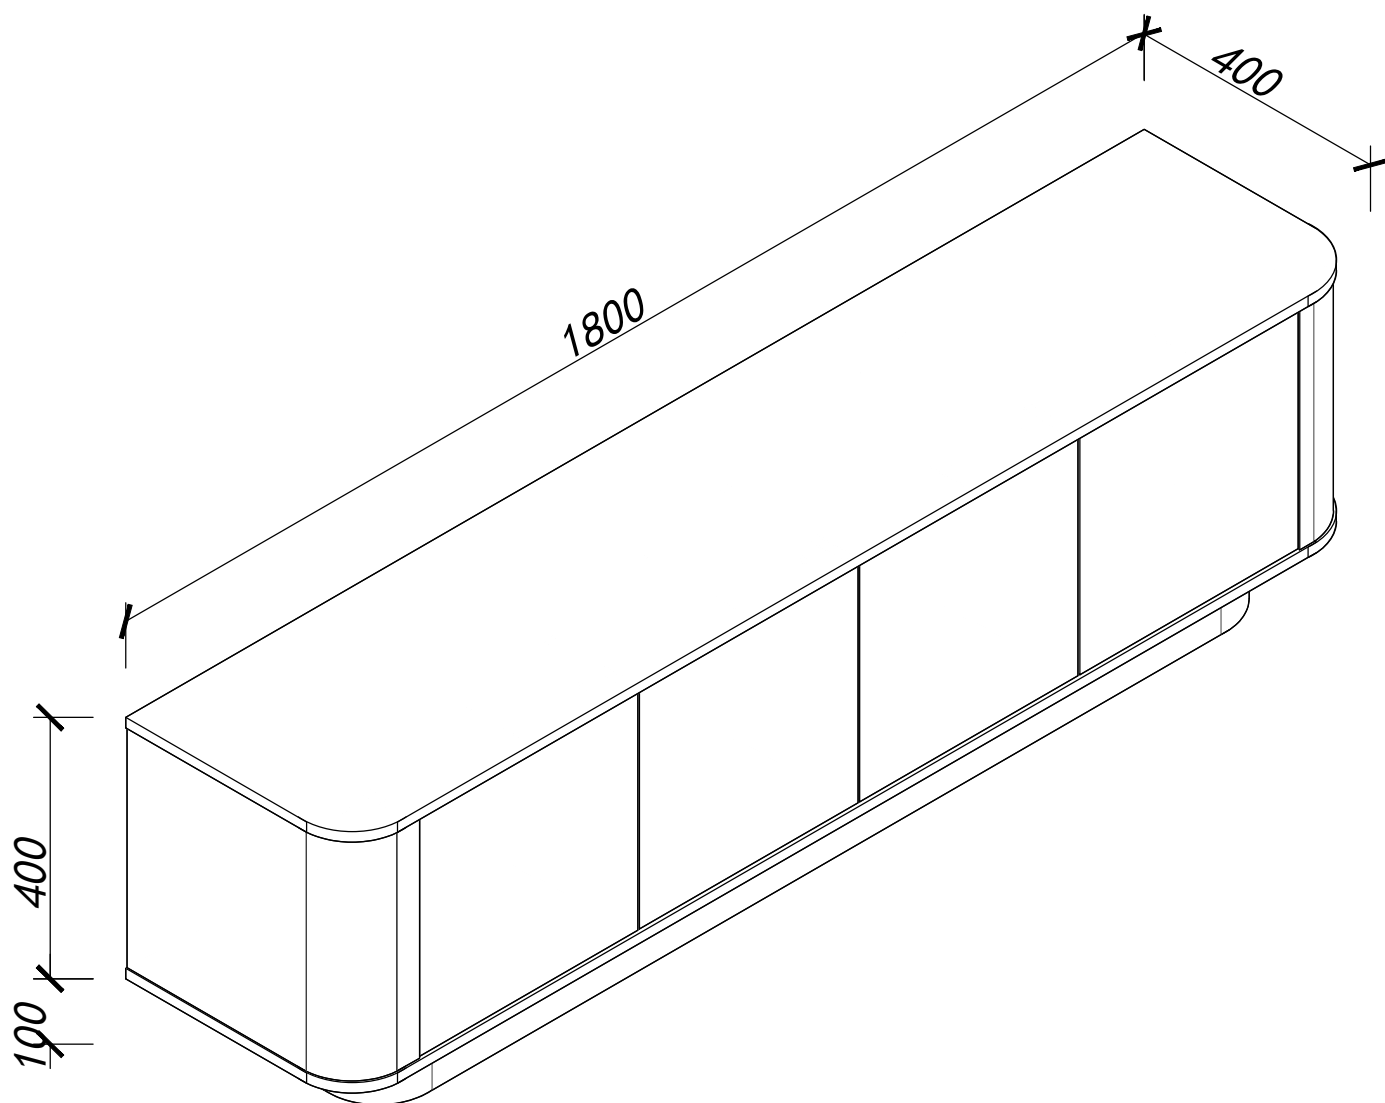


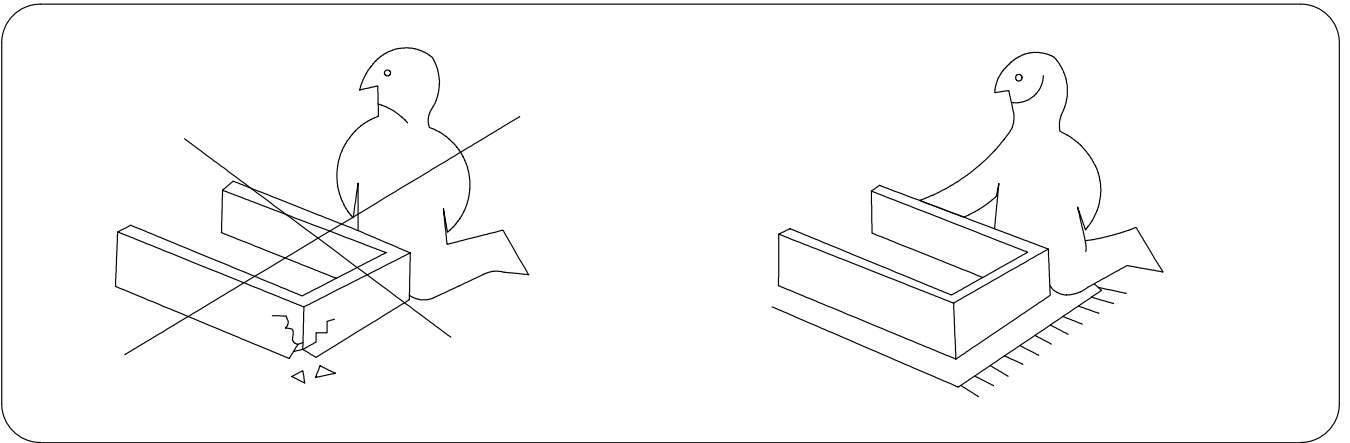


Assembly Instruction

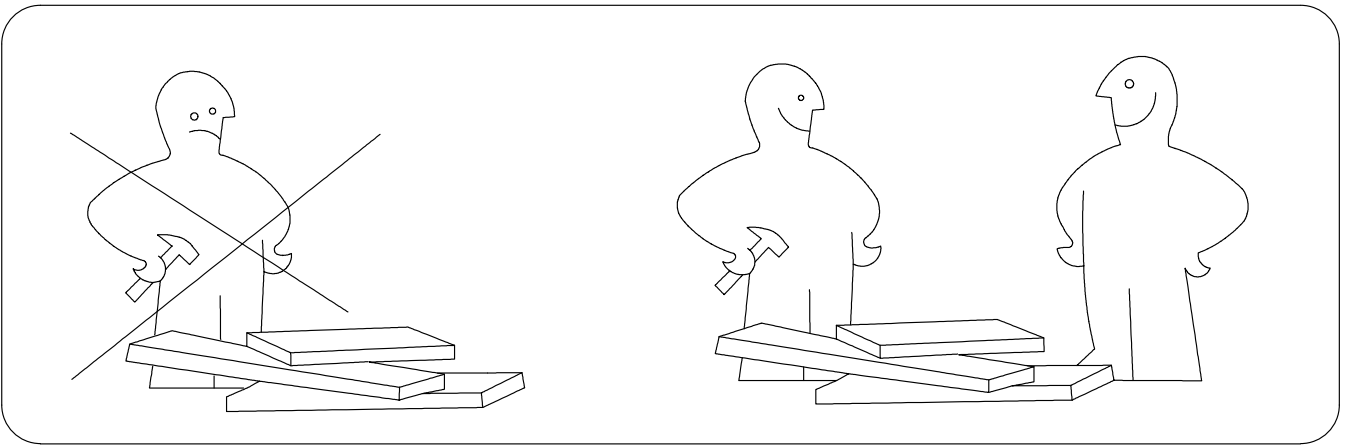

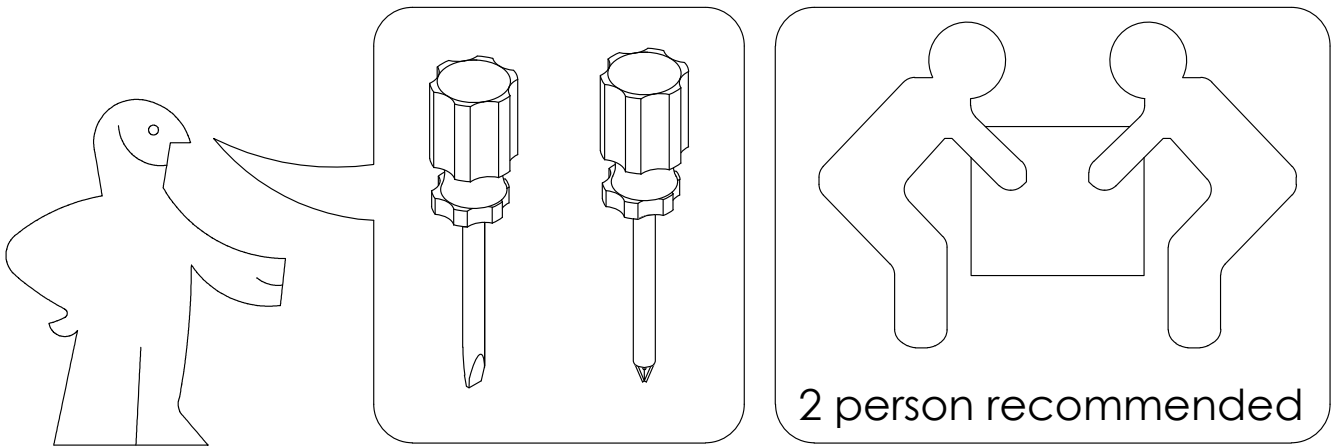


Panel No	Panel Sizes	Quantity
1	1800*400*16	1
2	1800*400*111	1
3	396*120*368	1
4	396*120*368	1
5	368*350*16	2
6	368*379*16	1

Panel No	Panel Sizes	Quantity
7	380*350*16	2
8	369*350*16	2
9	781*378*5	2
10A/B	362*387*16	3
11	362*387*16	1

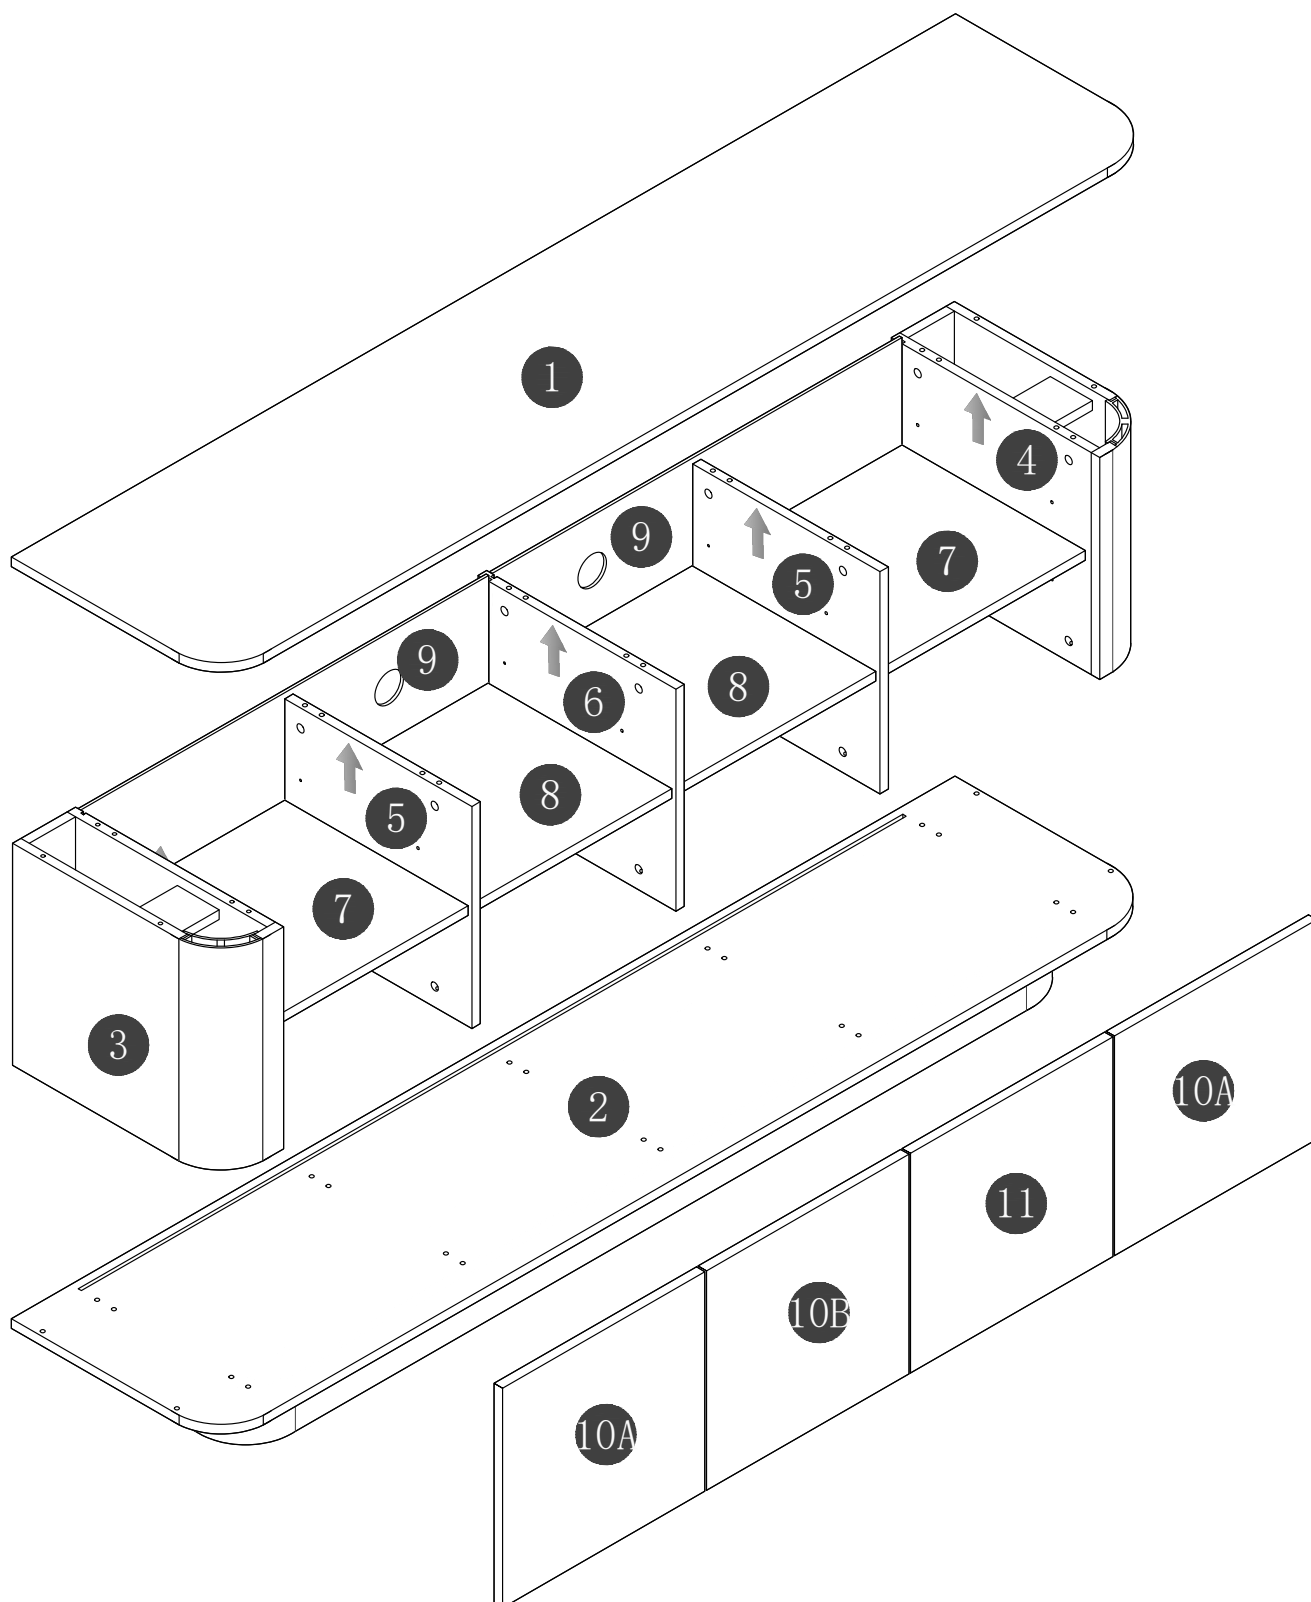


Fittings




M6*40

A=20



$\Phi 8*30$

B=28

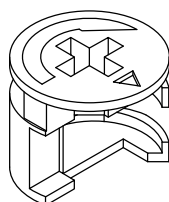


$\Phi 15*12$

C=20




$\Phi 21$


D=20

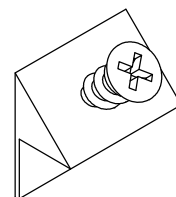


E=12

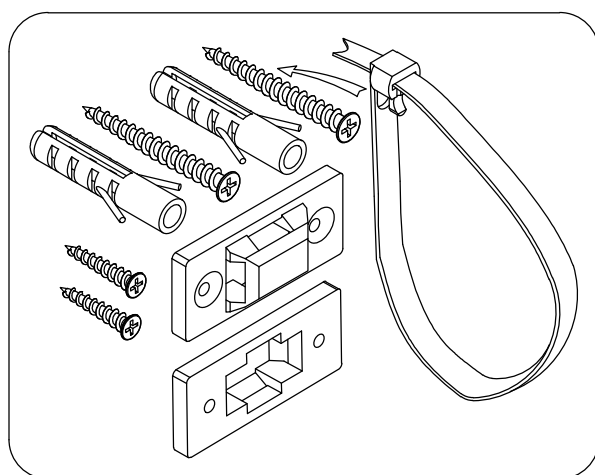


F=1

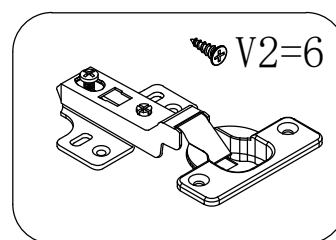


I2=4

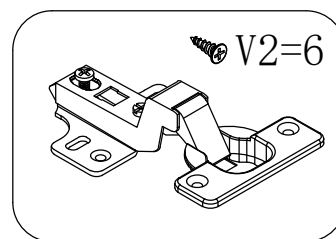

I3=4

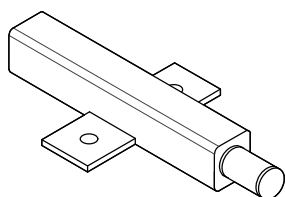

K=4

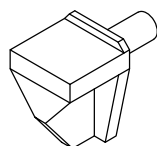


L=16




M3. 5*12

V1=8


STEP 1

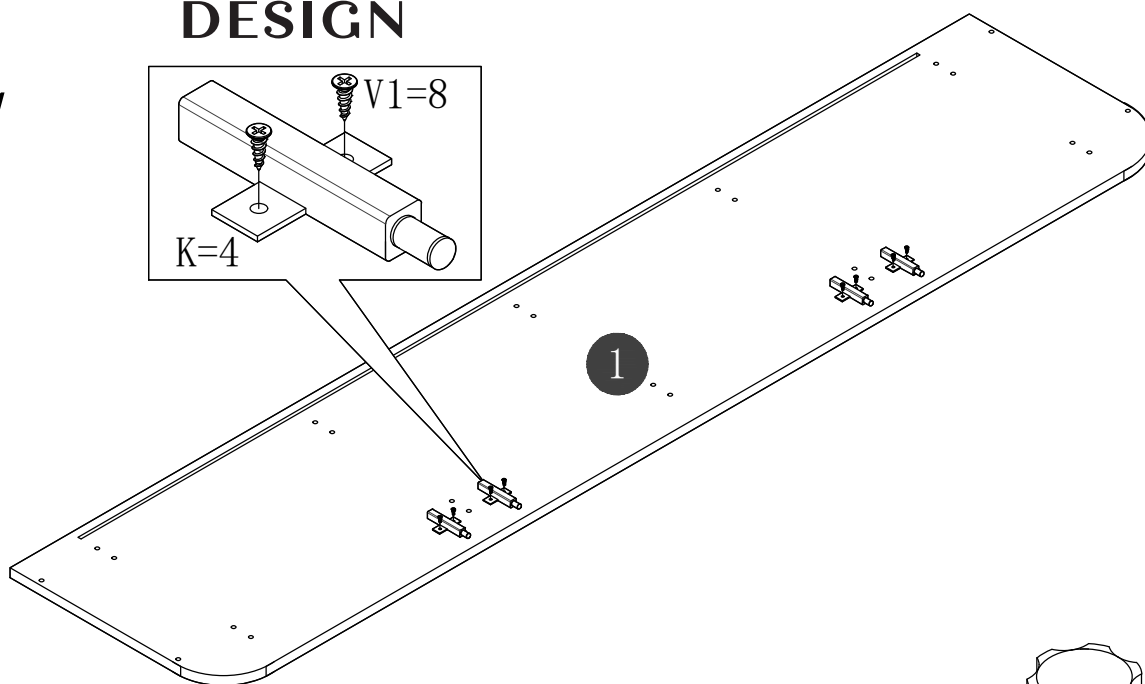


STEP 2

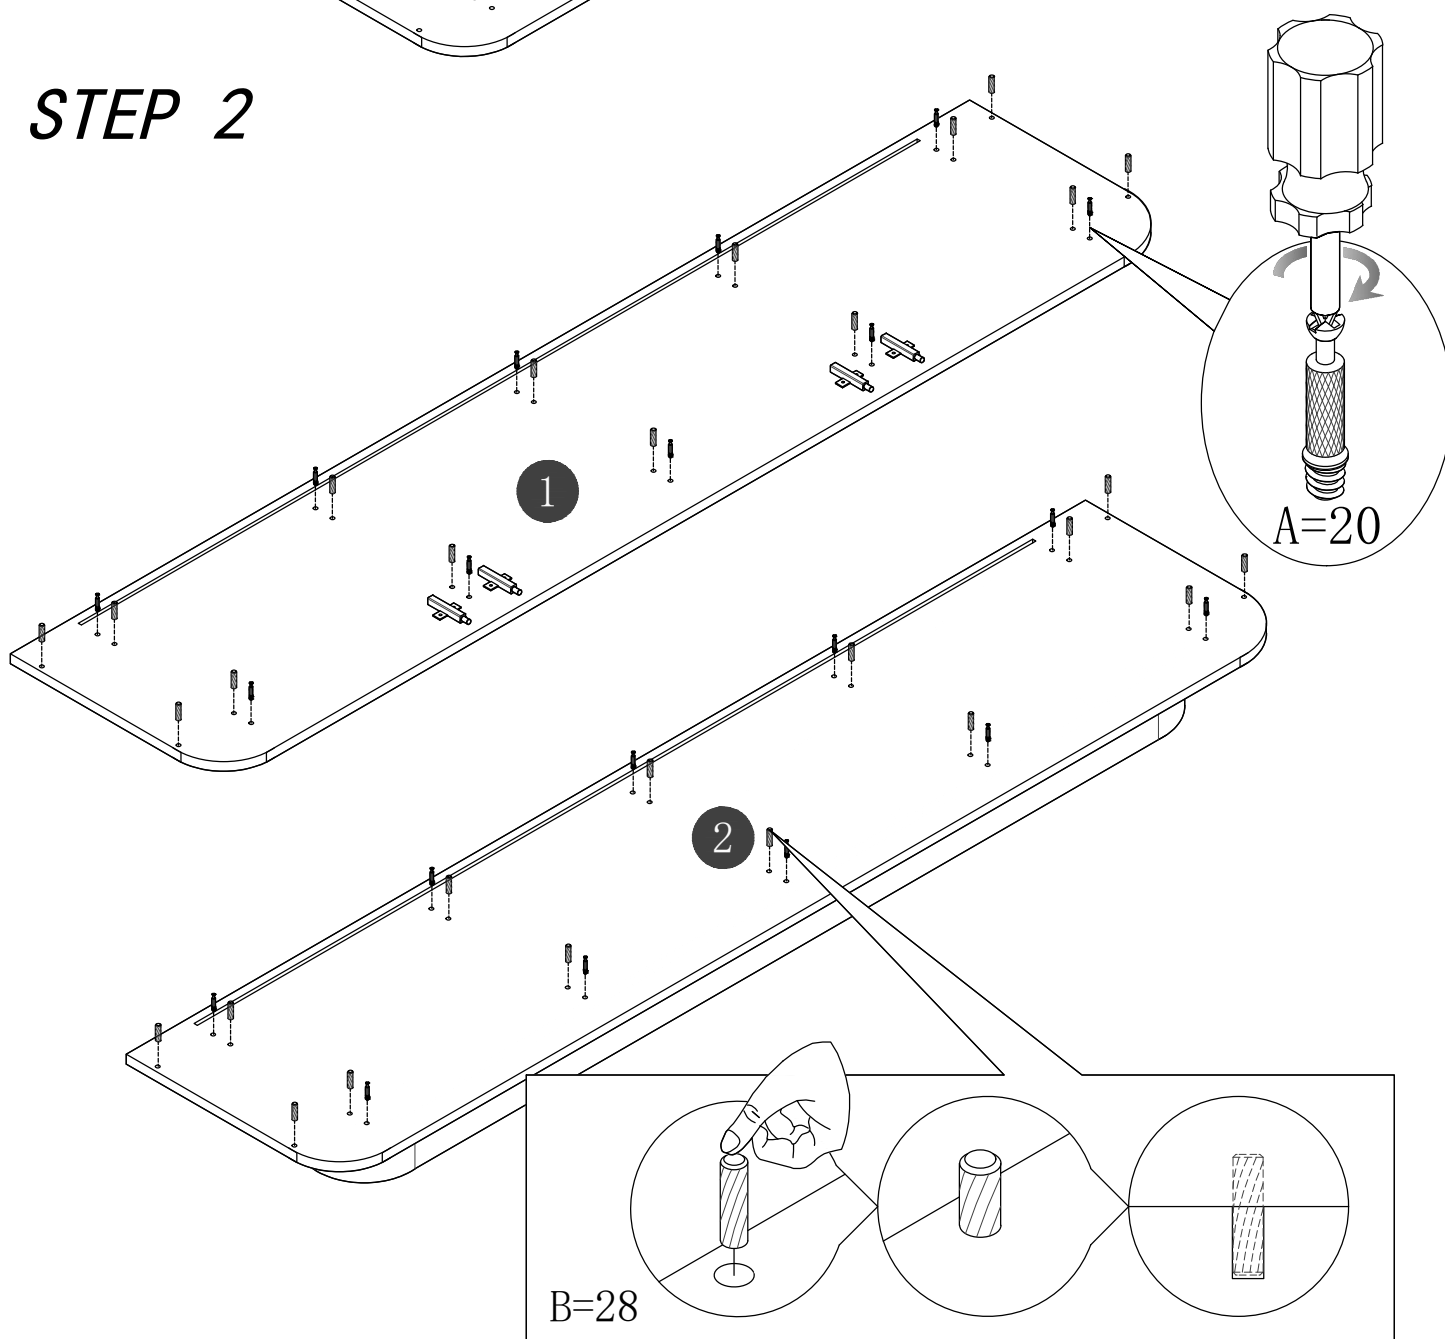


STEP 3

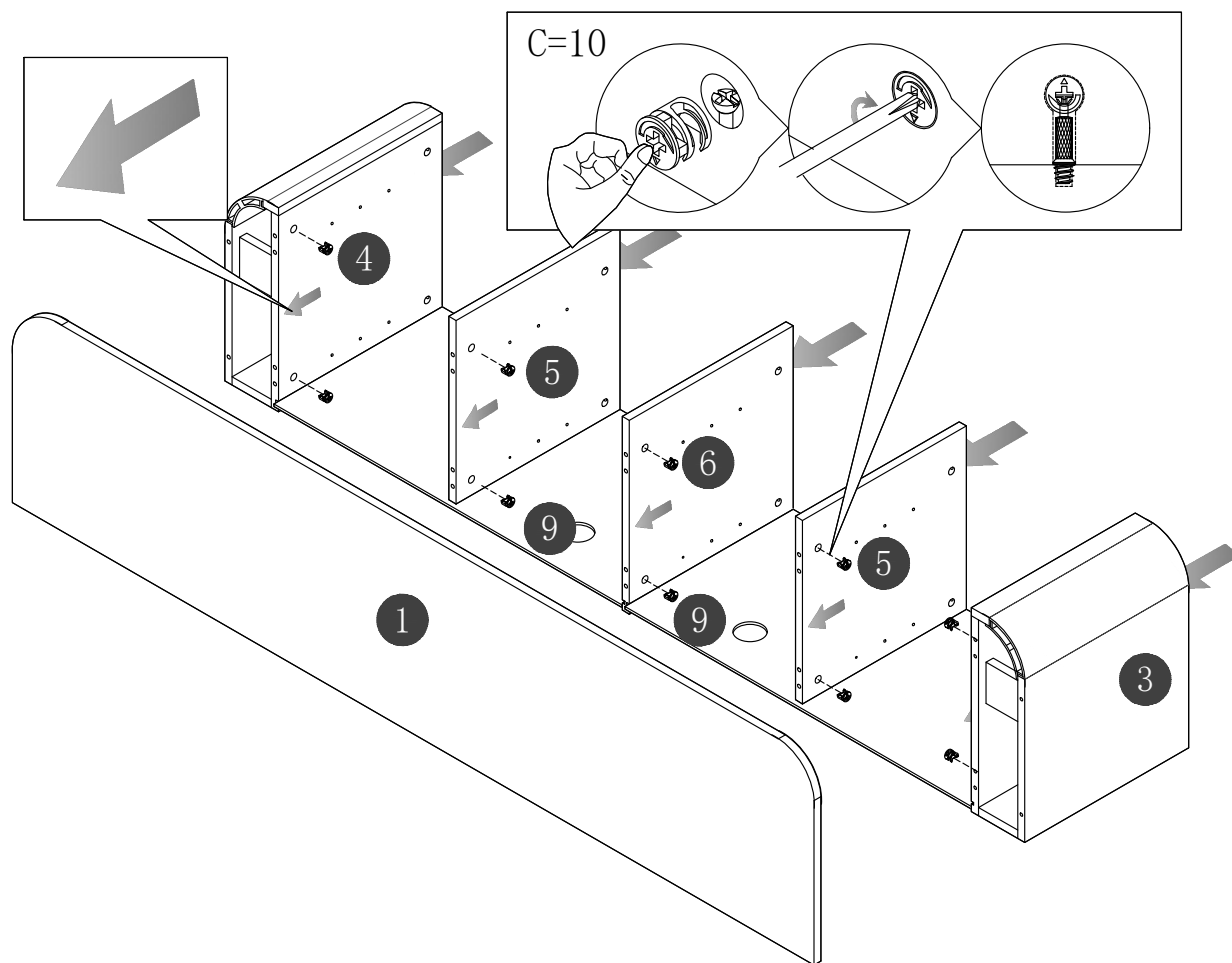


STEP 4

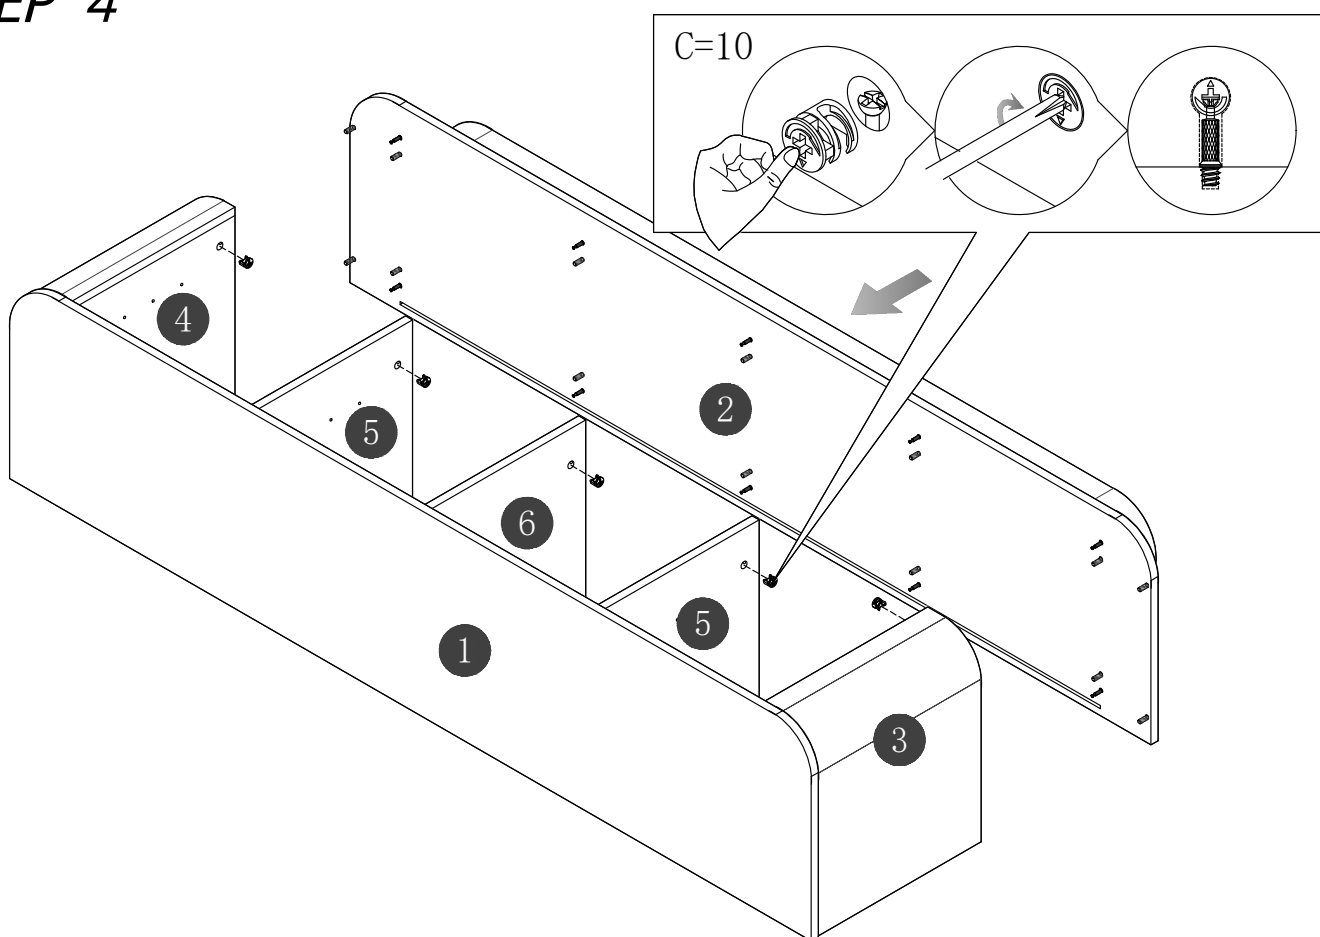


STEP 5

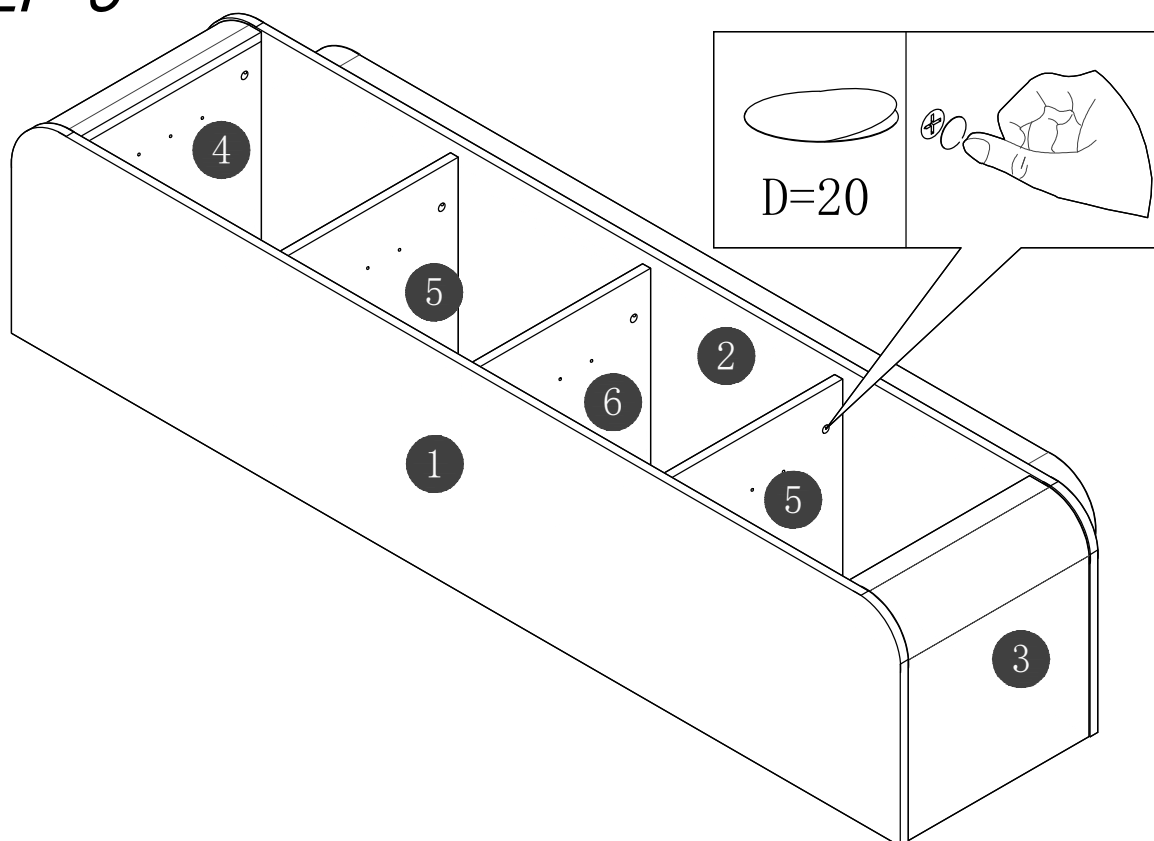


STEP 6

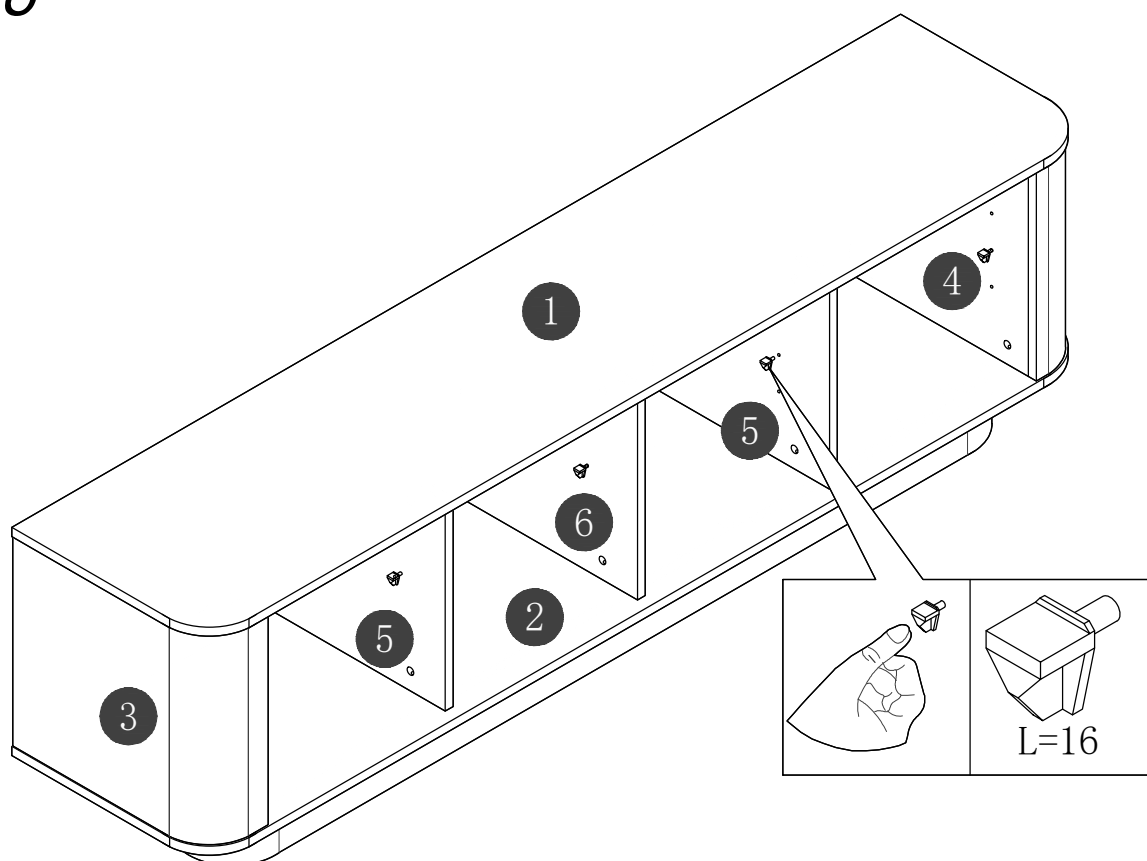


STEP 7

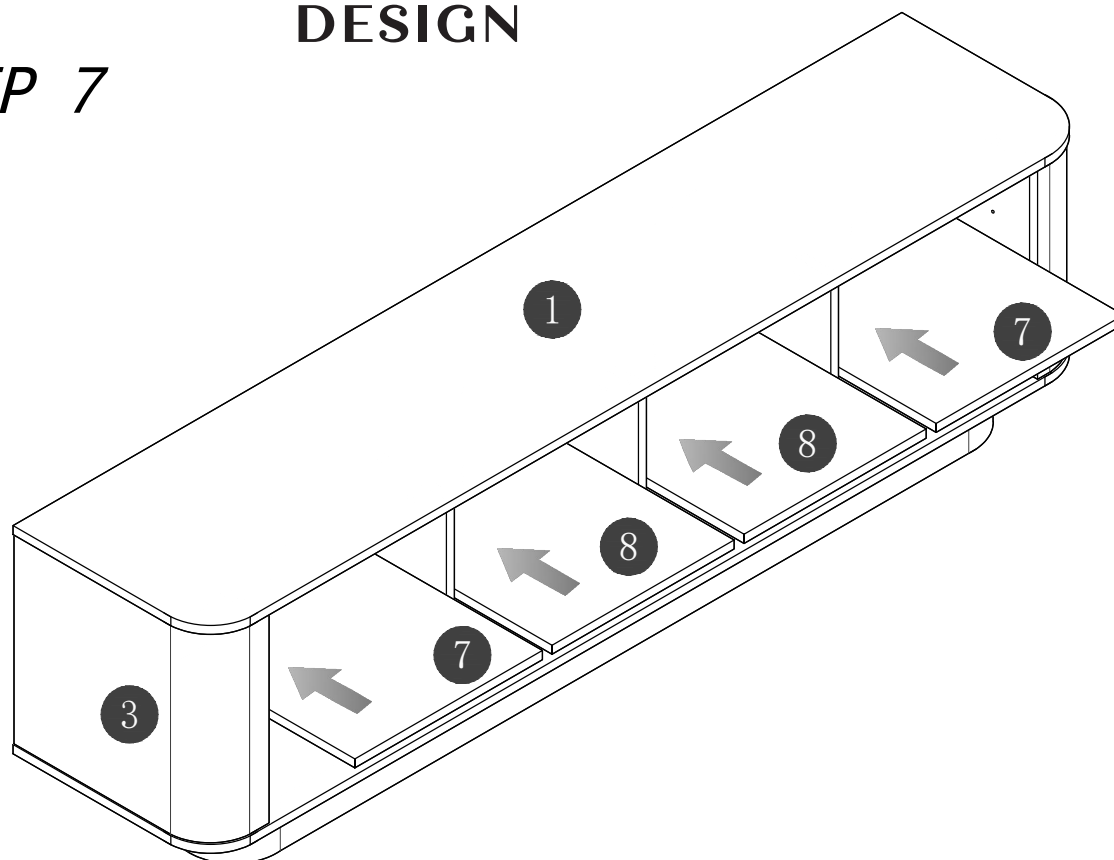





STEP 8

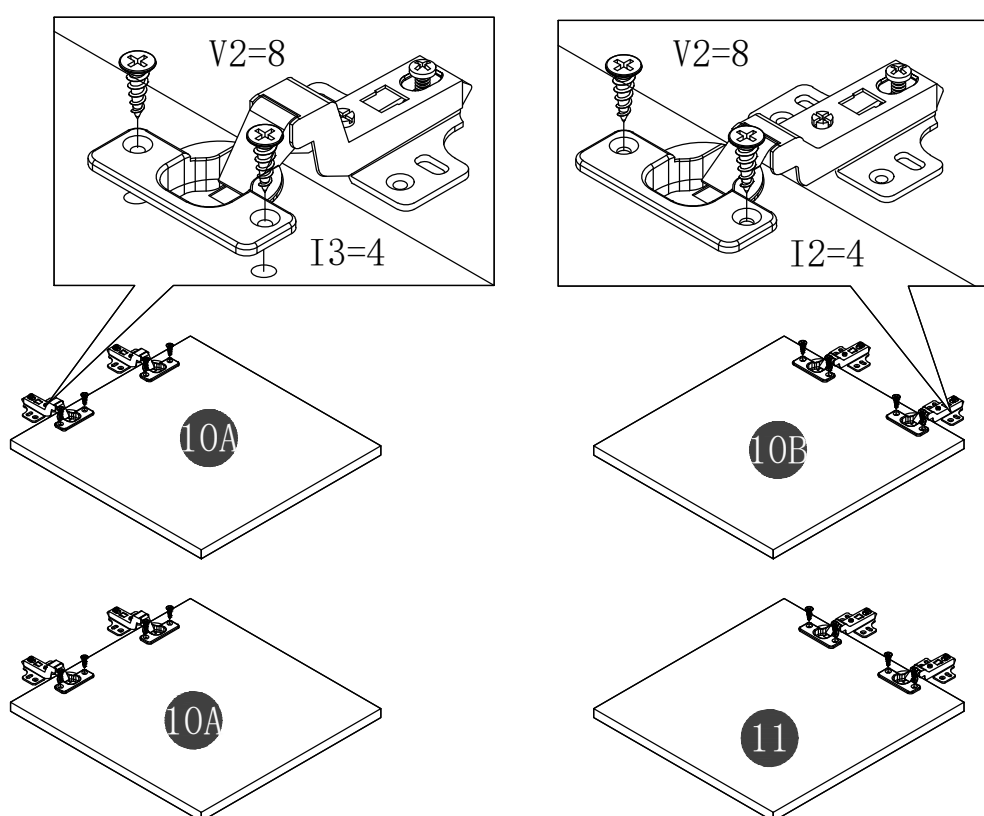


STEP 9

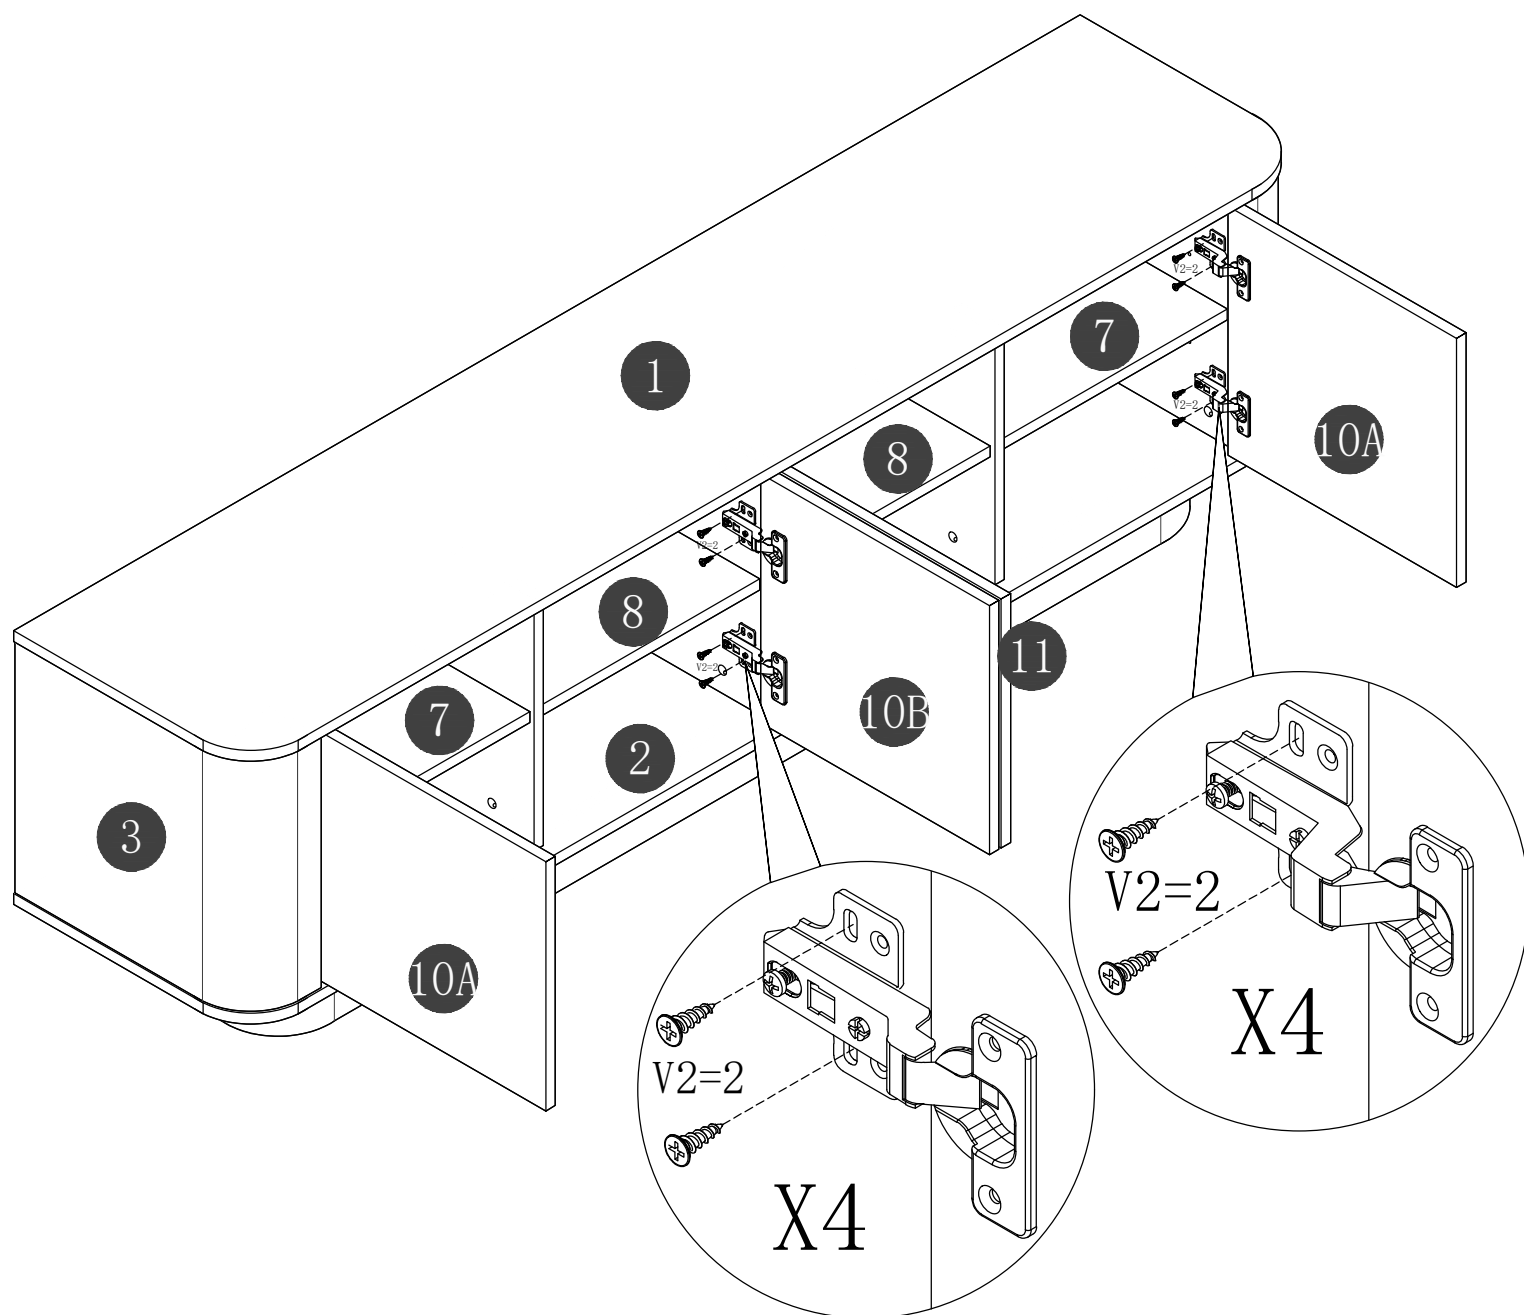


STEP 10

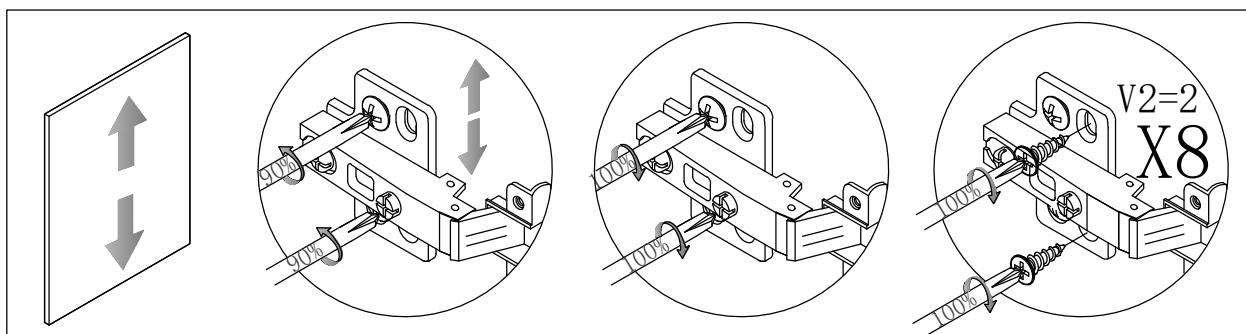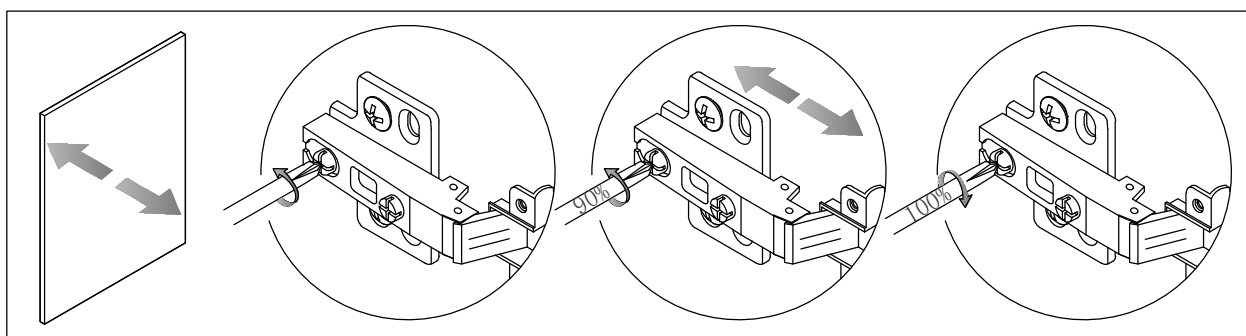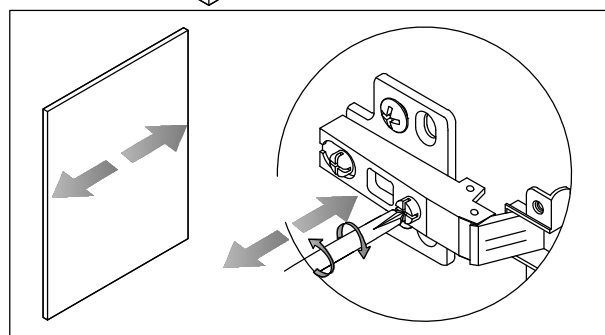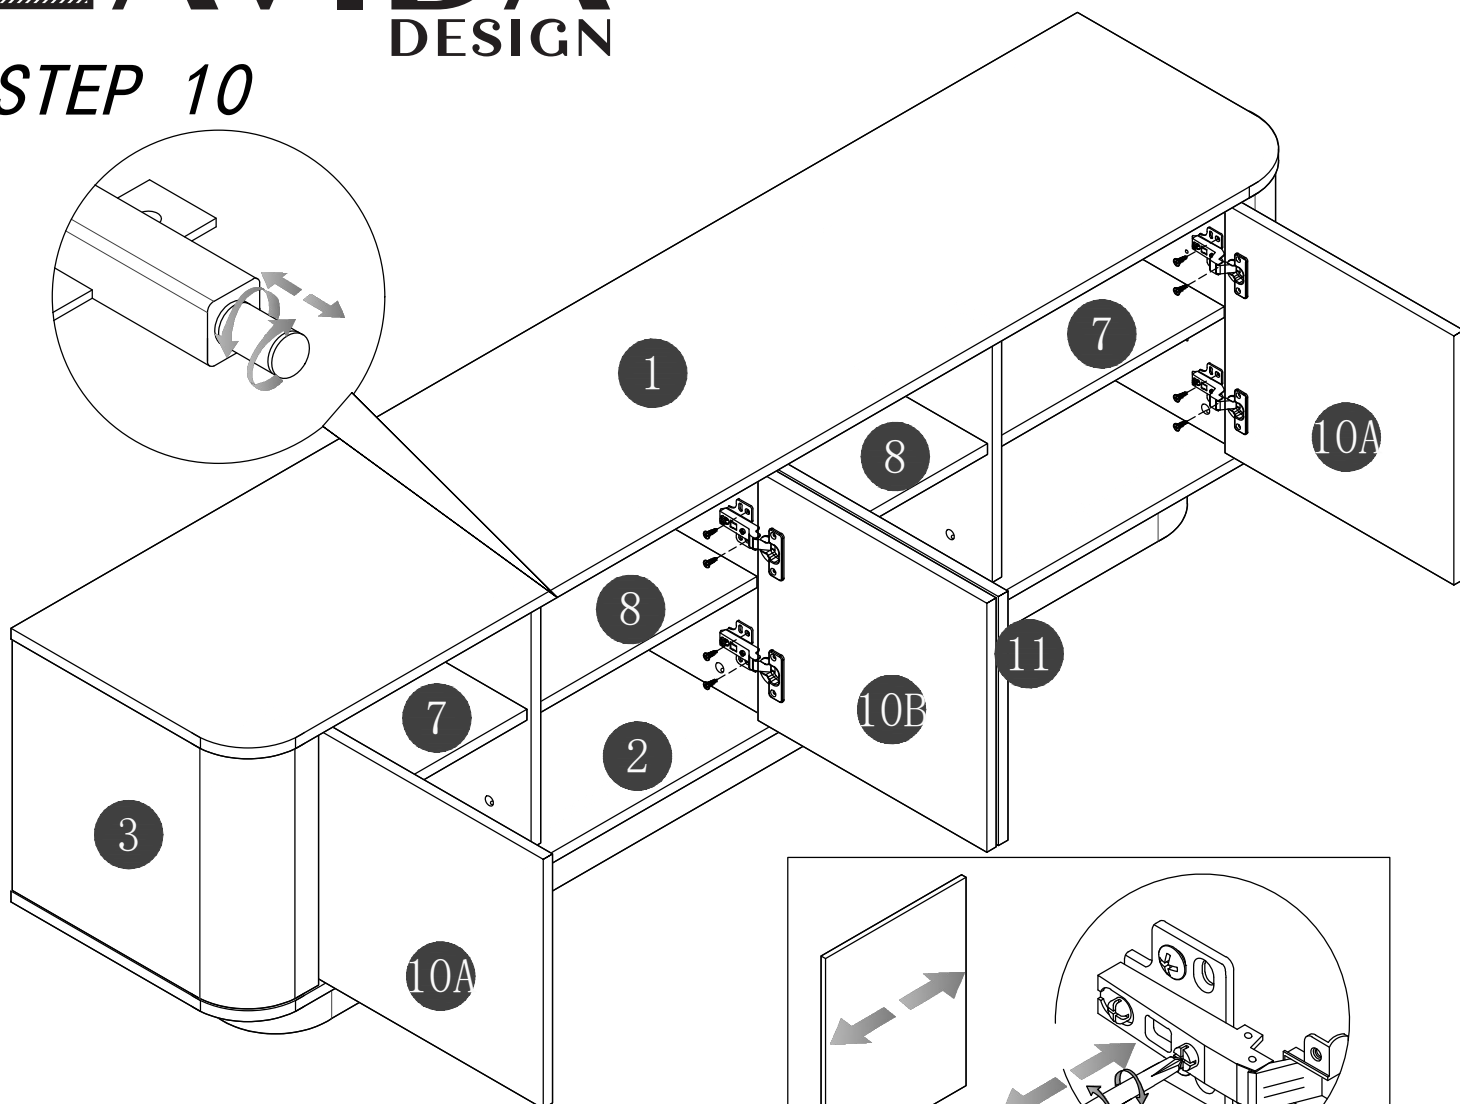


STEP 11

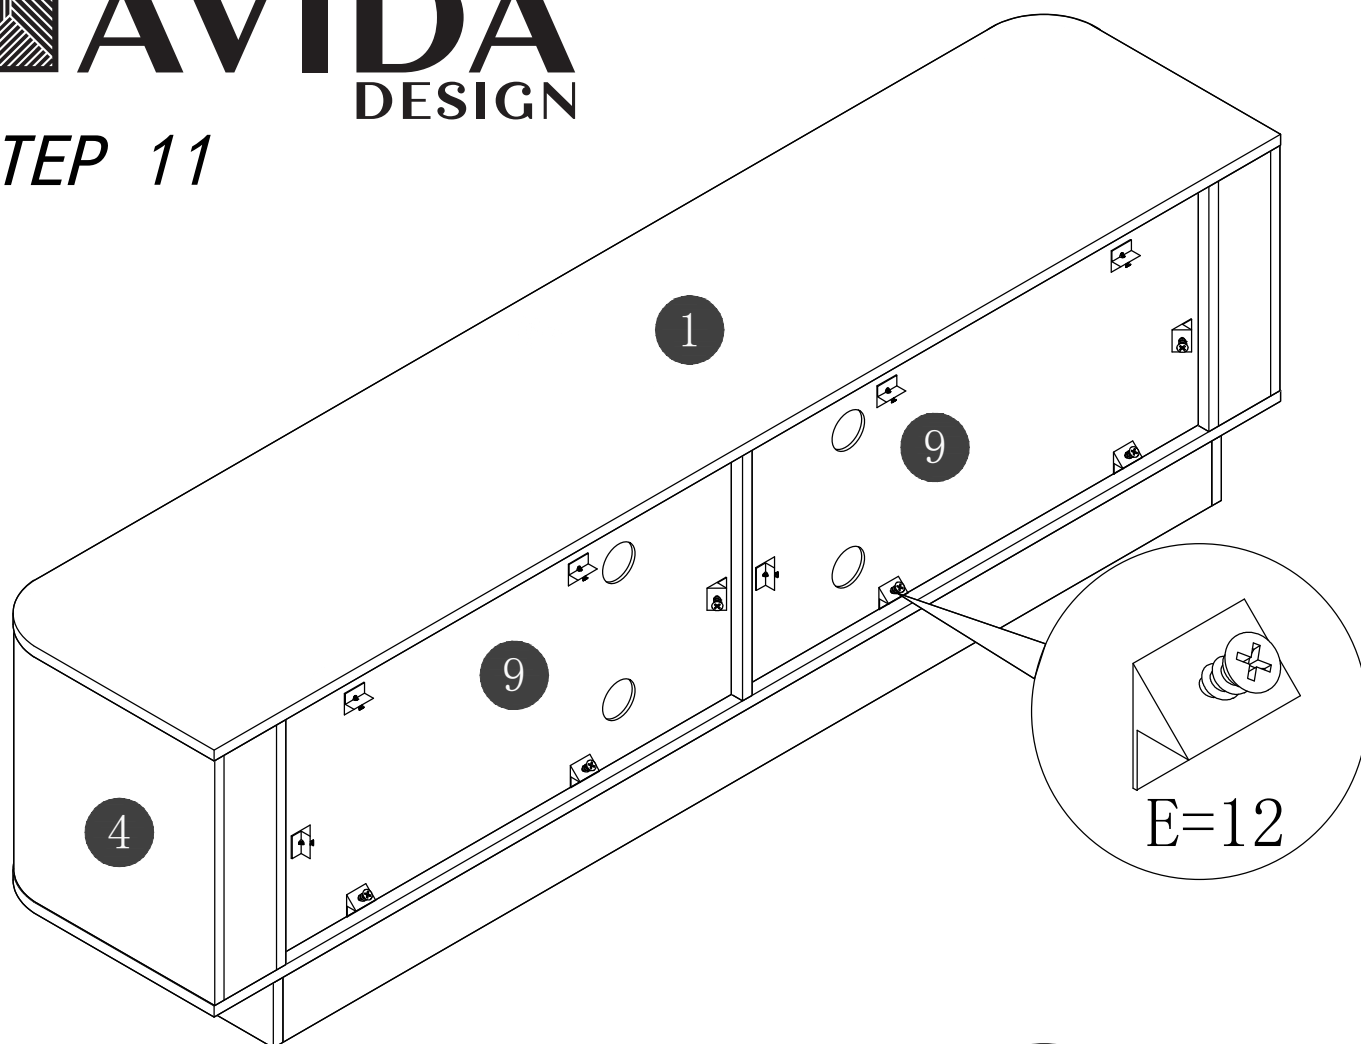

STEP 12

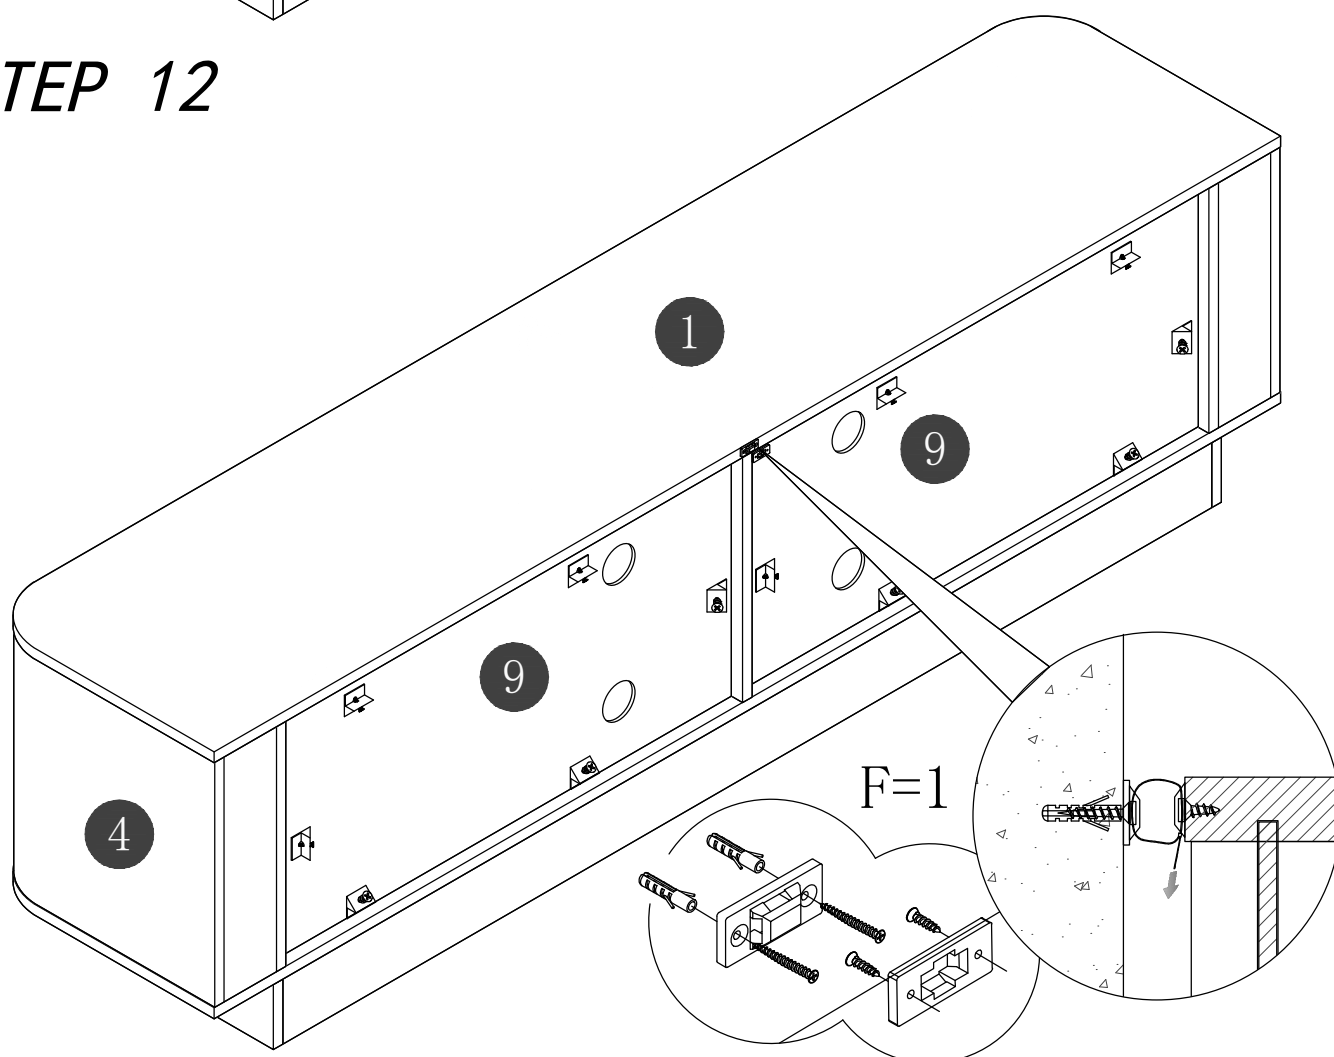

STEP 13

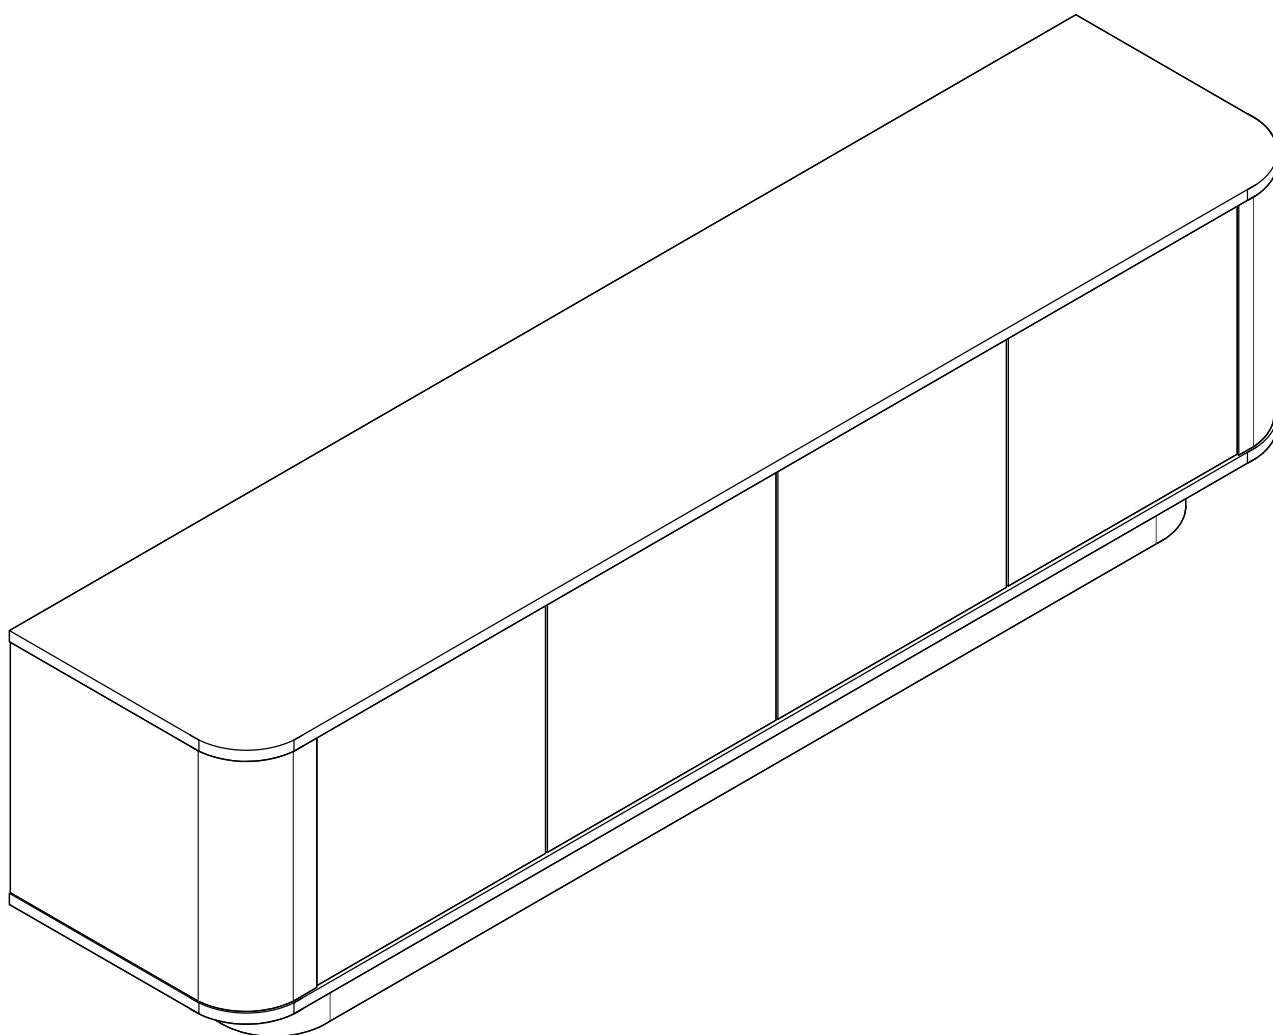

Finish